

THULE[®]
SWEDEN

S Monteringsanvisning
GB Fitting instructions
D Montageanleitung
F Instructions de montage
NL Montage-instructies
FIN Asennusohje
E Instrucciones de montaje
I Istruzioni per il montaggio
CZ Návod na montáž
PL Instrukcja montażu
HU Szerelési utasítások
RU Инструкции по установке
EST Paigalduseeskirjad
SLO Navodila za pritrdjevanje

한국어 장착 지침

日本語 取扱(取付)説明書

中文 安装说明

MAZDA 626, 4-dr Sedan, 98-02

MAZDA 626, 5-dr Hatchback, 98-02

MAZDA Capella, 4-dr Sedan, 98-02





FORD Telstar, 4-dr Sedan, 98-02

**RAPID
SYSTEM**

Kit 1053



    Follow me...

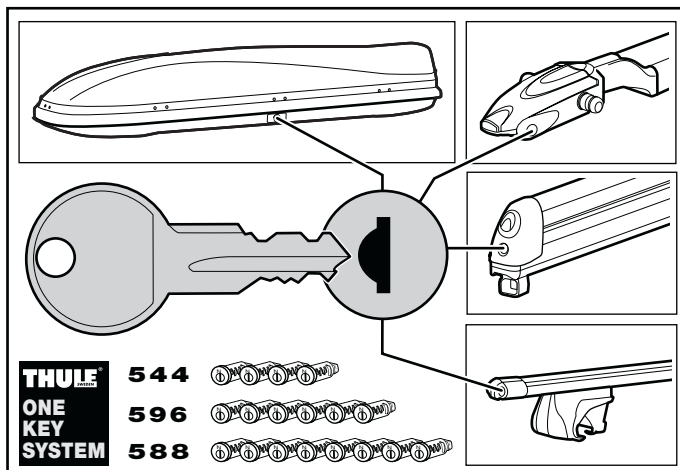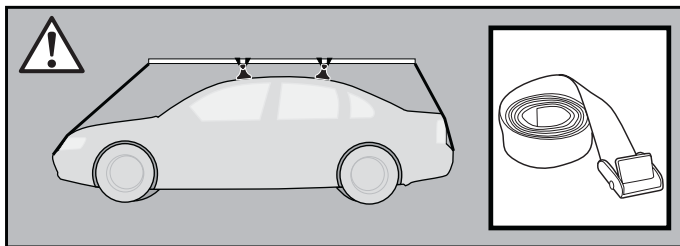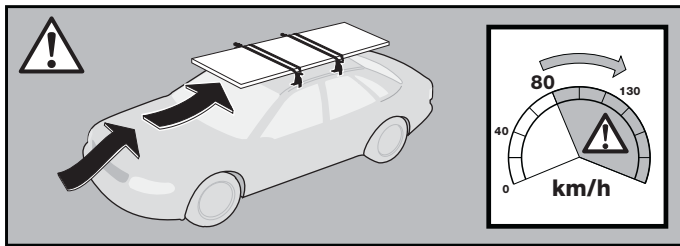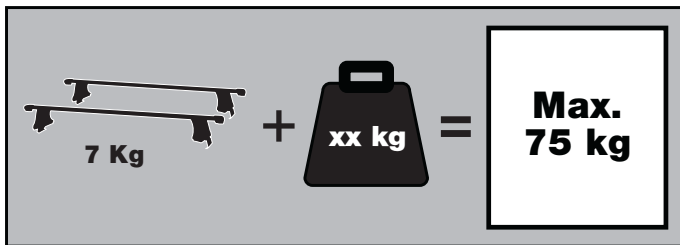

Se não houver instruções no seu idioma, entre em contato com os funcionários do estabelecimento para obter informações

 
 
 
 
 
Eğer talimatlar dilinizde basılı değilse, lütfen atölye personelinin bilgi isteyiniz.

Αν οι οδηγίες δεν εκτυπώνονται στη γλώσσα σας, παρακαλούμε ζητήστε πληροφορίες από το προσωπικό του καταστήματος.










ถ้าไม่มีคำแนะนำในภาษาของคุณ โปรดติดต่อพนักงานในร้านเพื่อขอข้อมูล


THULE[®]
SWEDEN

522 3DF/8F/501-1053-03

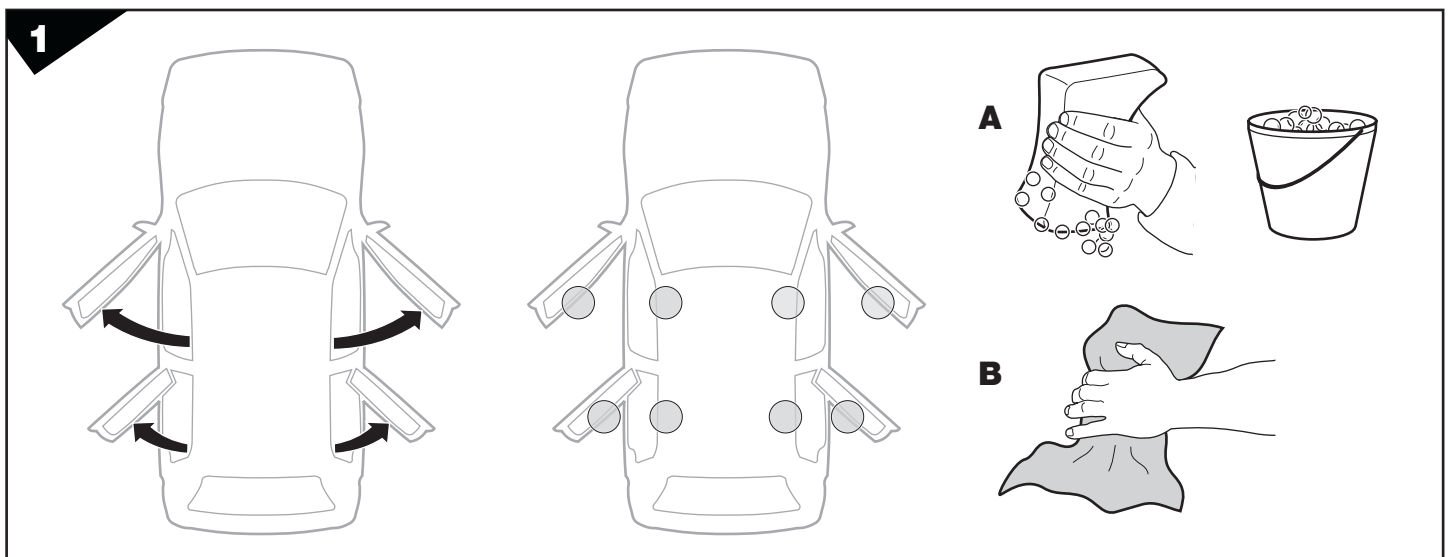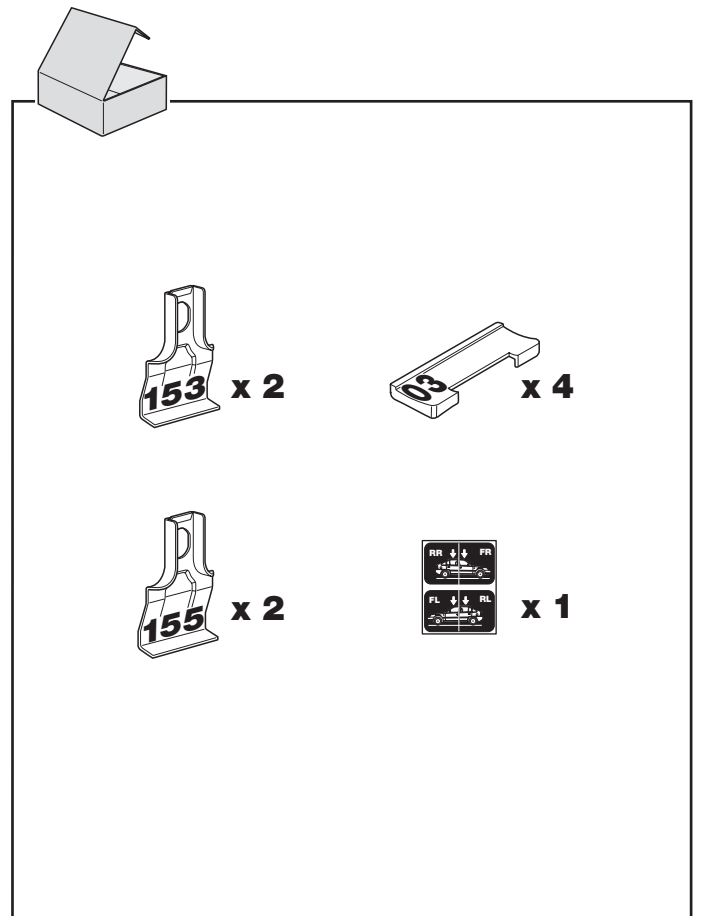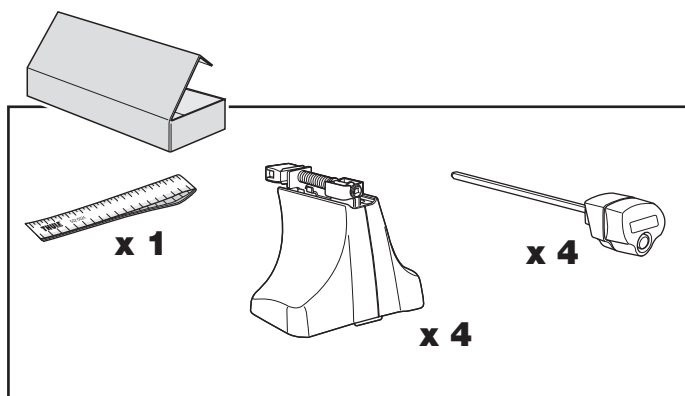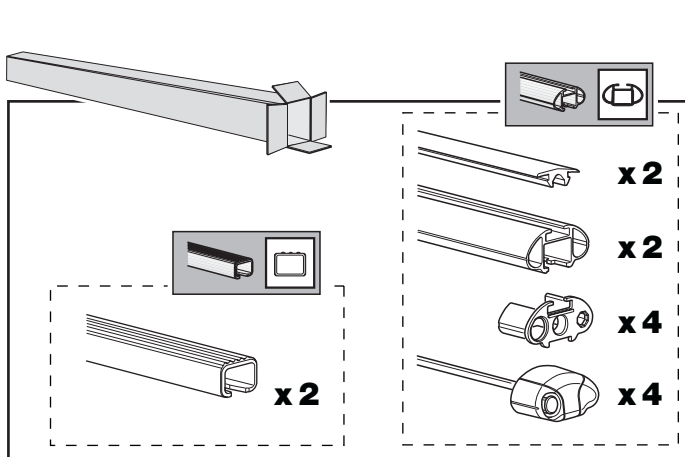
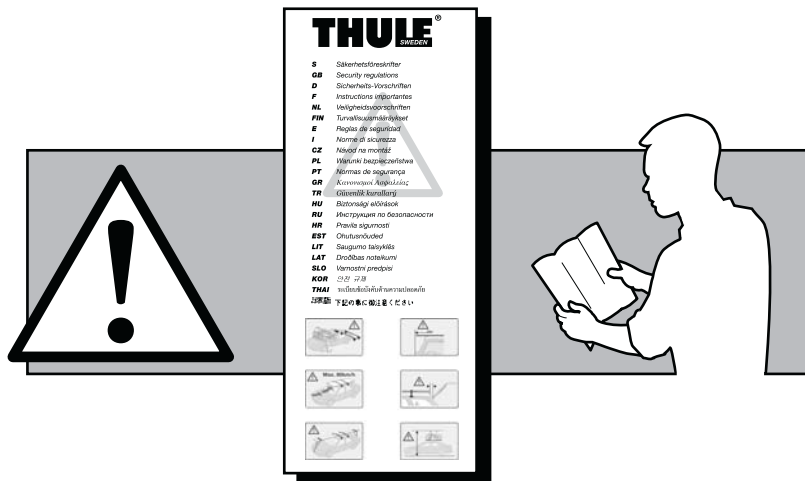


2

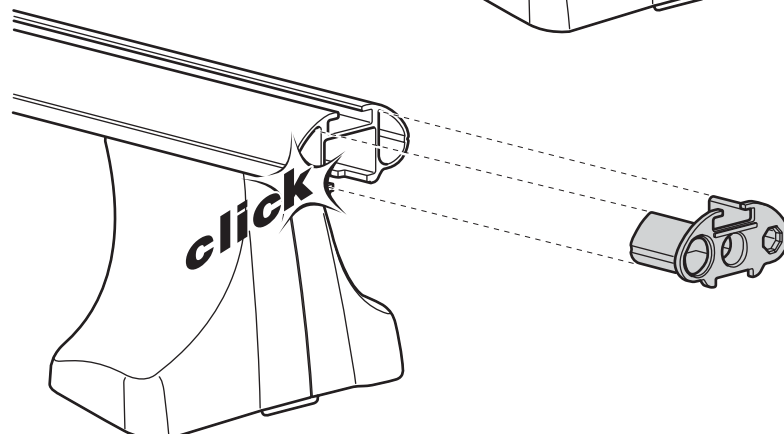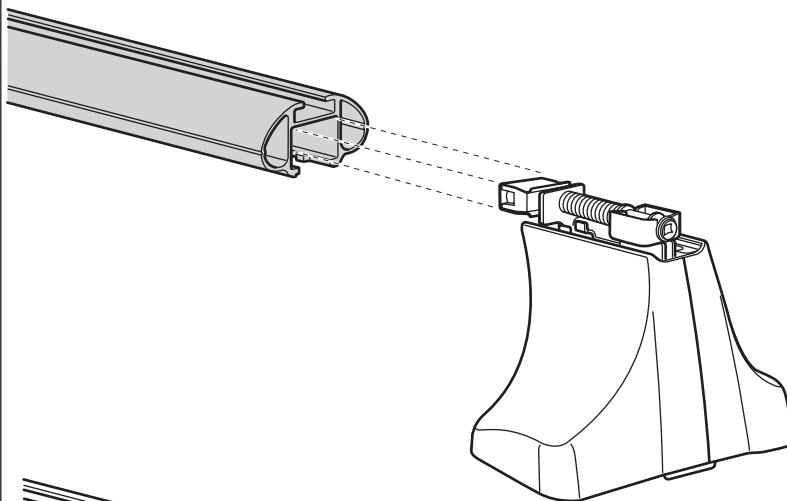   
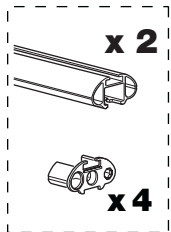 
 
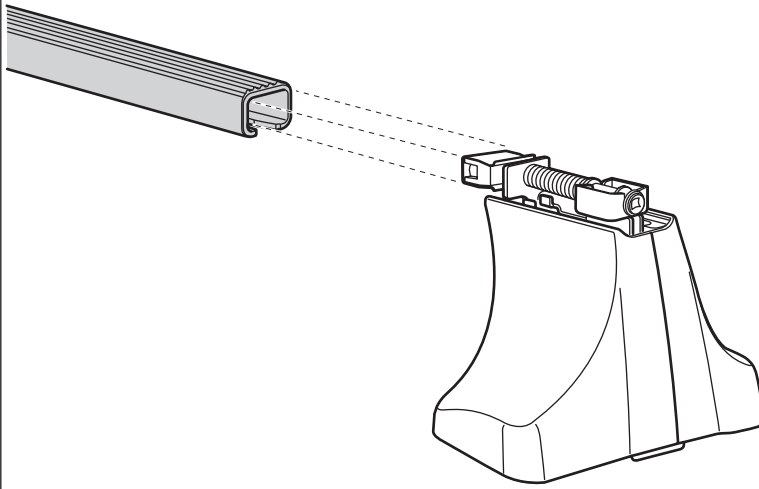 
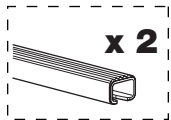 
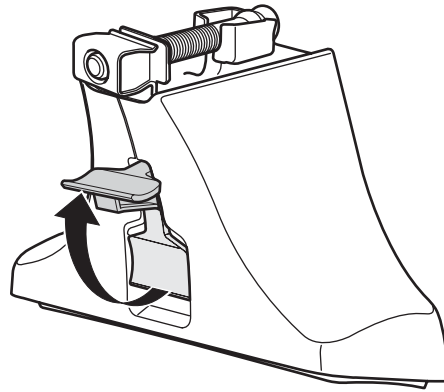 
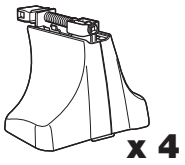 




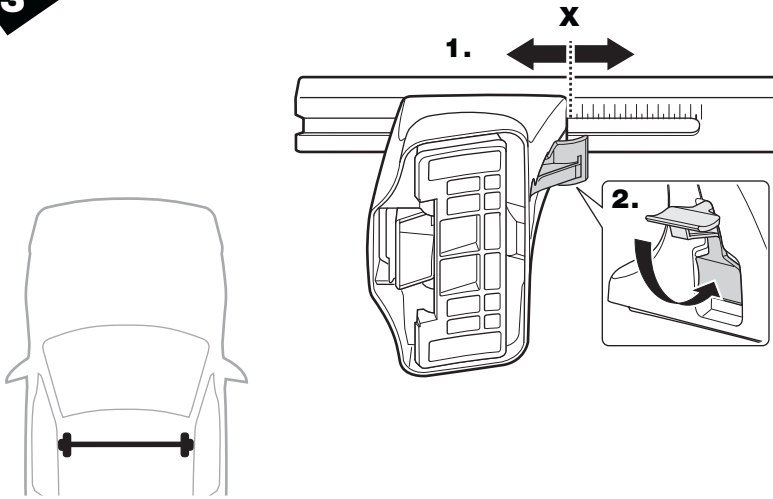 
3


	X
MAZDA 626 , 4-dr Sedan, 98-02	35,5
MAZDA 626 , 5-dr Hatchback, 98-02	36
MAZDA Capella , 4-dr Sedan, 98-02	35,5
FORD Telstar , 4-dr Sedan, 98-02	35,5











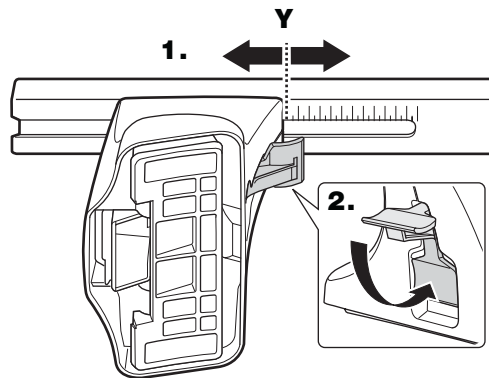 
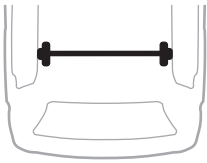 


	Y
MAZDA 626 , 4-dr Sedan, 98-02	33
MAZDA 626 , 5-dr Hatchback, 98-02	33
MAZDA Capella , 4-dr Sedan, 98-02	33
FORD Telstar , 4-dr Sedan, 98-02	33

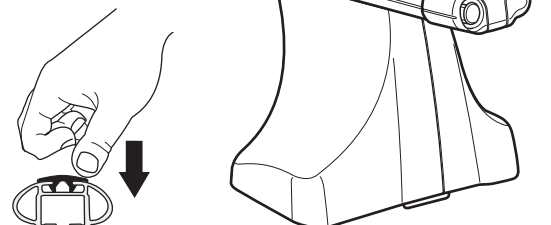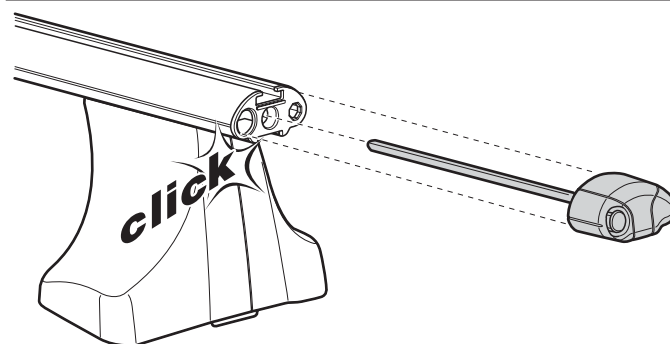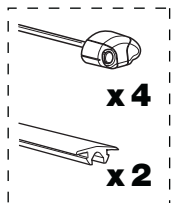     
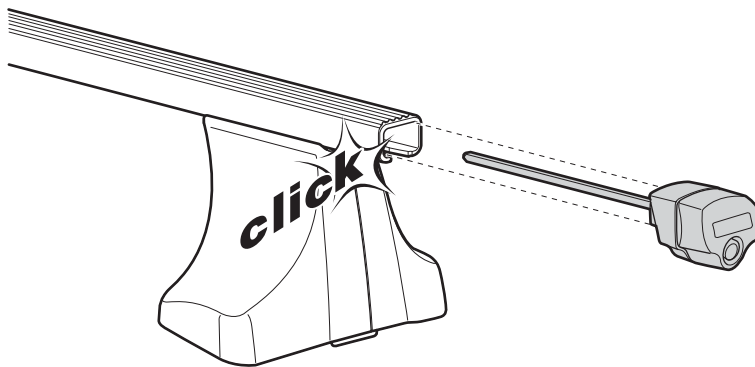 
 
4

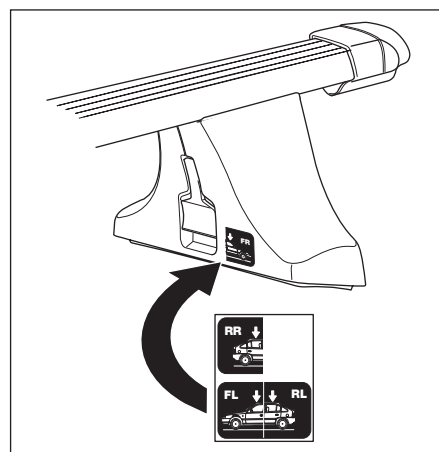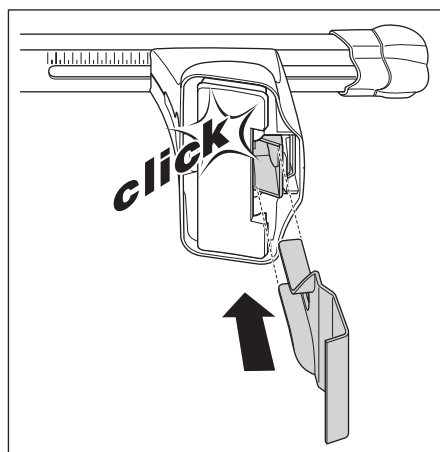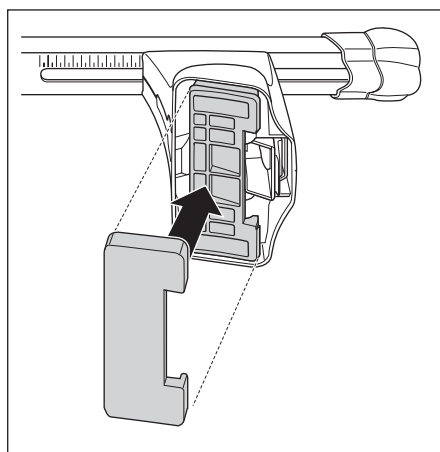   
5

            
MAZDA 626, 4-dr Sedan, 98-02
MAZDA 626, 5-dr Hatchback, 98-02
MAZDA Capella, 4-dr Sedan, 98-02
FORD Telstar, 4-dr Sedan, 98-02

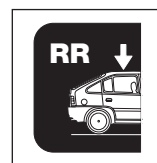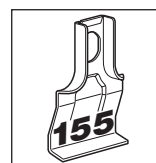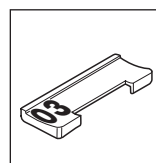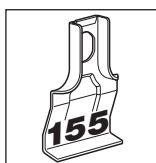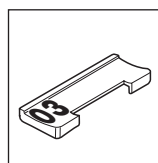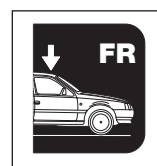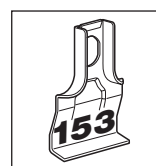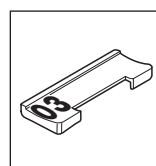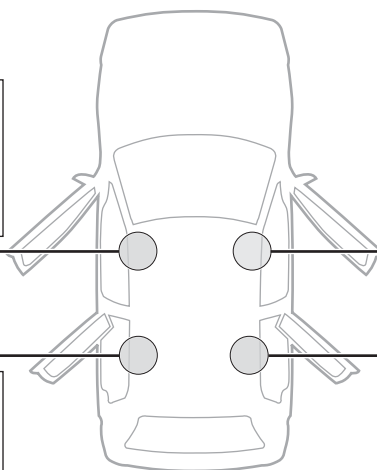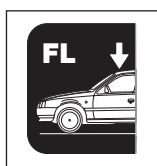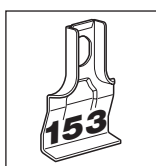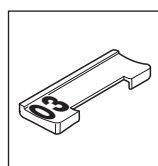




6

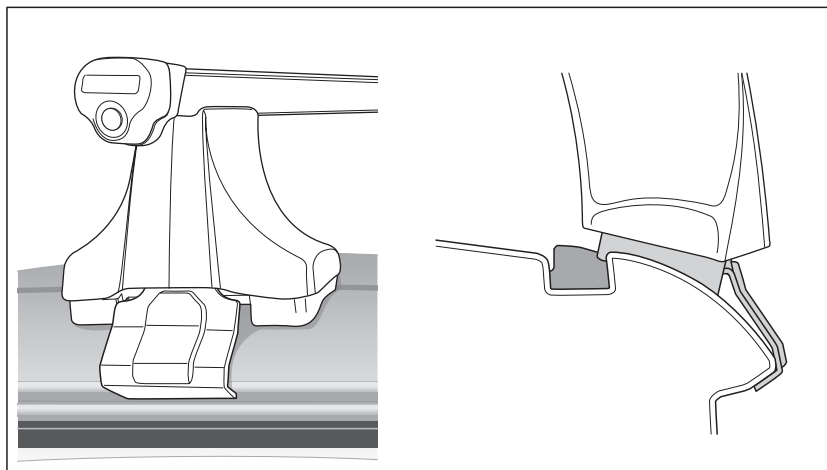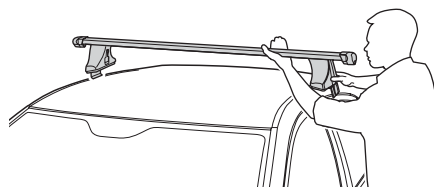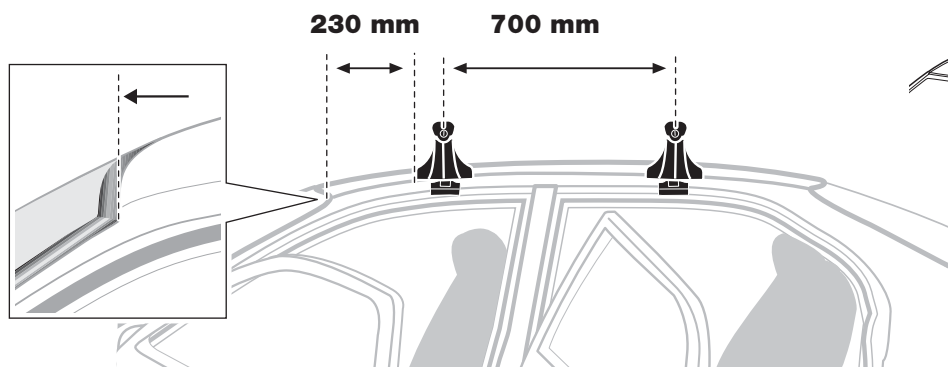   



7

- S** Dra åt växelvis
GB Tighten alternately
D Die Schrauben abwechselnd anziehen.
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
FIN Kierrä vuorotellen
E Alternare il serraggio delle viti
I Serrare alternativamente

   
- CZ** Pokrétla bagażnika dokręcaj dokręcaj naprzemiennie.
PL Śruby dokręcaj naprzemiennie
HU Egymástól függetlenül szorítandó
RU Затягивайте попеременно
EST Pinguldage vaheldumisi
SLO Privijajte izmenično.
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
中文 交替拧紧

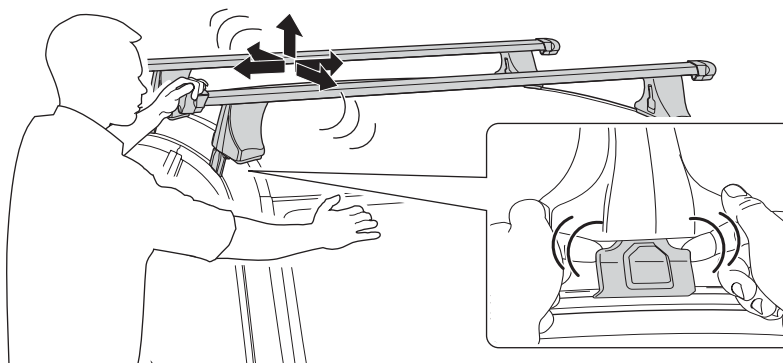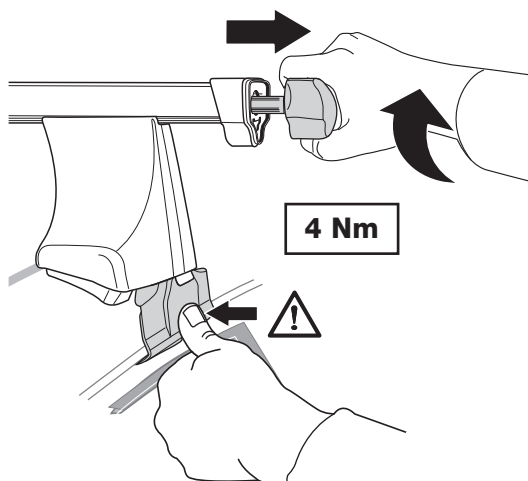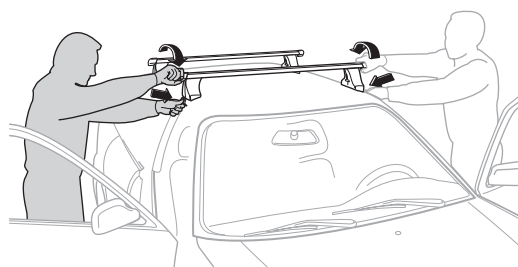

  • Demontering • Removal • Demontieren • Démontage • Demontage • Irrotus • Desmontaje • Rimozione • Odmontování • Wymontowywanie
• Leszerelés • Снятие • Eemaldamine • Odstranjanje • 분리 • 取り外し • 拆除

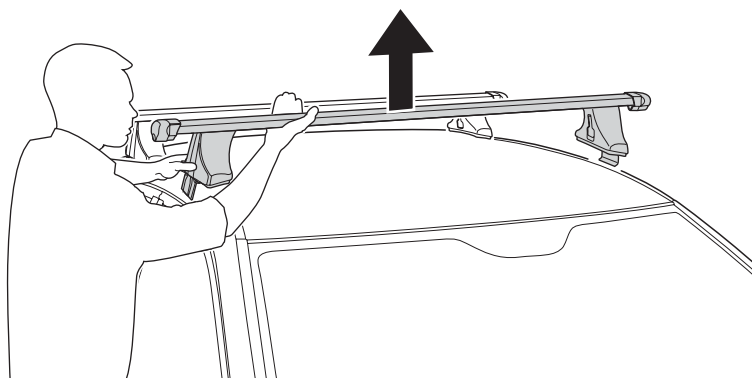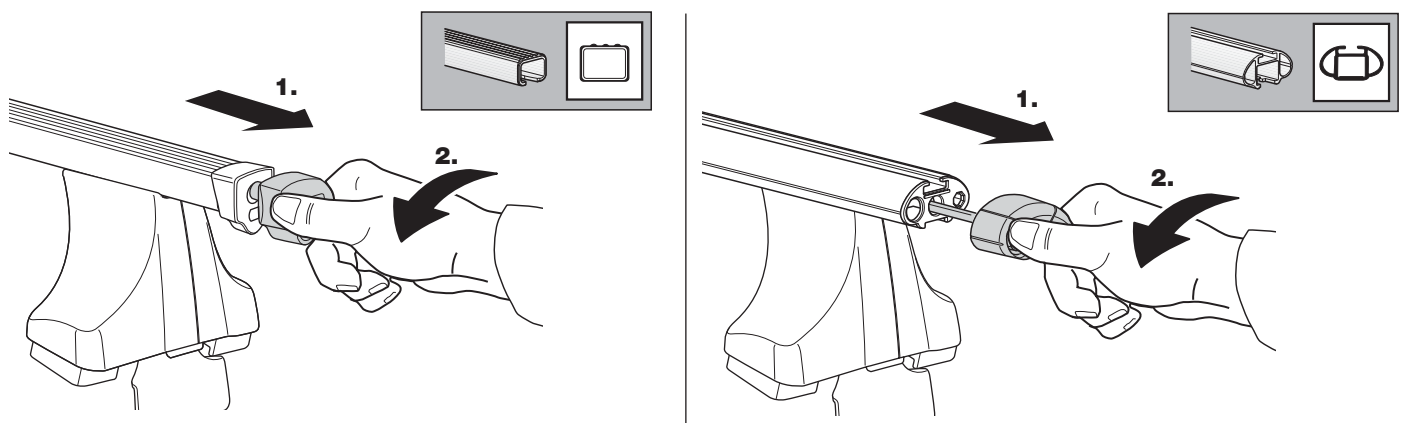

Fit Tips!

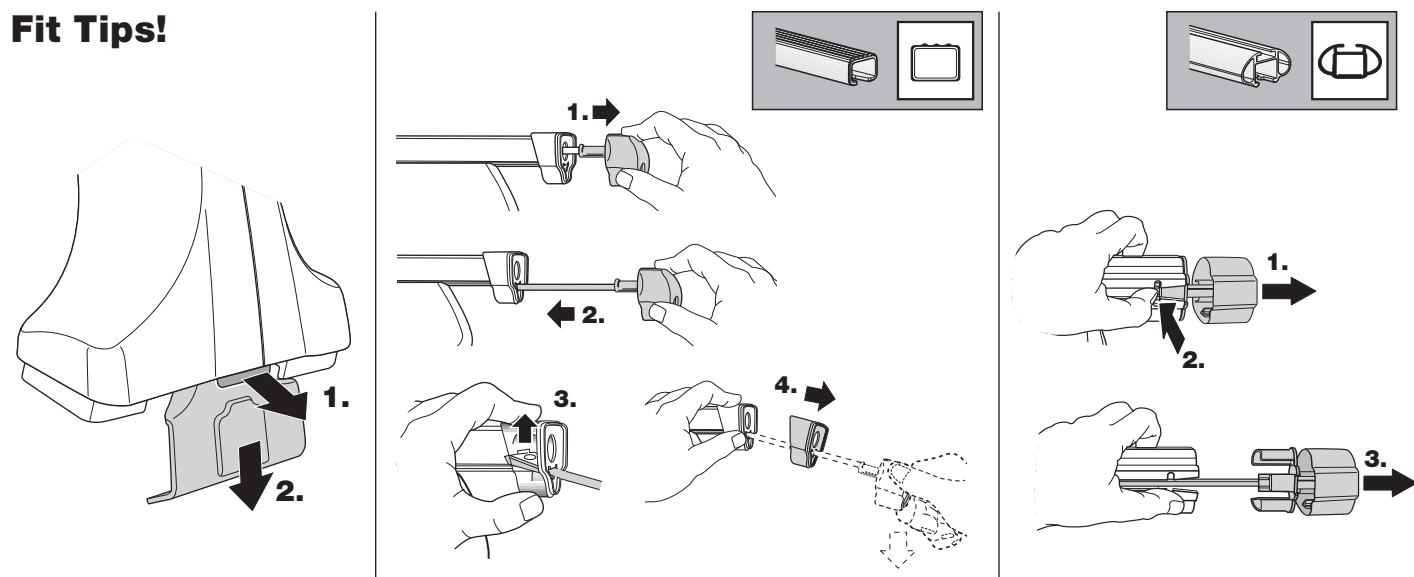 

THULE
ONE
KEY
SYSTEM

