 
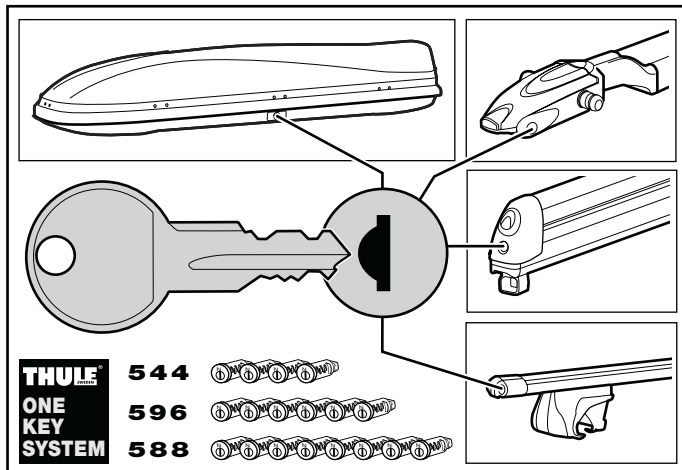 
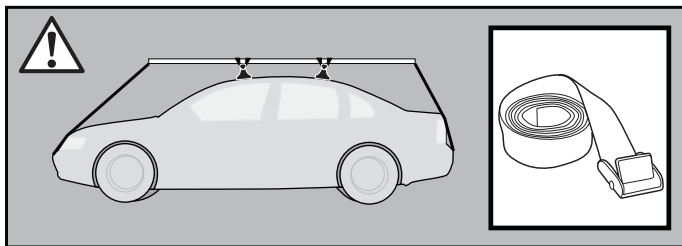 
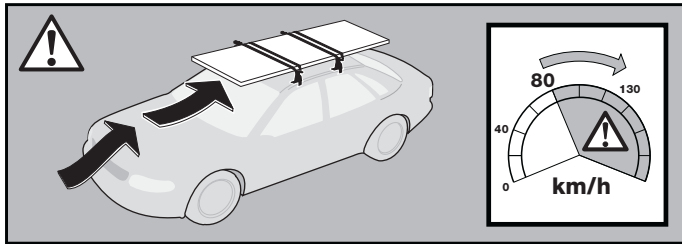 


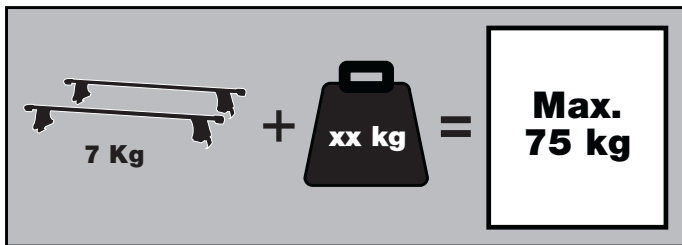

THULE[®]
SWEDEN

- GB Fitting instructions
D Montageanleitung
F Instructions de montage
NL Montage-instructies
I Istruzioni per il montaggio
E Instrucciones de montaje
PT Instruções de Montagem
S Monteringsanvisning
FIN Asennusohje
EST Paigaldusjuhend
LAT Stiprināšanas instrukcija
LIT Pritvirtinimo instrukcijos
PL Instrukcja montażu
RU Инструкции по установке
CZ Návod na montáž
SK Návod na montáž
SLO Navodila za pritrjevanje
HR Uputa za sastavljanje
HU A felszerelés módja
GR Οδηγίες συναρμολόγησης
TR Montaj talimatları
中文 安装说明
日本語 取扱(取付)説明書
한국어 장착 지침
ไทย คำแนะนำการติดตั้ง

HYUNDAI Grandeur, 4-dr Sedan, 05

HYUNDAI Azera, 4-dr Sedan, 05 (USA)






**RAPID
SYSTEM**

Kit 1414














Follow me...

     THULE[®]
SWEDEN

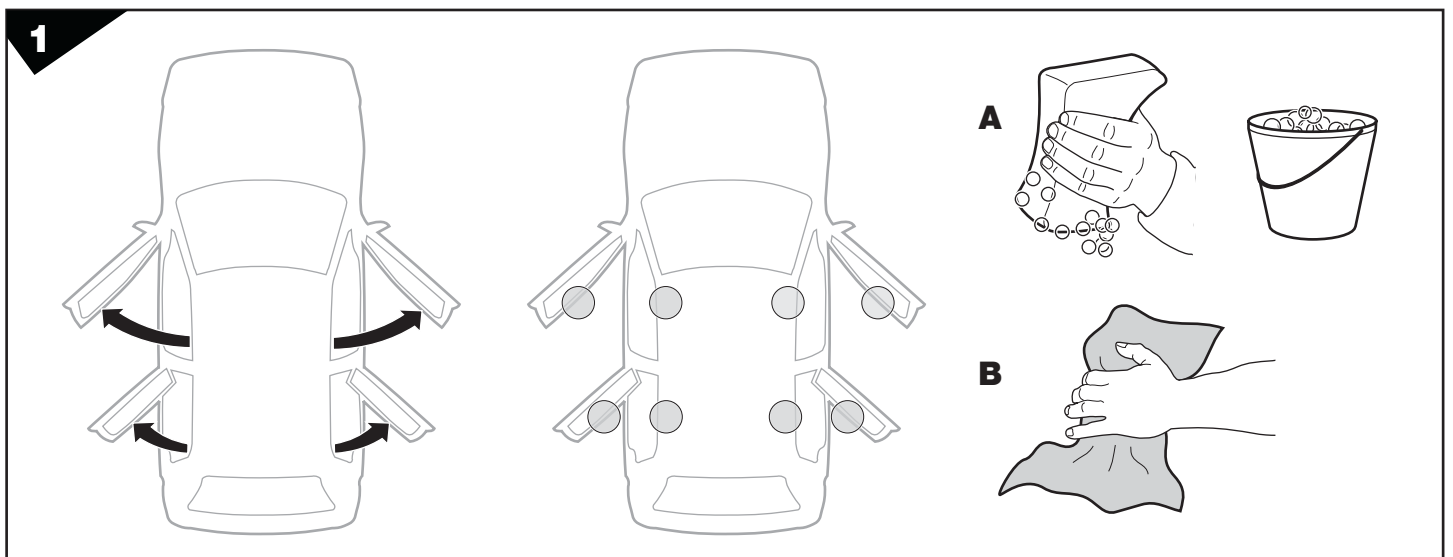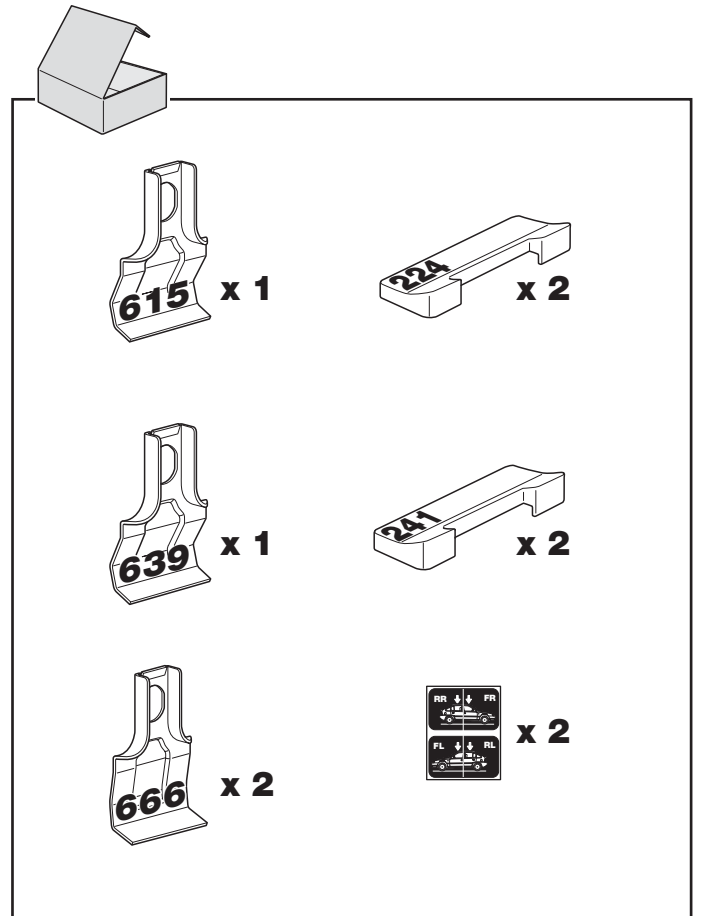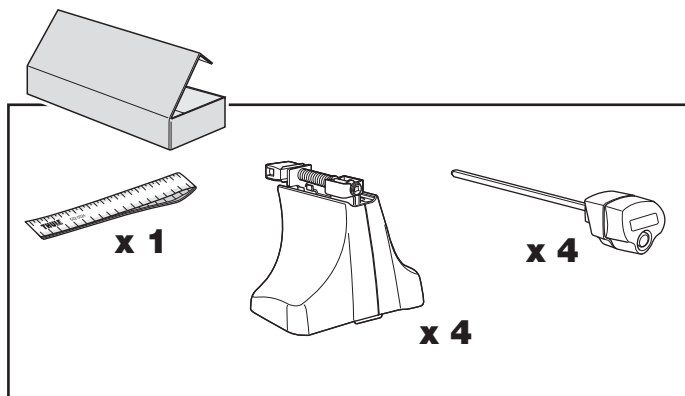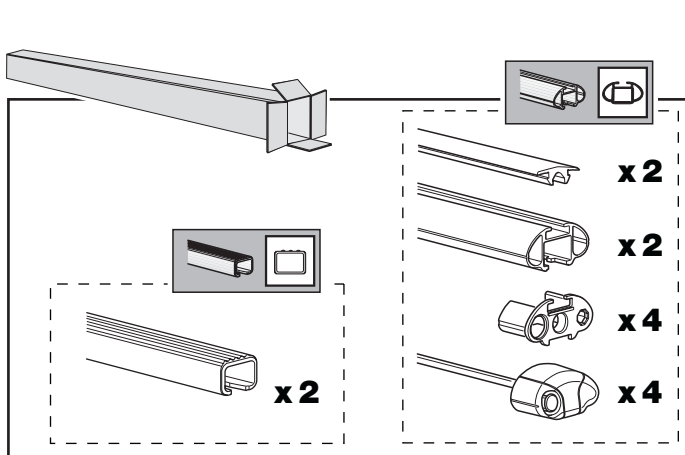
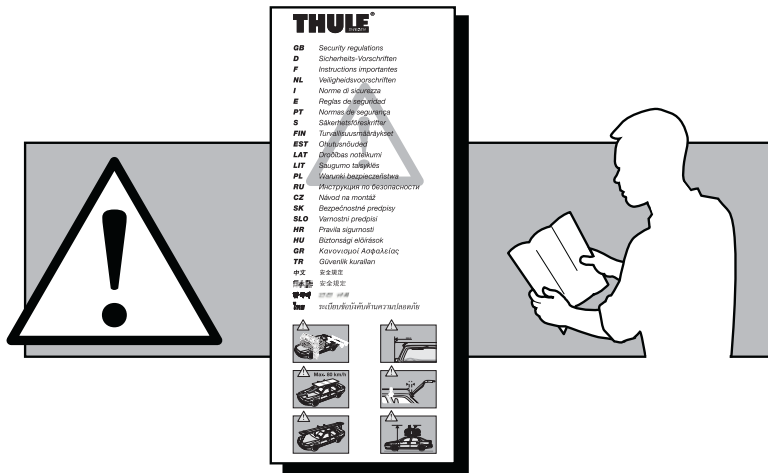


2

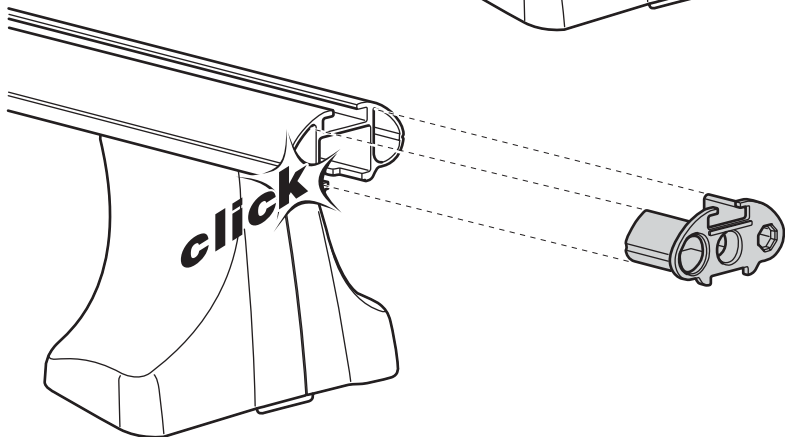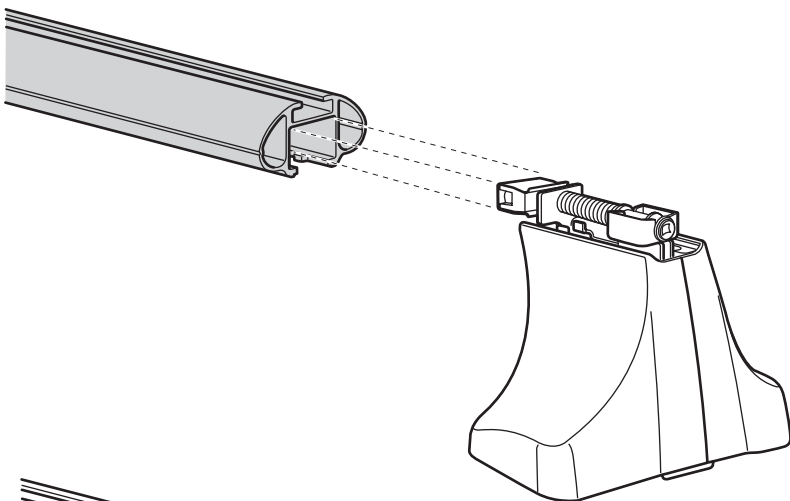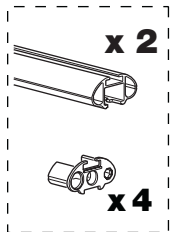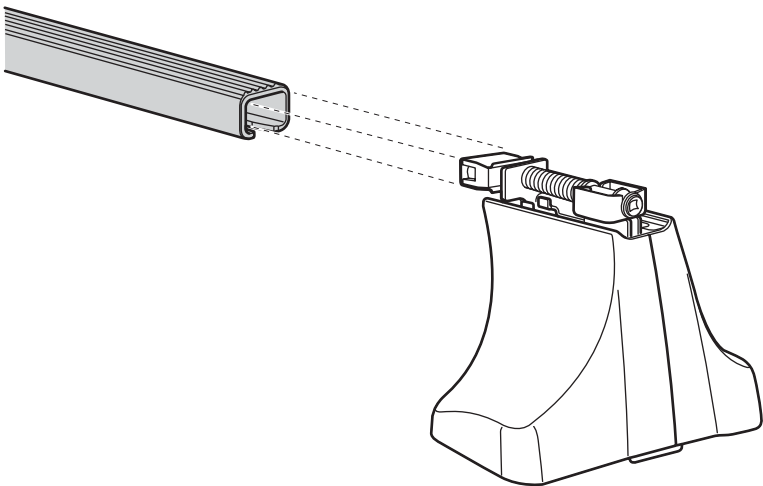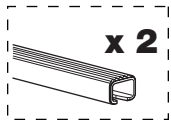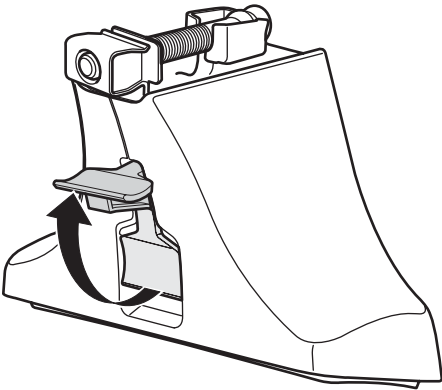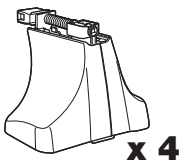         






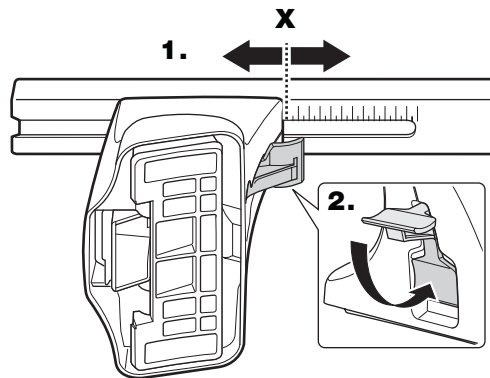 
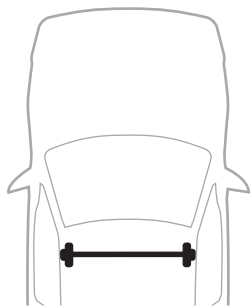 


	X
HYUNDAI Grandeur , 4-dr Sedan, 05–	40,5
HYUNDAI Azera , 4-dr Sedan, 05– (USA)	40,5


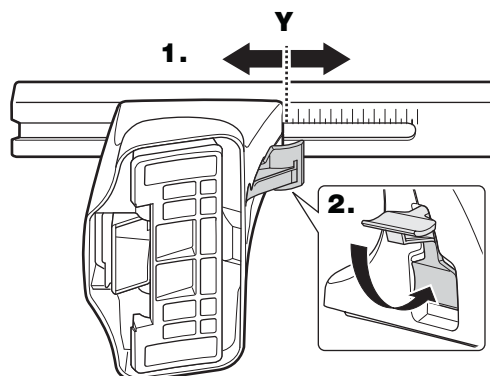 
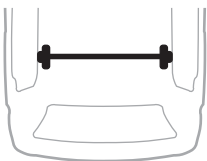 


	X
HYUNDAI Grandeur , 4-dr Sedan, 05-	39,5
HYUNDAI Azera , 4-dr Sedan, 05- (USA)	39,5




 
 
 
 
 
 
 
4

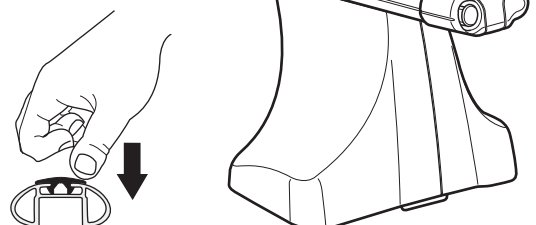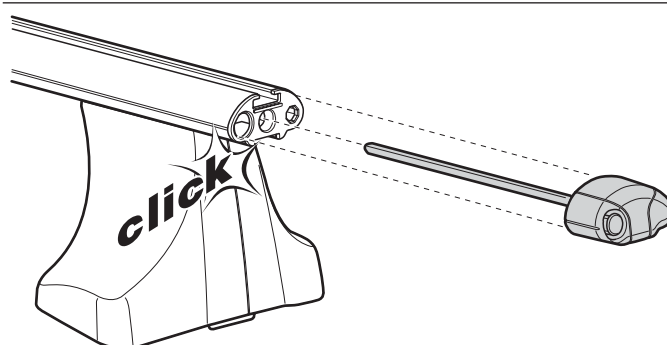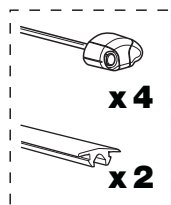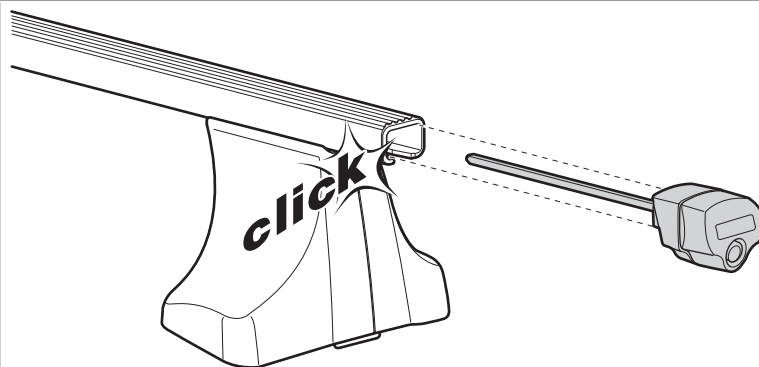


5

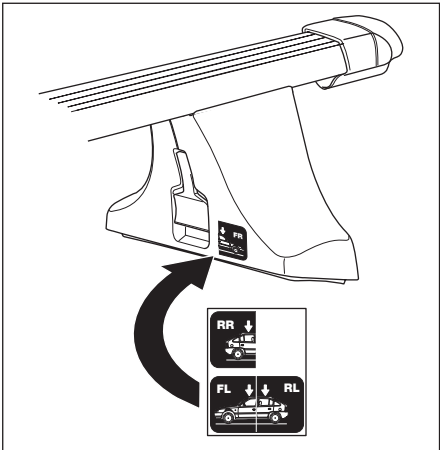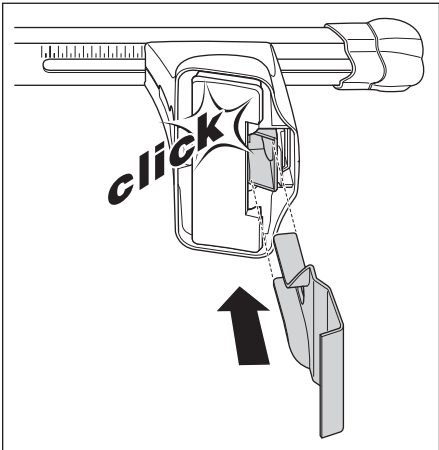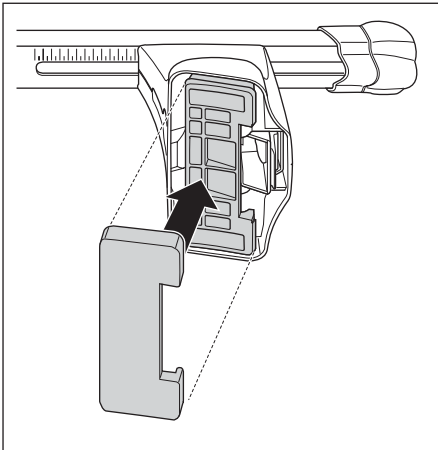   

          HYUNDAI Grandeur, 4-dr Sedan, 05–
HYUNDAI Azera, 4-dr Sedan, 05– (USA)

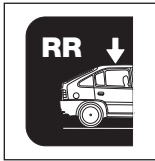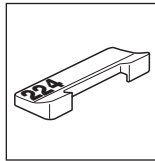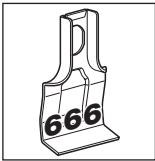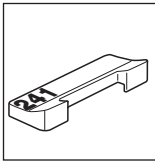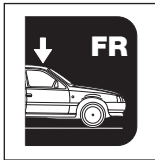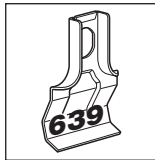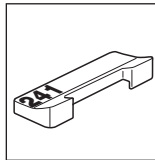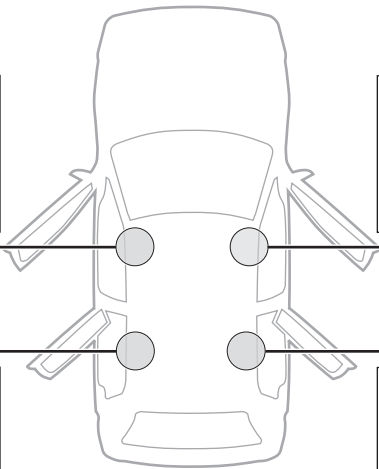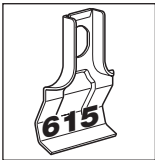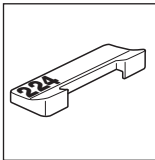




6

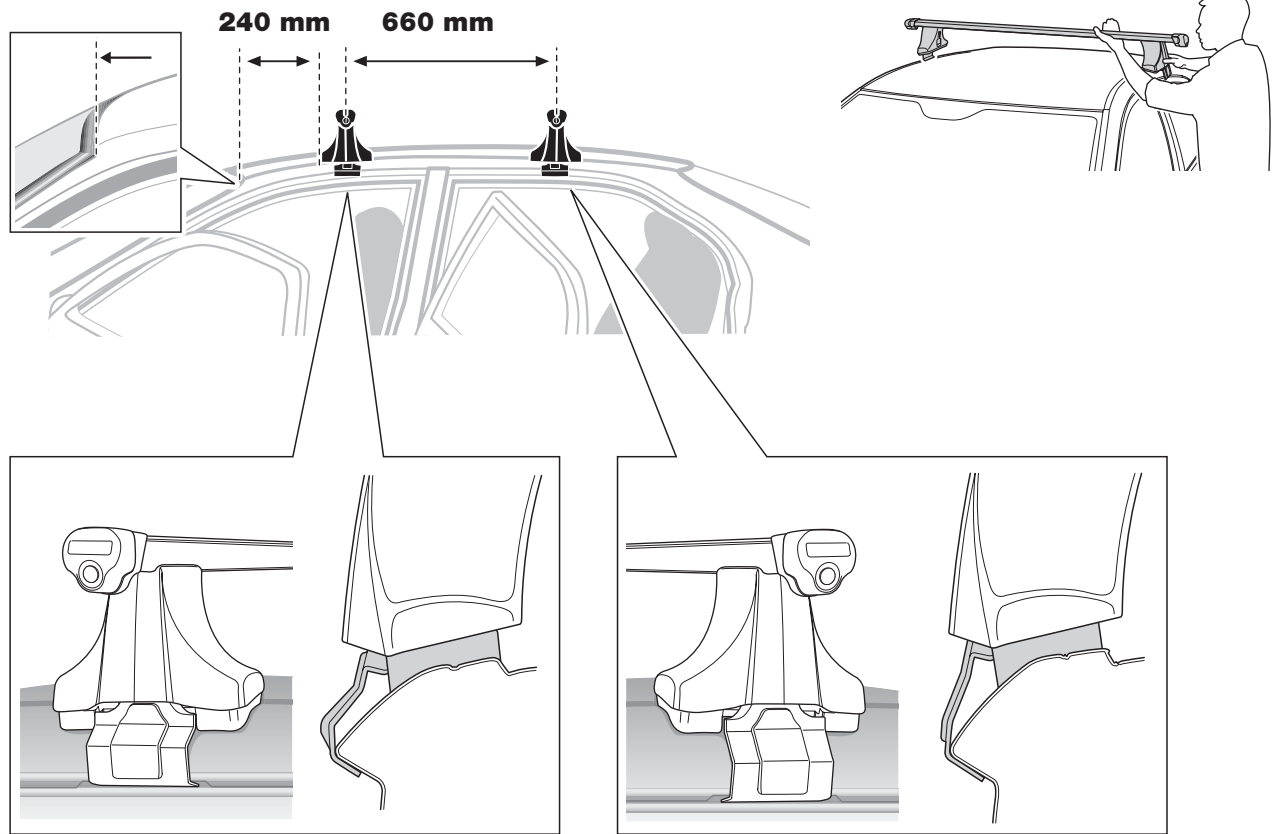 



7

- GB** Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Serrare alternativamente
E Alternare il serraggio delle viti
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis



 
 
 
- PL** Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
CZ Pokrétla bagażníka dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ

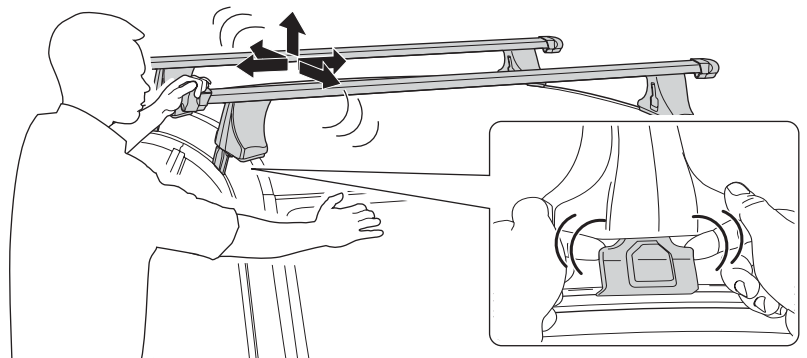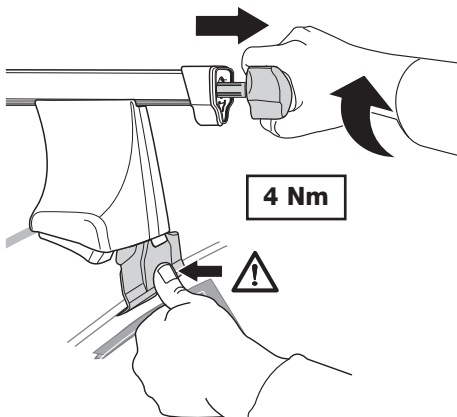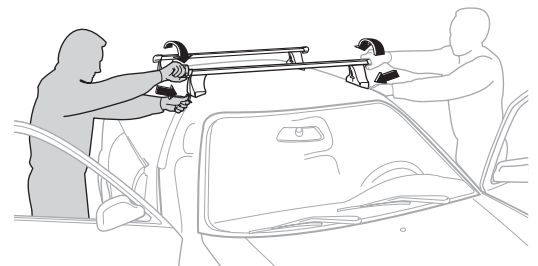

GB Removal	E Desmontaje	LAT Noņemšana	SK Demontáž	TR Sökme
D Demontieren	PT Remoção	LIT Nuėmimas	SLO Odstranjevanje	中文 拆除
F Démontage	S Demontering	PL Wymontowywanie	HR Uklanjanje	日本語 取り外し
NL Demontage	FIN Irrotus	RU Снятие	HU Leszerelés	한국어 분리
I Rimozione	EST Eemaldamine	CZ Odmontování	GR Αφαίρεση	ไทย การถอด

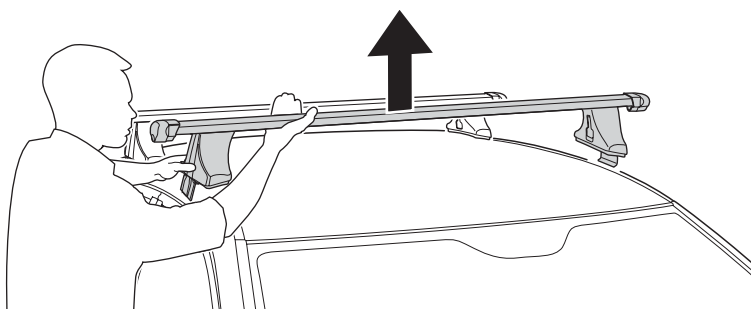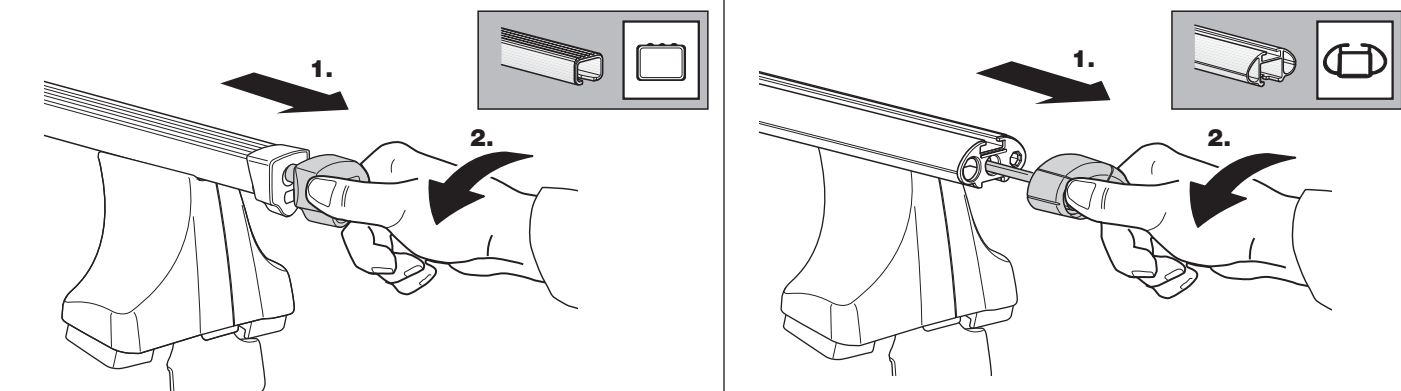  

Fit Tips!

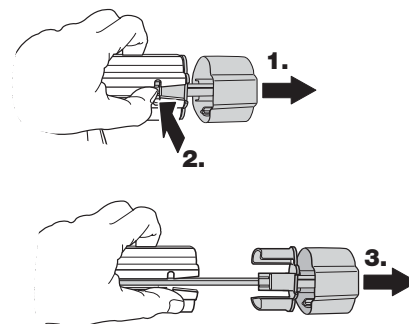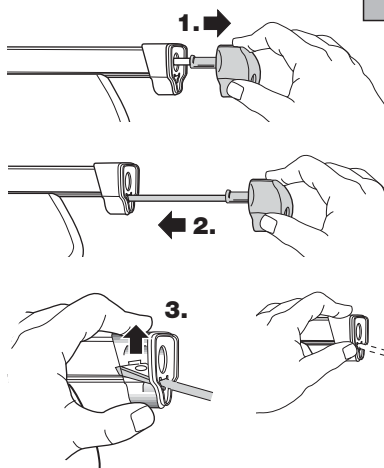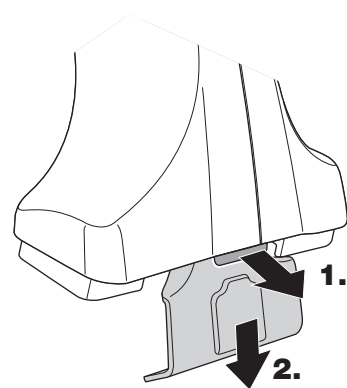     

THULE
ONE
KEY
SYSTEM

