 
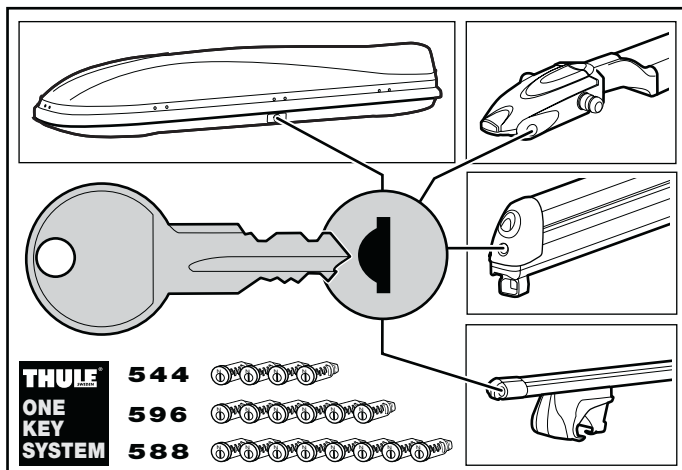 
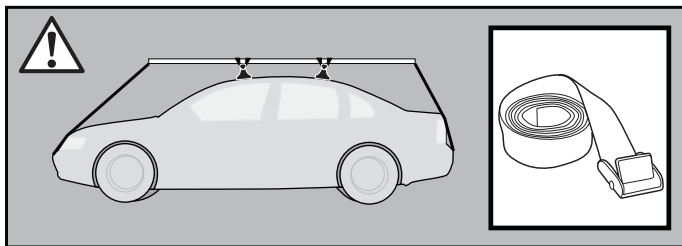 
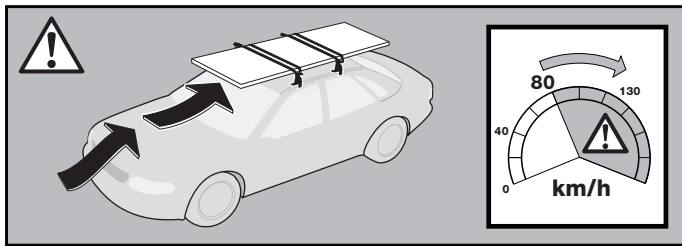 


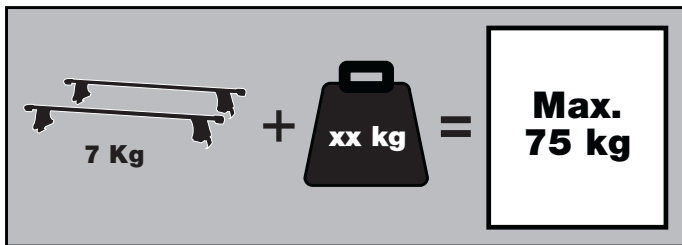

THULE[®]
SWEDEN

- GB Fitting instructions
- D Montageanleitung
- F Instructions de montage
- NL Montage-instructies
- I Istruzioni per il montaggio
- E Instrucciones de montaje
- PT Instruções de Montagem
- S Monteringsanvisning
- FIN Asennusohje
- EST Paigaldusjuhend
- LAT Stiprināšanas instrukcija
- LIT Pritvirtinimo instrukcijos
- PL Instrukcja montażu
- RU Инструкции по установке
- CZ Návod na montáž
- SK Návod na montáž
- SLO Navodila za pritrjevanje
- HR Uputa za sastavljanje
- HU A felszerelés módja
- GR Οδηγίες συναρμολόγησης
- TR Montaj talimatları
- 中文 安装说明
- 日本語 取扱(取付)説明書
- 한국어 장착 지침
- ไทย คำแนะนำการติดตั้ง

SUZUKI APV, 5-dr MPV, 04

MITSUBISHI Maven, 5-dr MPV, 05


RAPID SYSTEM

Kit 1421



Follow me...







 
THULE[®]
SWEDEN




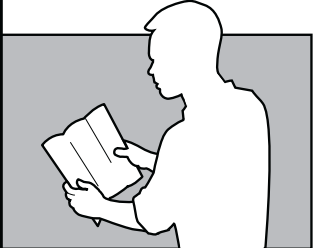



THULE

            GB Security regulations
D Sicherheits-Vorschriften
F Instructions importantes
NL Veiligheidsvoorschriften
I Norme di sicurezza
E Regles de seguretat
PT Normas de segurança
S Säkerhetsföreskrifter
FI Turvallisuusohjeet
EST Ohutusjuhised
LAT Drošības noteikumi
LIT Saugumo taisyklės
PL Wykazanie bezpieczeństwa
RU Инструкция по безопасности
CZ Návod na montáž
SK Bezpečnostné predpisy
SLO Varnostni predpisi
HR Pravila sigurnosti
HU Biztonsági előírások
GR Κοινωνισμοί Ασφαλείας
TR Güvenlik kuralları
中文 安全規定
繁體 安全規定
ไทย ระเบียบการติดตั้งอุปกรณ์














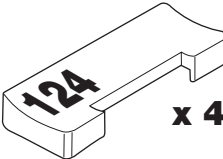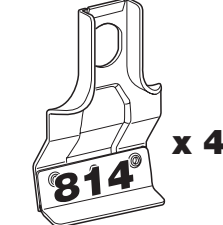
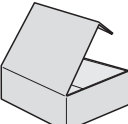


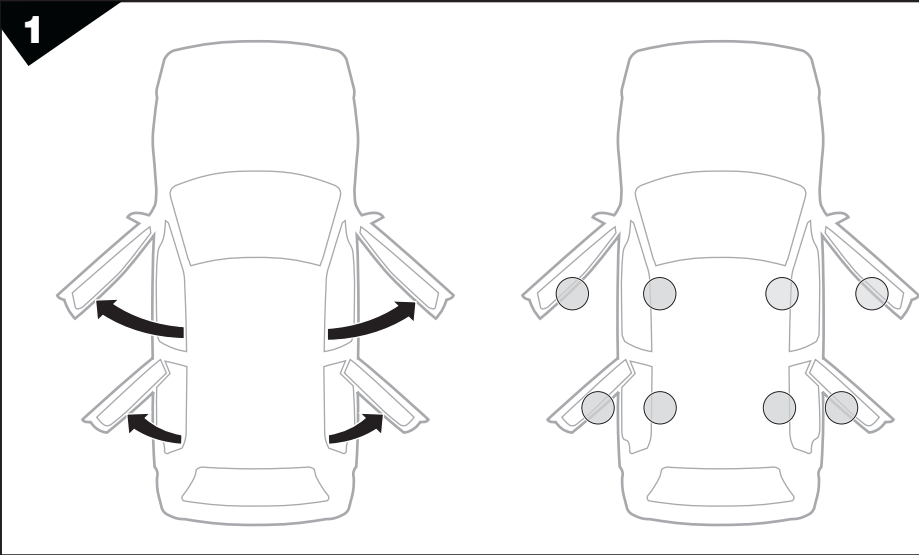



2

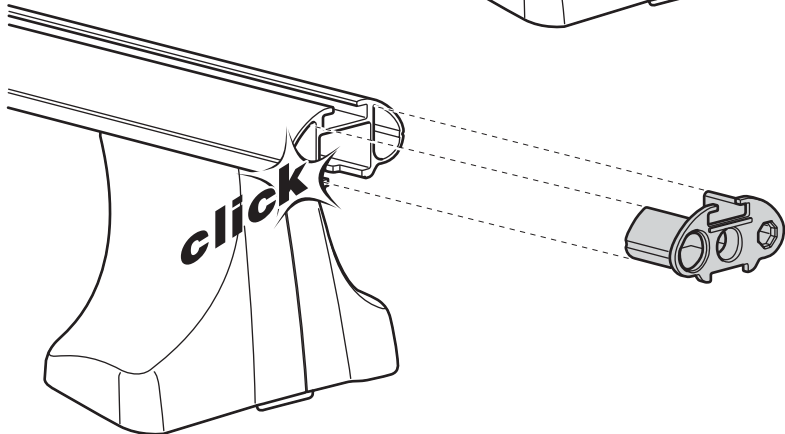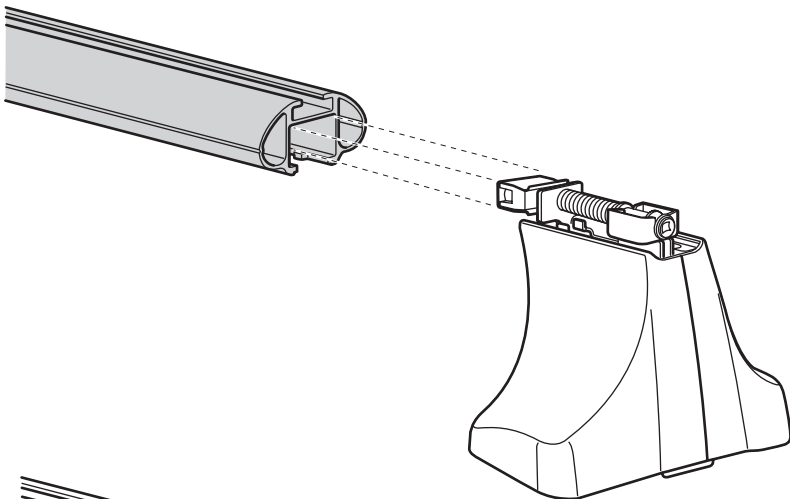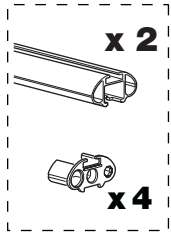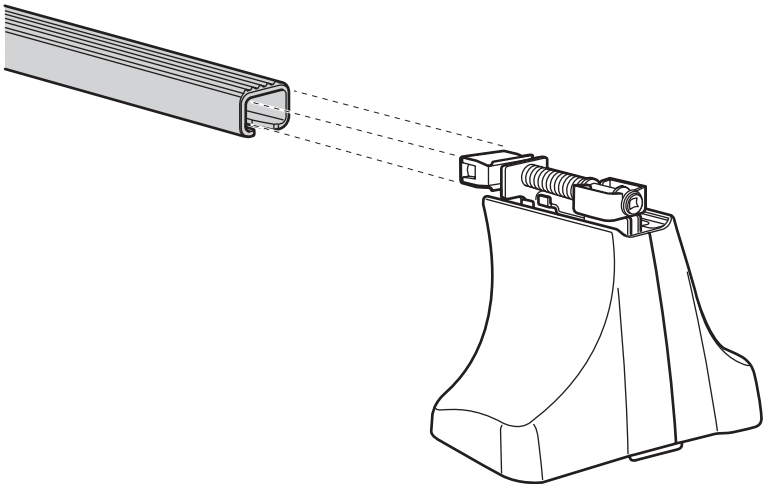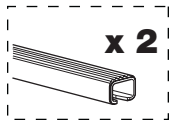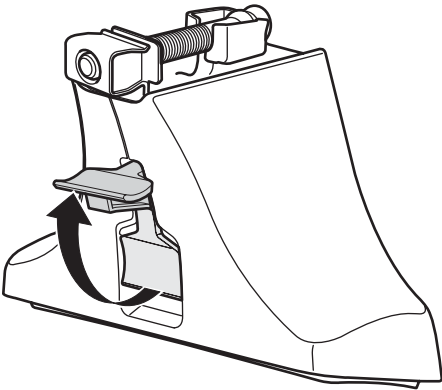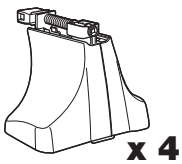         

3


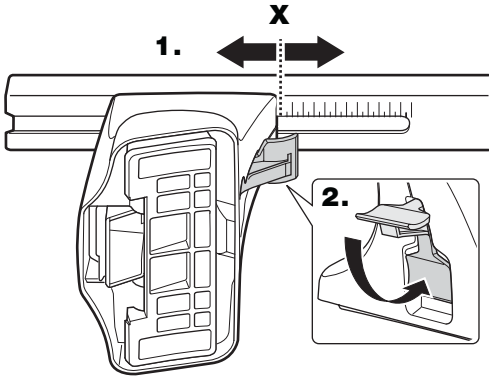 
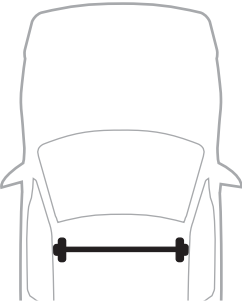 




	X
SUZUKI APV, 5-dr MPV, 04–	38
mitsubishi Maven, 5-dr MPV, 05–	38

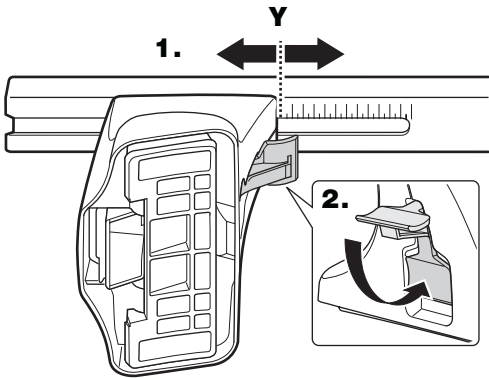 
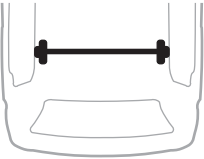 


	Y
SUZUKI APV, 5-dr MPV, 04–	38
mitsubishi Maven, 5-dr MPV, 05–	38

       4

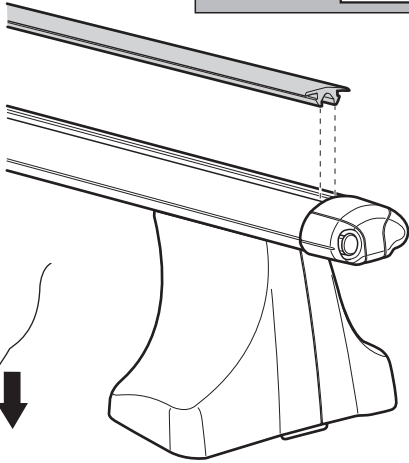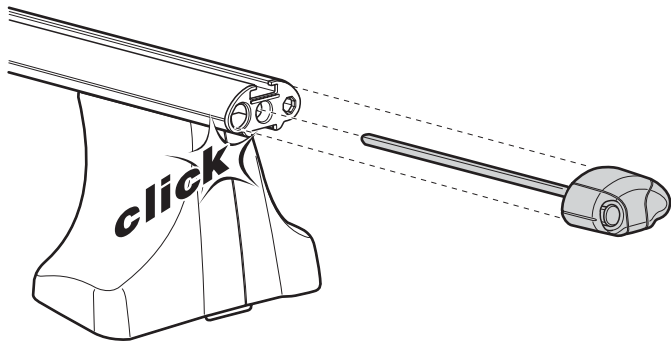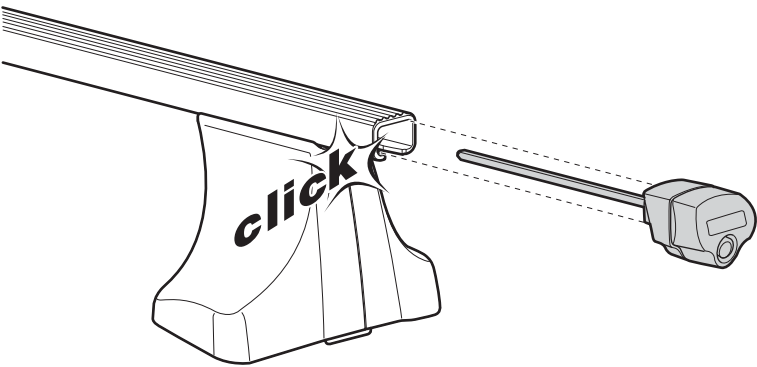


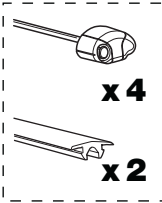

















501-1421

4

 
 
 
5

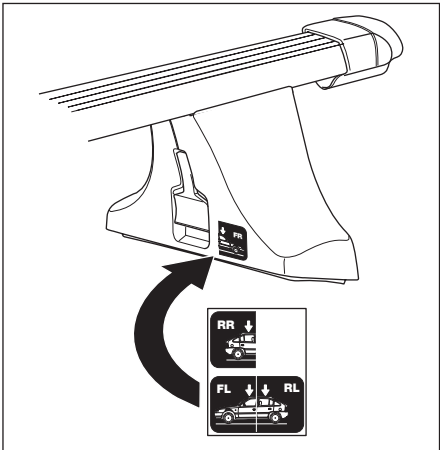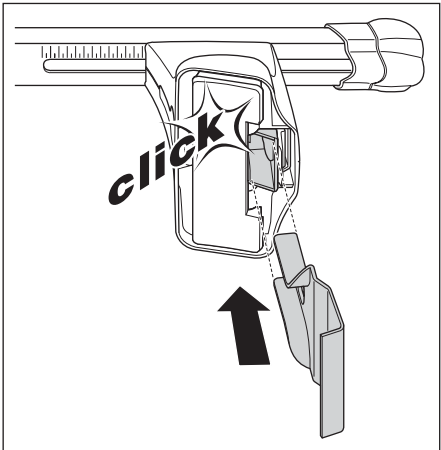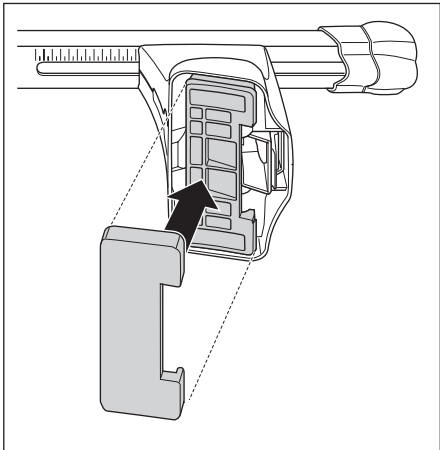

            SUZUKI APV, 5-dr MPV, 04–
MITSUBISHI Maven, 5-dr MPV, 05–

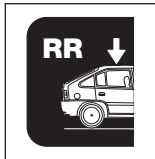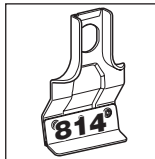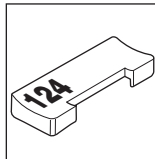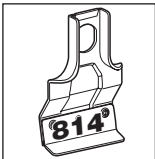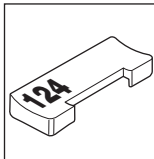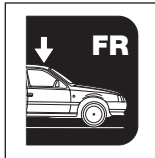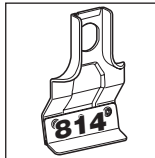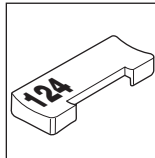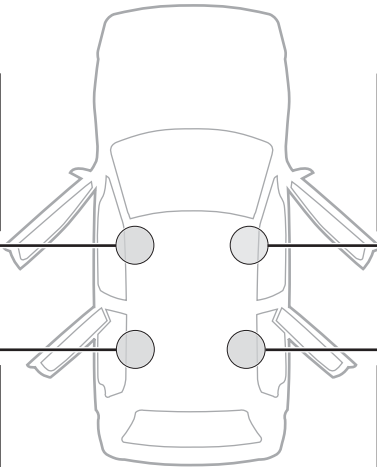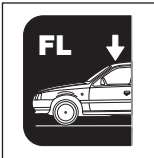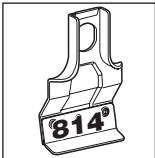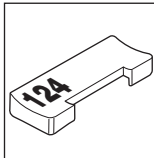




6

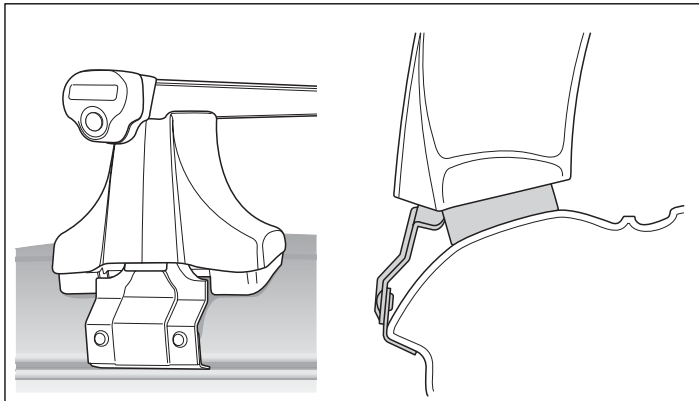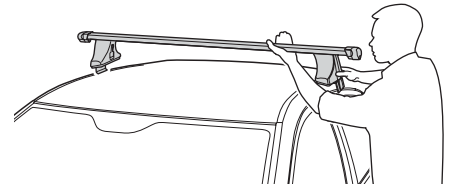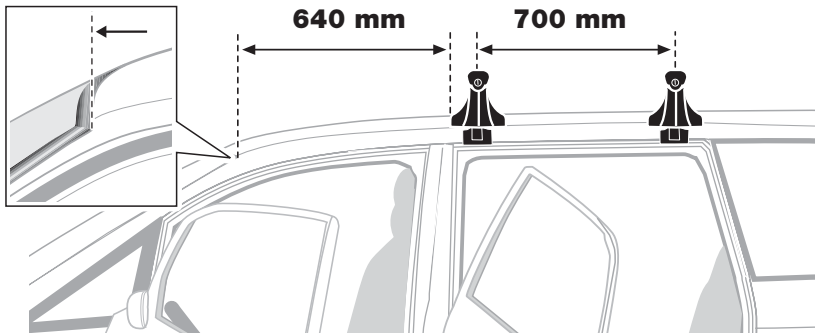   



7

- GB** Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Serrare alternativamente
E Alternare il serraggio delle viti
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciet pamišus
LIT Užsukinėkite pakaitomis



 
 
 
- PL** Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно
CZ Pokrétla багаžníka dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ

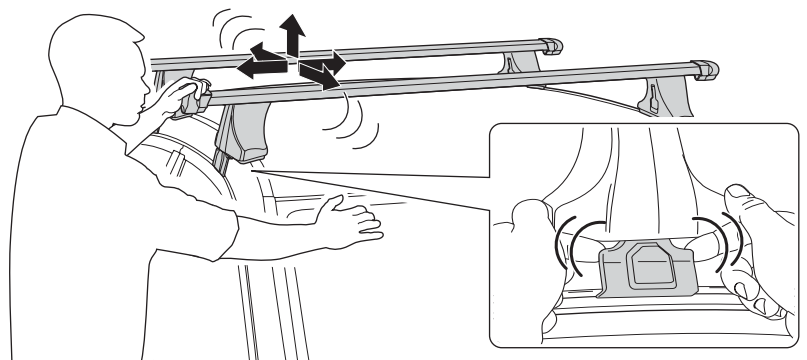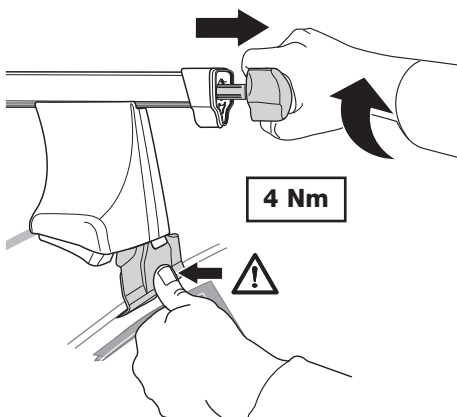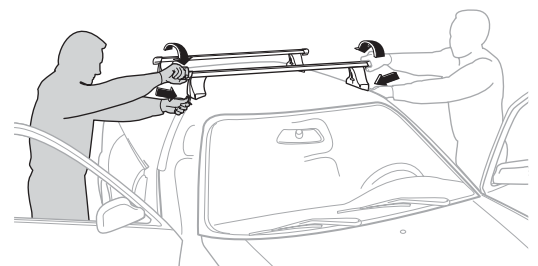

GB Removal	E Desmontaje	LAT Noņemšana	SK Demontáž	TR Sökme
D Demontieren	PT Remoção	LIT Nuėmimas	SLO Odstranjevanje	中文 拆除
F Démontage	S Demoneren	PL Wymontowywanie	HR Uklanjanje	日本語 取り外し
NL Demontage	FIN Irrotus	RU Снятие	HU Leszerelés	한국어 분리
I Rimozione	EST Eemaldamine	CZ Odmontování	GR Αφαίρεση	ไทย การถอด

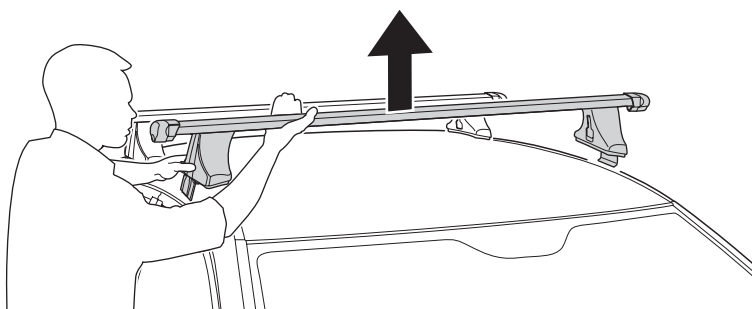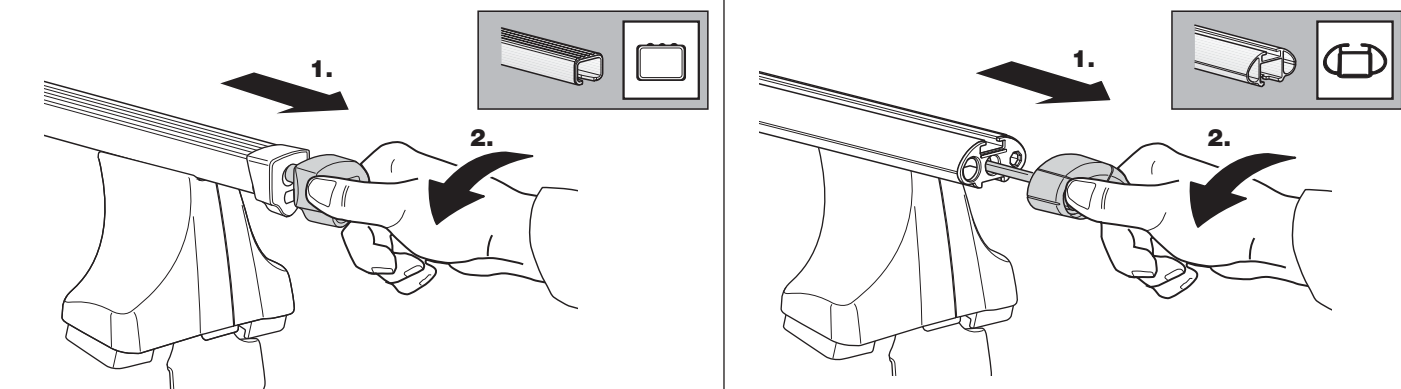  

Fit Tips!

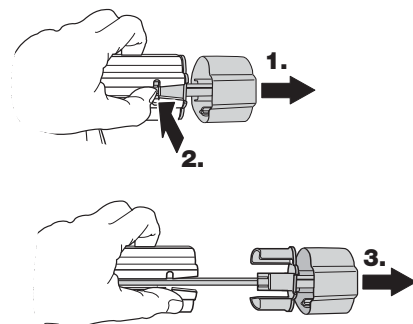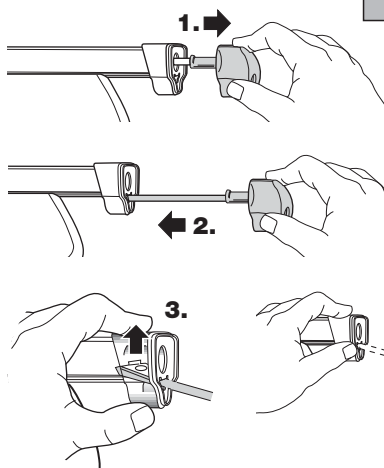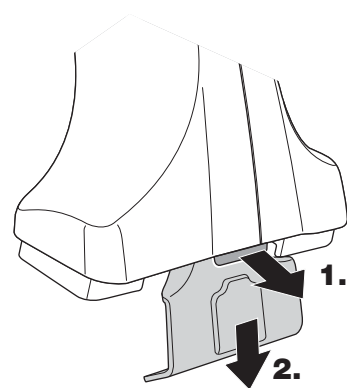     

THULE
ONE
KEY
SYSTEM

