



909-351

Lv7 2019-r3

Modelo-model:


Evo Rack E23-126

Lote-Lot-Lot-Lot:

01-16

Peso-Weight-Poids-Gewicht:

23,52 kg

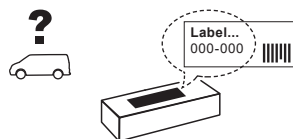

Max: 150 kg



CEE - EEC type approval:



26 R- 03 3024



CITY CRASH (✓)
According to ISO/ P. AS 11154:2006

CRUZBER SA
ES-A14018311
P.I. Las Salinas II
14960 - Rute - Spain
www.cruzber.com



(E) **Instrucción de montaje**
¡Leer primero!

(GB) **Assembly instructions**
Read first!

(F) **Instruction de montage**
Lire en premier!

(D) **Montageanleitung**
Zuerst lesen!

(PT) **Instruções de montagem**
Ler primeiro!

(PL) **Instrukcja montażu**
Najpierw przeczytaj!

(CZ) **Montážní návod**
Čtěte pozorně!

(HU) **Szerelési Utasítás**
Először olvassd el!

(RO) **Instructiuni de montaj**
Intai cititi!

(HR) **Detaljne upute**
Prvo pročitati!

(GR) **Διαβάστε προσεκτικά τις**
Οδηγίες Συναρμολόγησης!

(TR) **Öncelikli montaj:**
Talimatlarını okuyunuz!

(RU) **Инструкции по монтажу**
Сначала прочитайте!

(I) **Istruzioni di montaggio**
Leggere per primo!

(NL) **Montagehandleiding**
Eerst lezen!

(SLO) **Navodila za sestavljanje**
Preberite!

Portaequipajes

Roof racks

Galeries

Dachgepäckträger

Porta bagagens

Bagażnik dachowy

Strešní nosiče

Csomagtartó

Krovni nosač

Portbagaj

Μπάρες Οροφής

Taşıyıcı sistem

Багажники на крышу

Portabagagli

Imperiaal

Strešne košare

1.



(E) Contenido embalaje: ¡Verificar!

x1

x1

(GB) Package content: Check!



(F) Contenu d'emballage: Vérifier!



(D) Packungsinhalt: Überprüfen!

(PT) Contéudo embalagem:
Verificar!

x2

x2

(PL) Zawartość opakowania:
sprawdź!



(CZ) Obsah balení: Zkontrolujte!

1x (738-013DI) 130 cm (738-010T) 100 cm
1x (738-013DD) 130 cm

(HU) Csomag tartalma: Ellenőrizd!

x8

x1

(RO) Pachetul contine: Verificati!



(HR) Sadržaj paketa: Provjeri!

(827-412) 126 cm

(716-320) 126 cm

(GR) Ελέγξτε το περιεχόμενο: του
πακέτου!

x6

x2

(TR) Paket içeriğini: Control ediniz!



(RU) Содержание упаковки:
Проверьте!

(813-062)

1x (805-165)
1x (855-198)

(I) Contenuto della confezione:
Controllare!

(NL) Pakket inhoud: Controleer!

(SLO) Vsebina paketa: Preverite!




2.



1 P. 3,4,5,6,7,8,9,10,14,15,16,18,19 (810-118)

2 P. 3,4,5,6,7,8,9,10,11,12,13,19 (810-100)

Ford Transit Connect Van L2 (2013 -->)

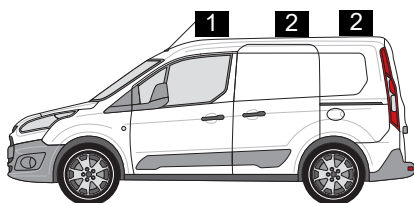


(810-100)
(810-118)



1 P. 3,4,5,6,7,8,9,10,14,15,16,17,18,19 (810-118)

2 P. 3,4,5,6,7,8,9,10,14,15,16,17,18,19 (810-117)


Ford Transit Connect Van Double Cab L2 (2013 -->)

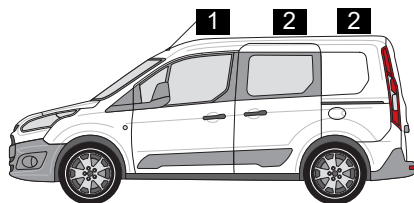


(810-117)
(810-118)

Ford Transit Connect Kombi L2 (2013-->)


Ford Tourneo Connect L2 (2013-->)

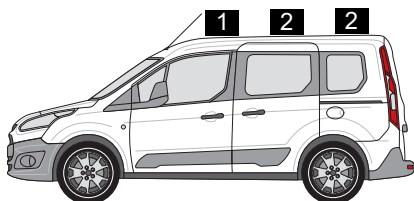



3. 

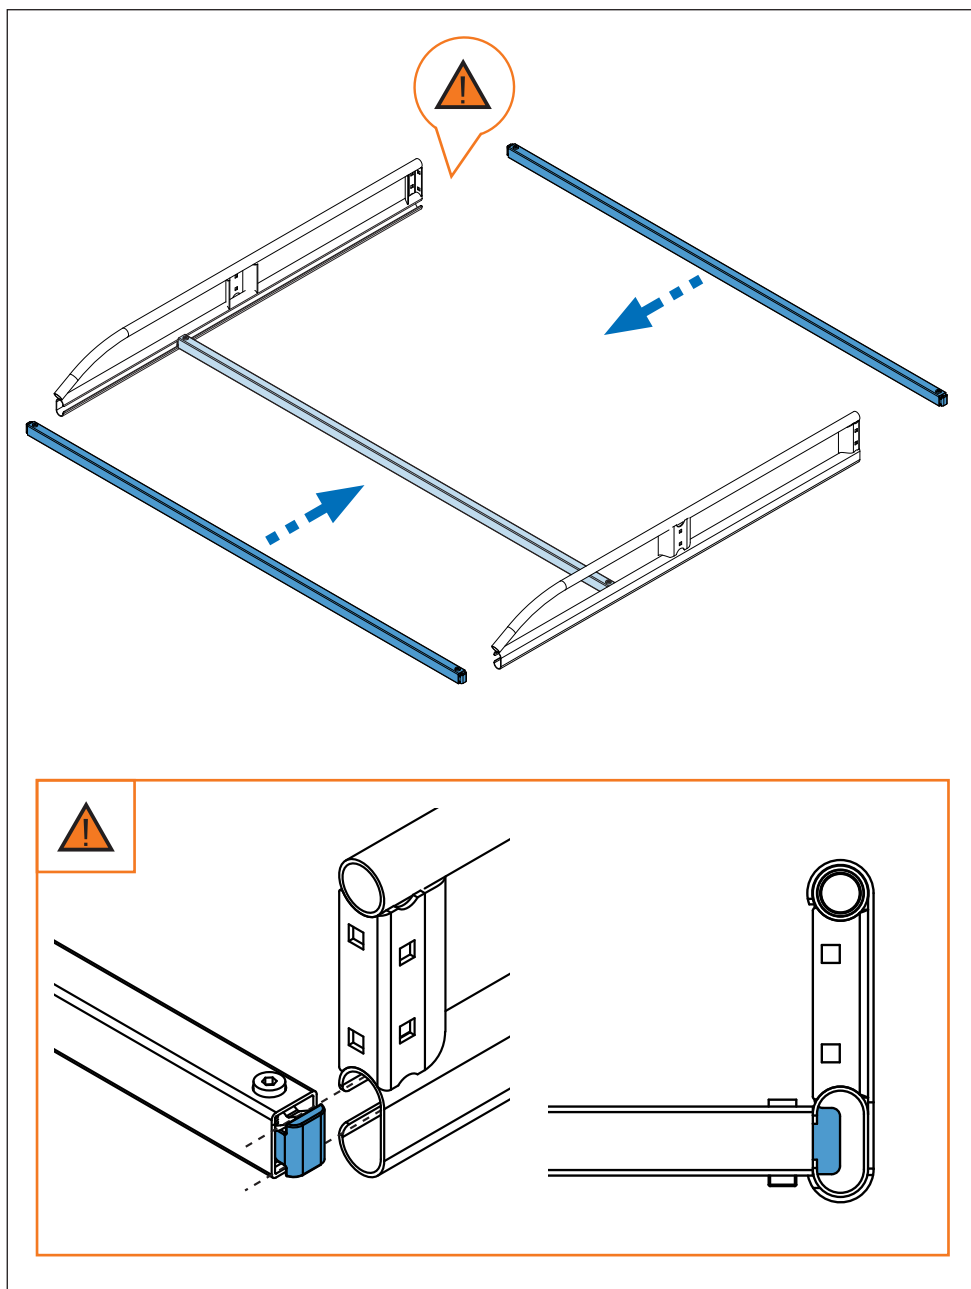


4. 

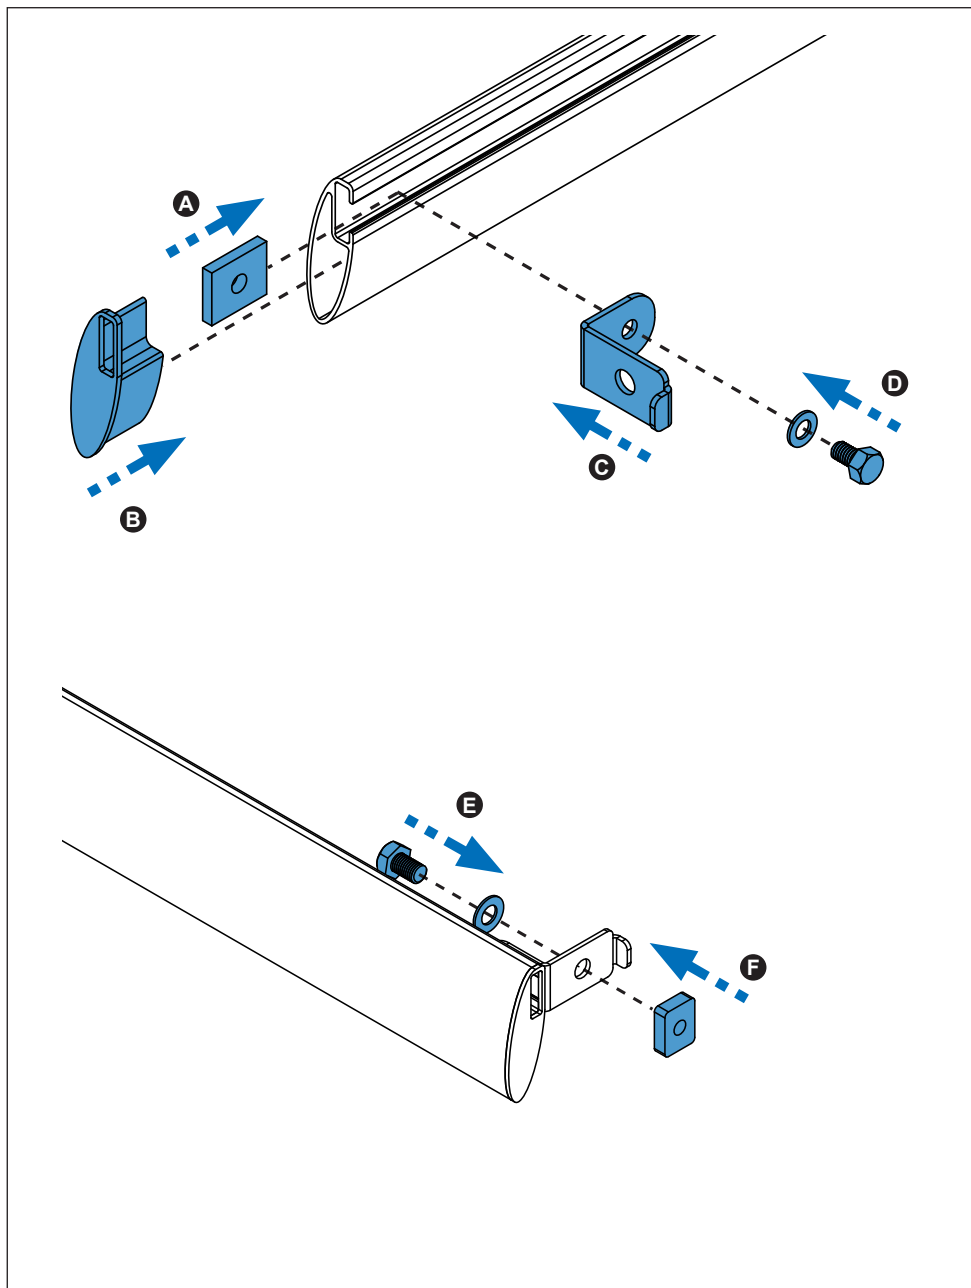



5.

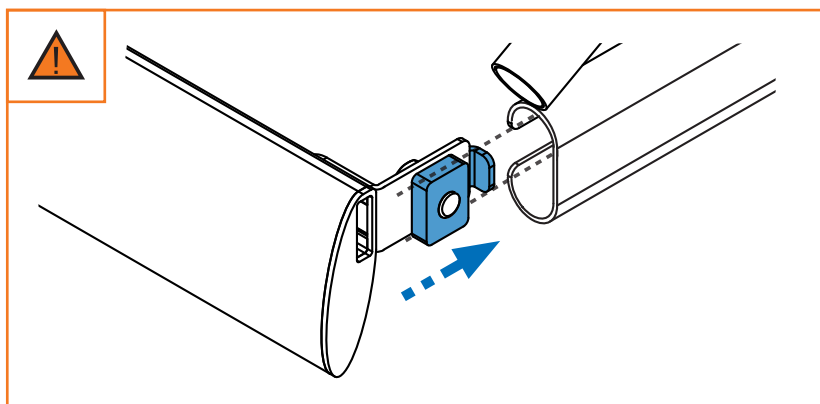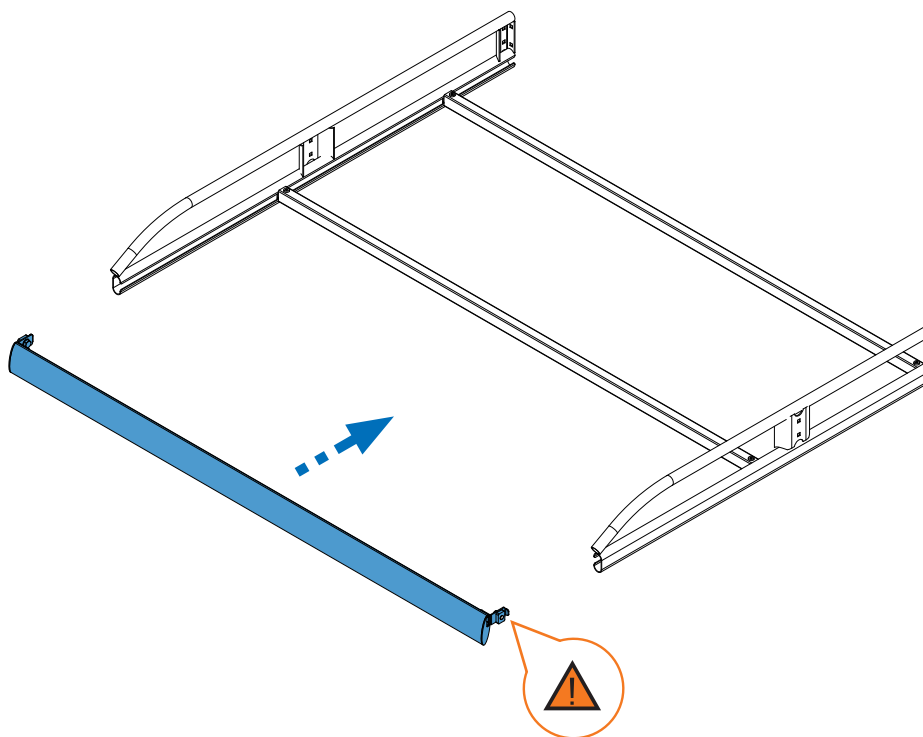



6.

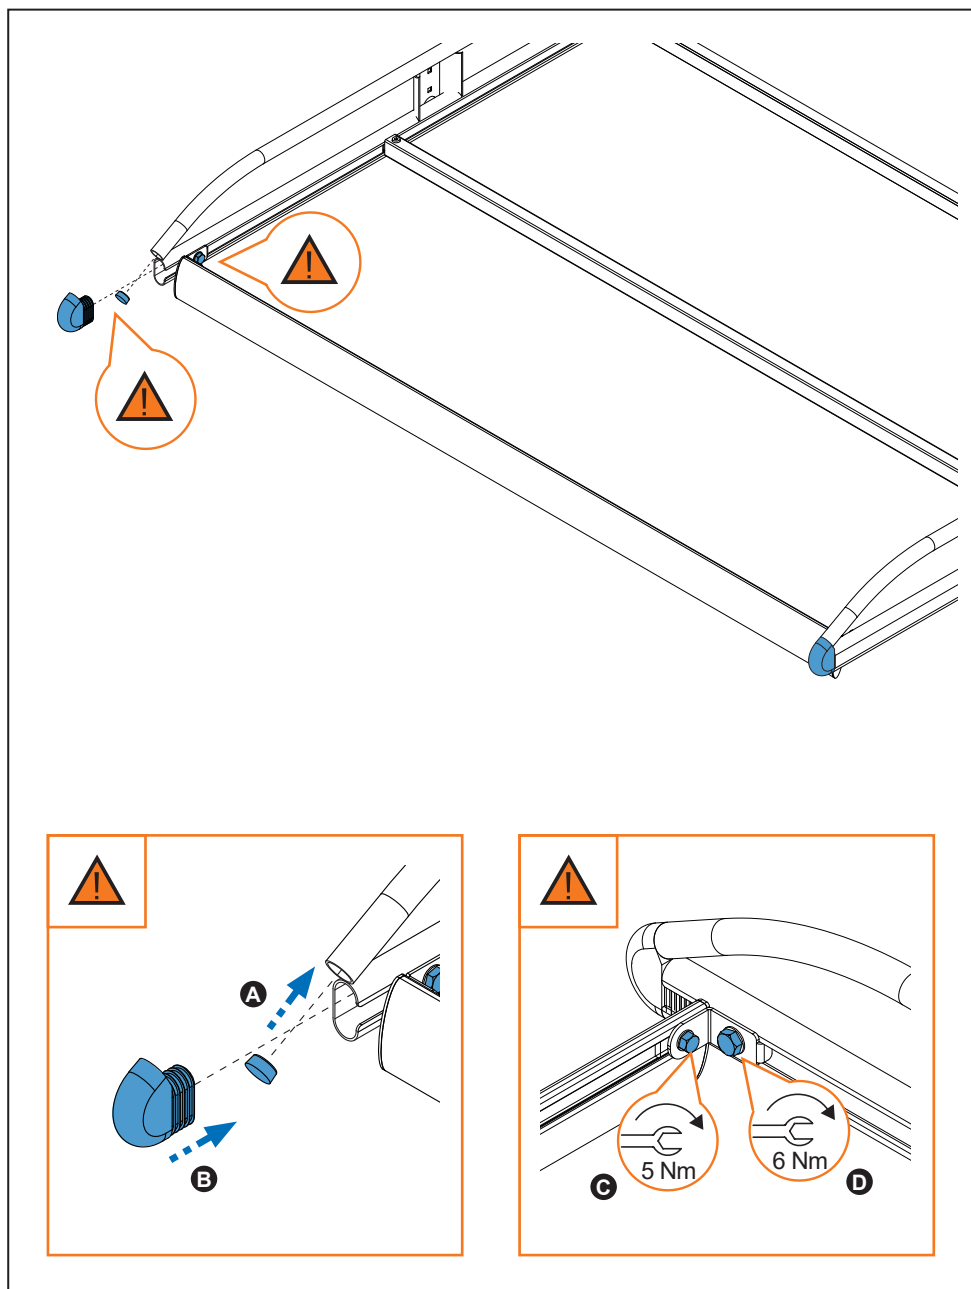


7.

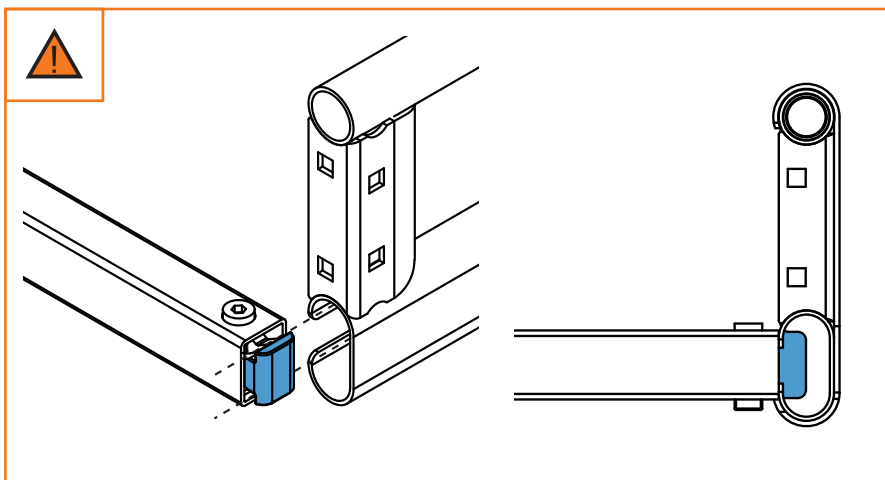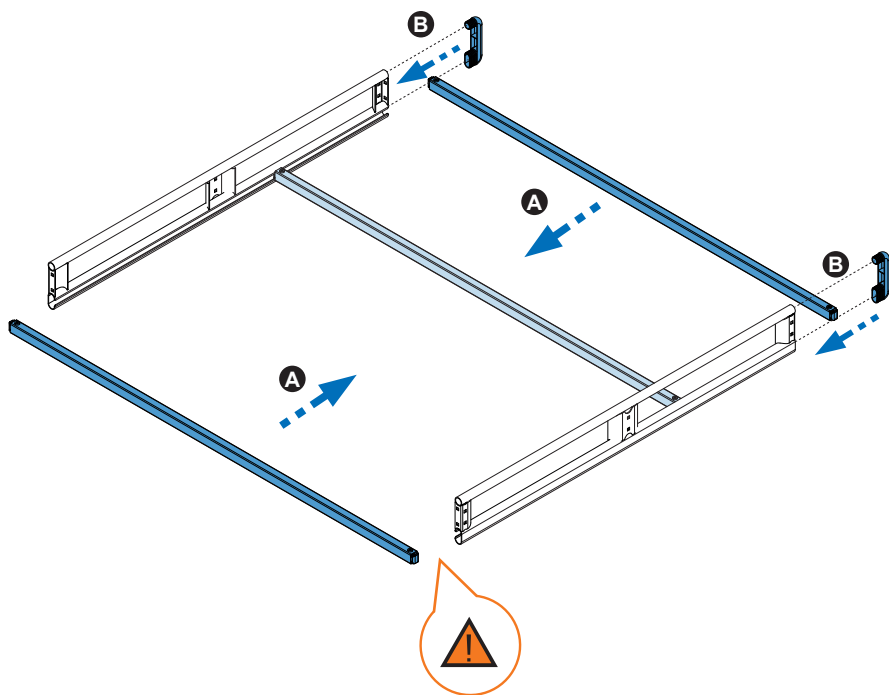


8. 

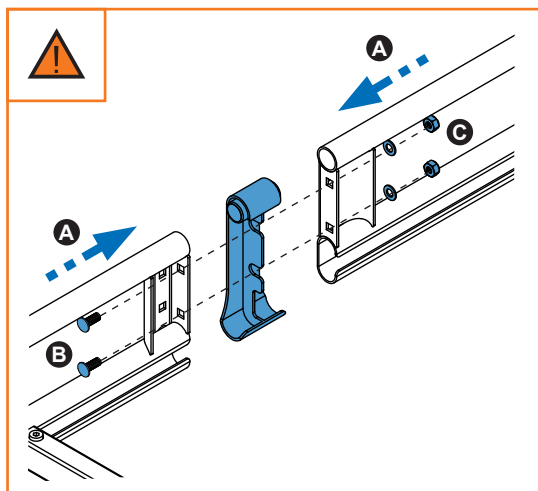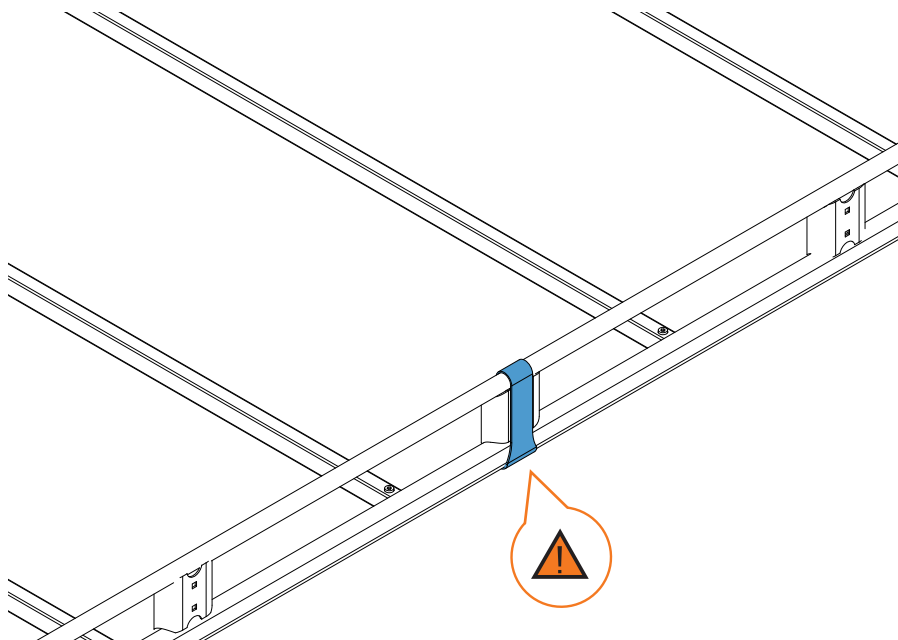


9.

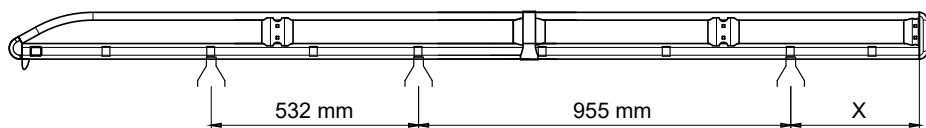




X = 330 mm



X = 170 mm

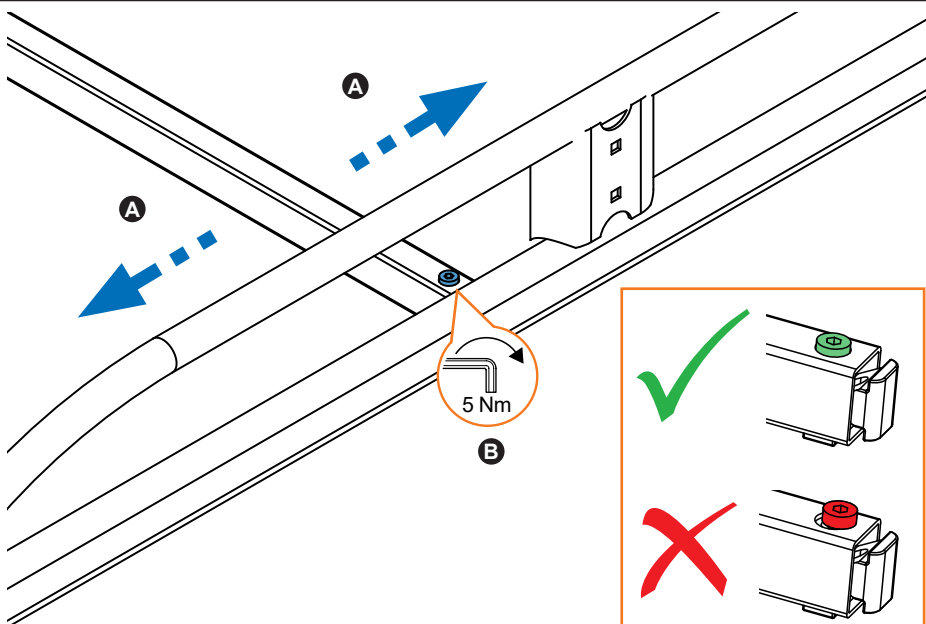


10.

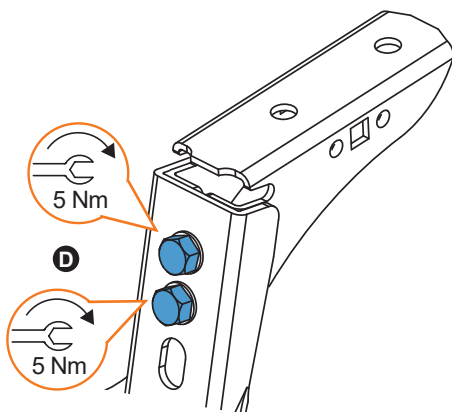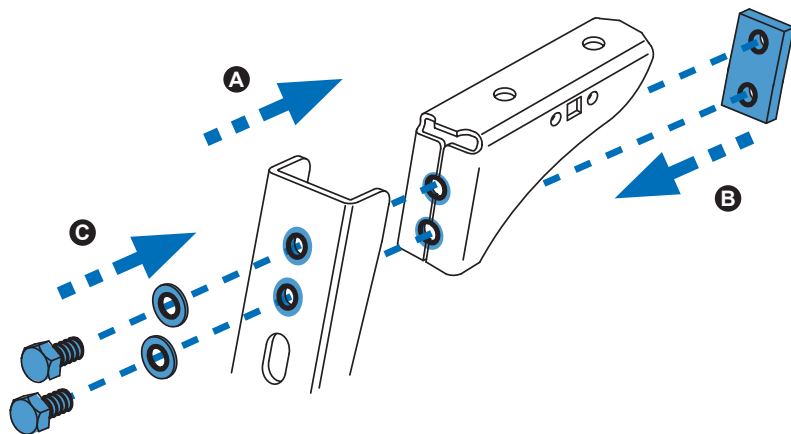

12.




(810-100)

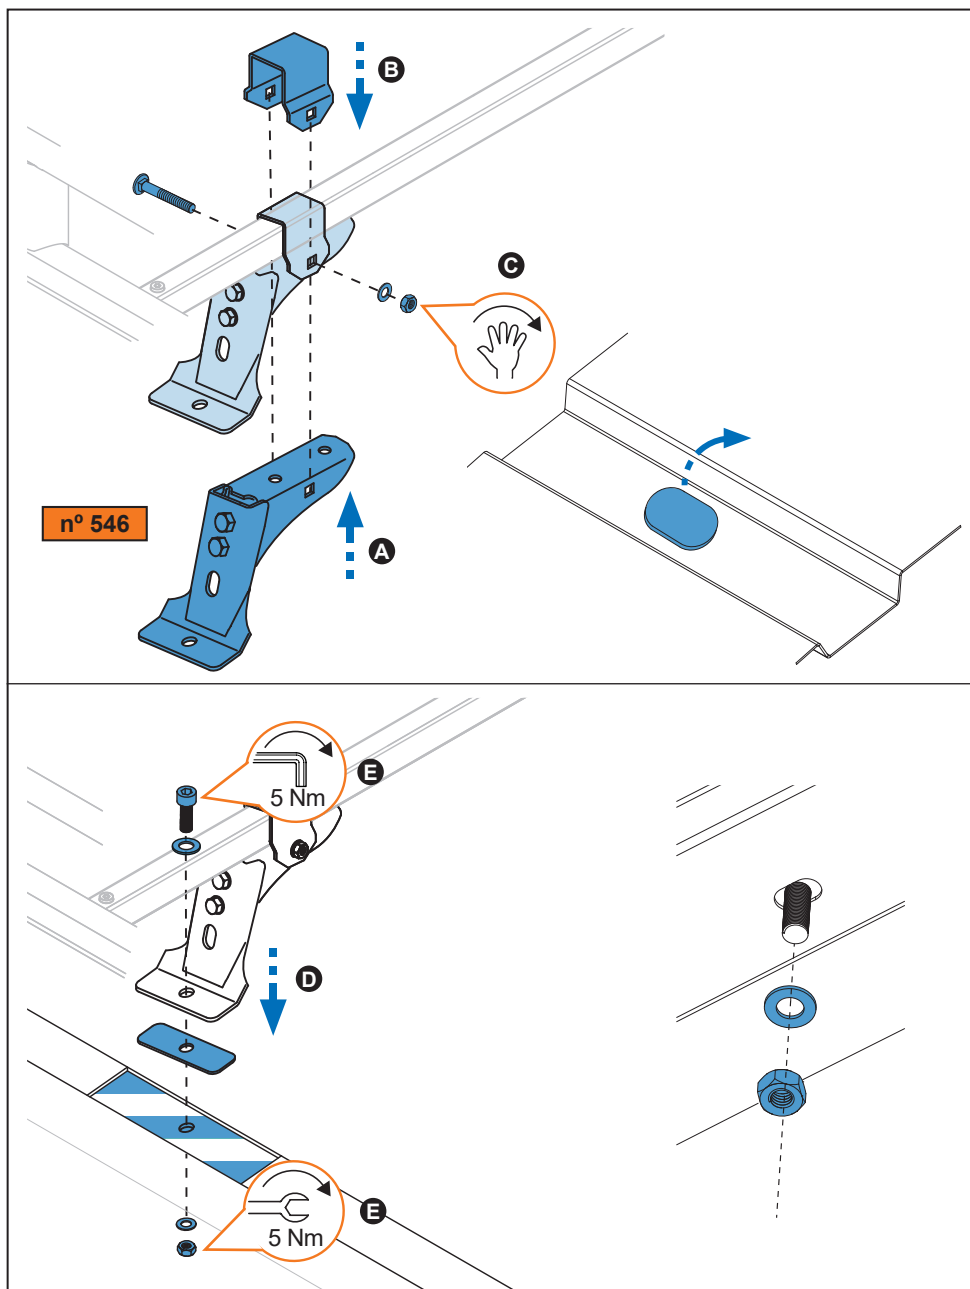

13.



(810-100)


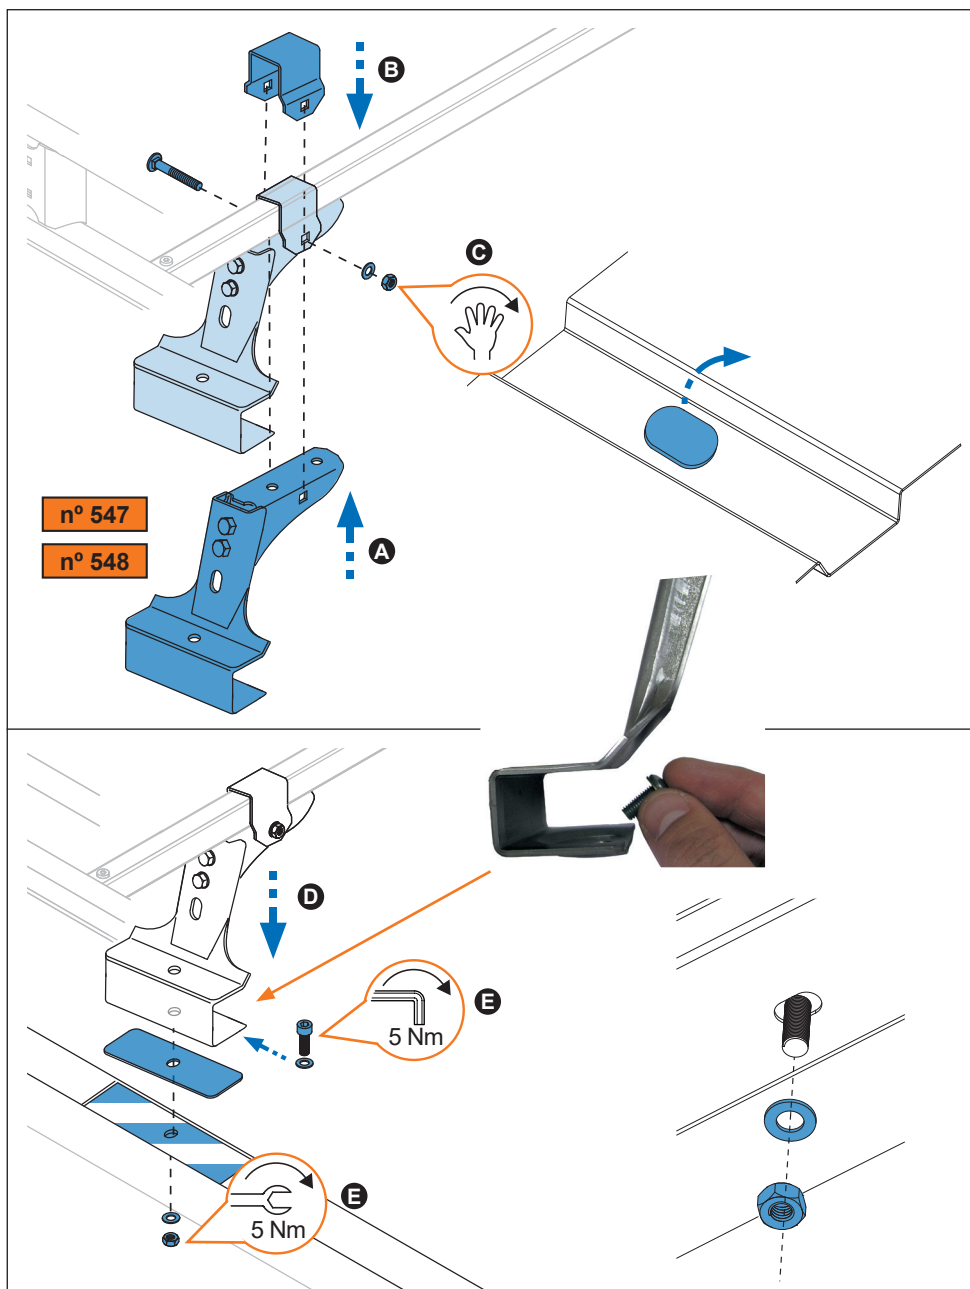


14.



(810-117)




Transit Connect Van Double Cab (2013→)
 Transit Connect Kombi (2013→)
 Tourneo Connect (2013→)

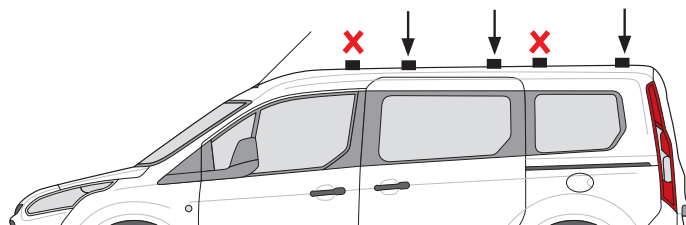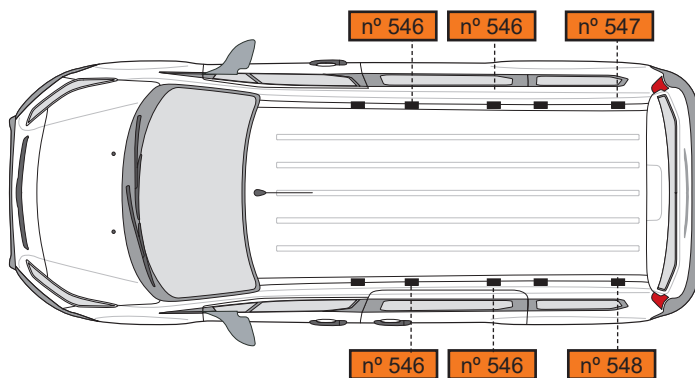

15.









(810-117)
(810-118)

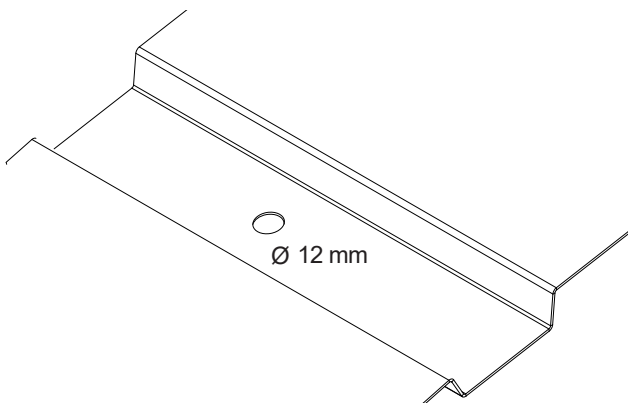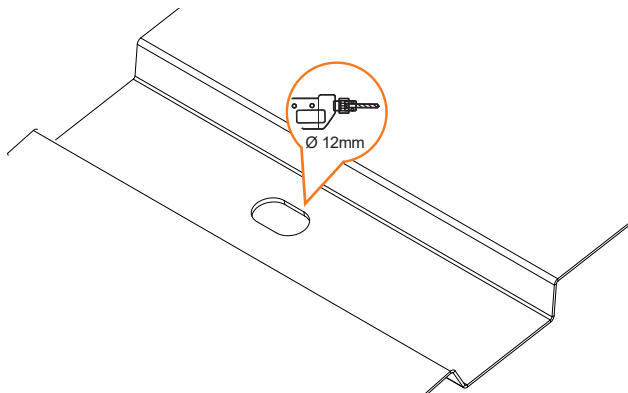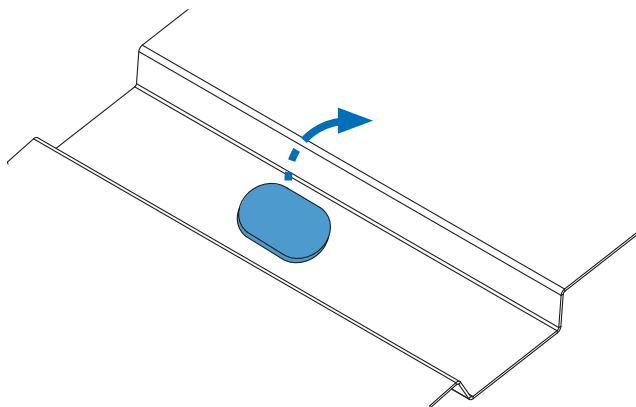

16.




(810-117)
(810-118)

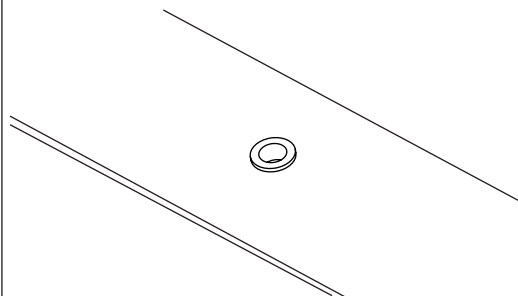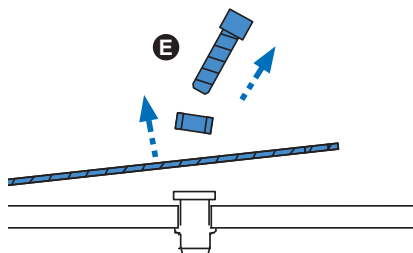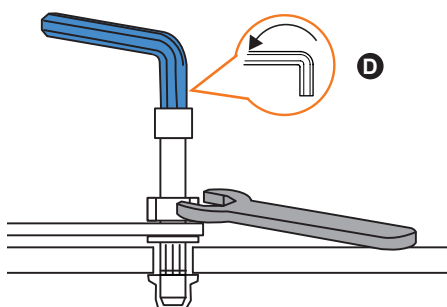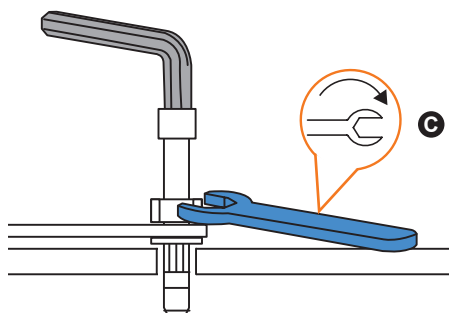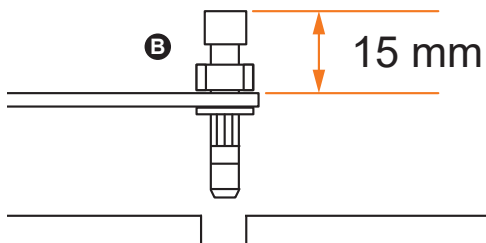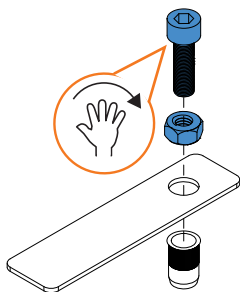

17.




(810-117)
(810-118)

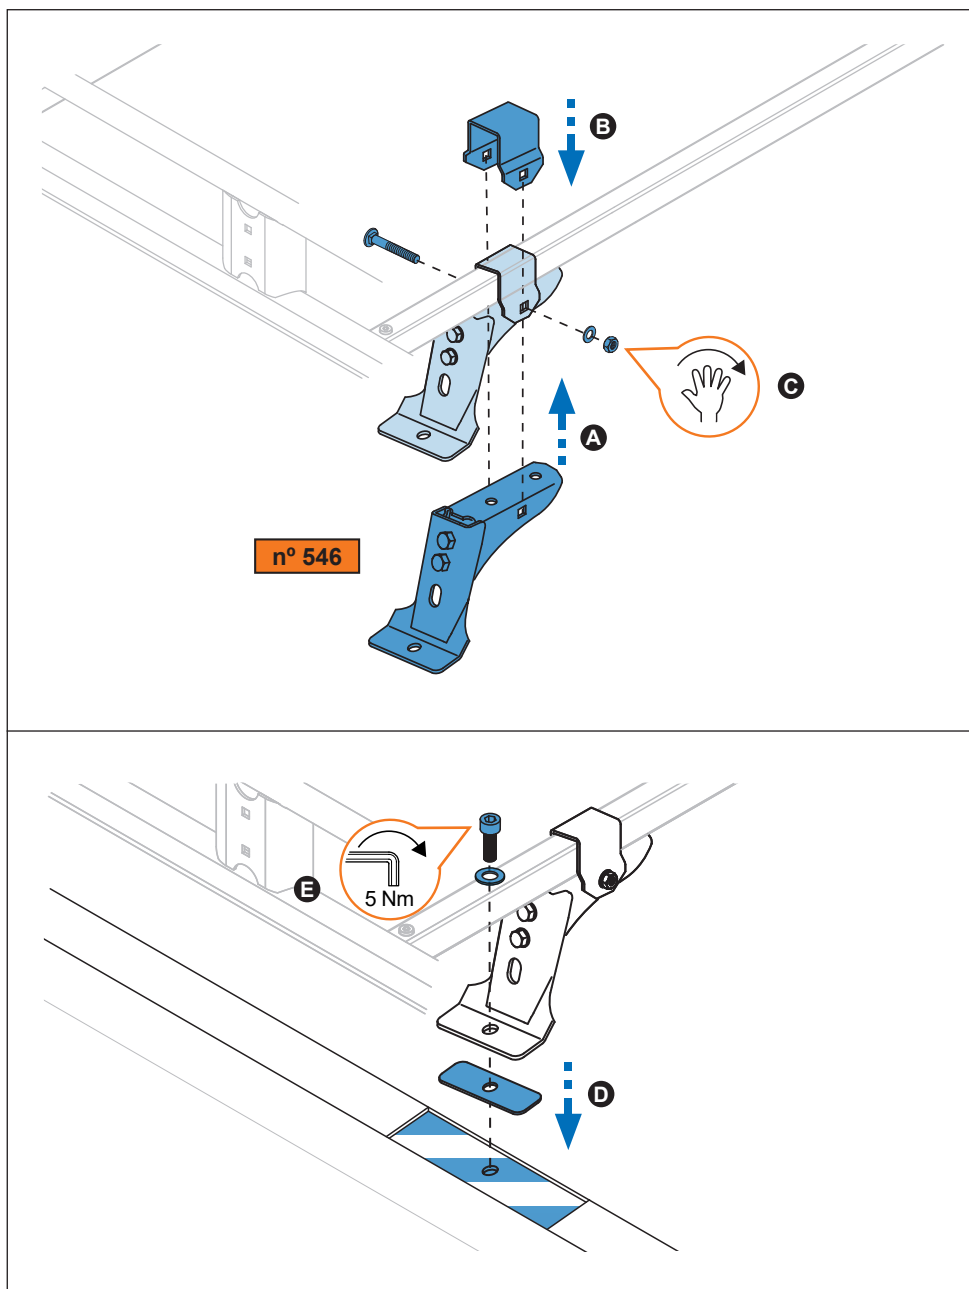

18.



(810-117)
(810-118)

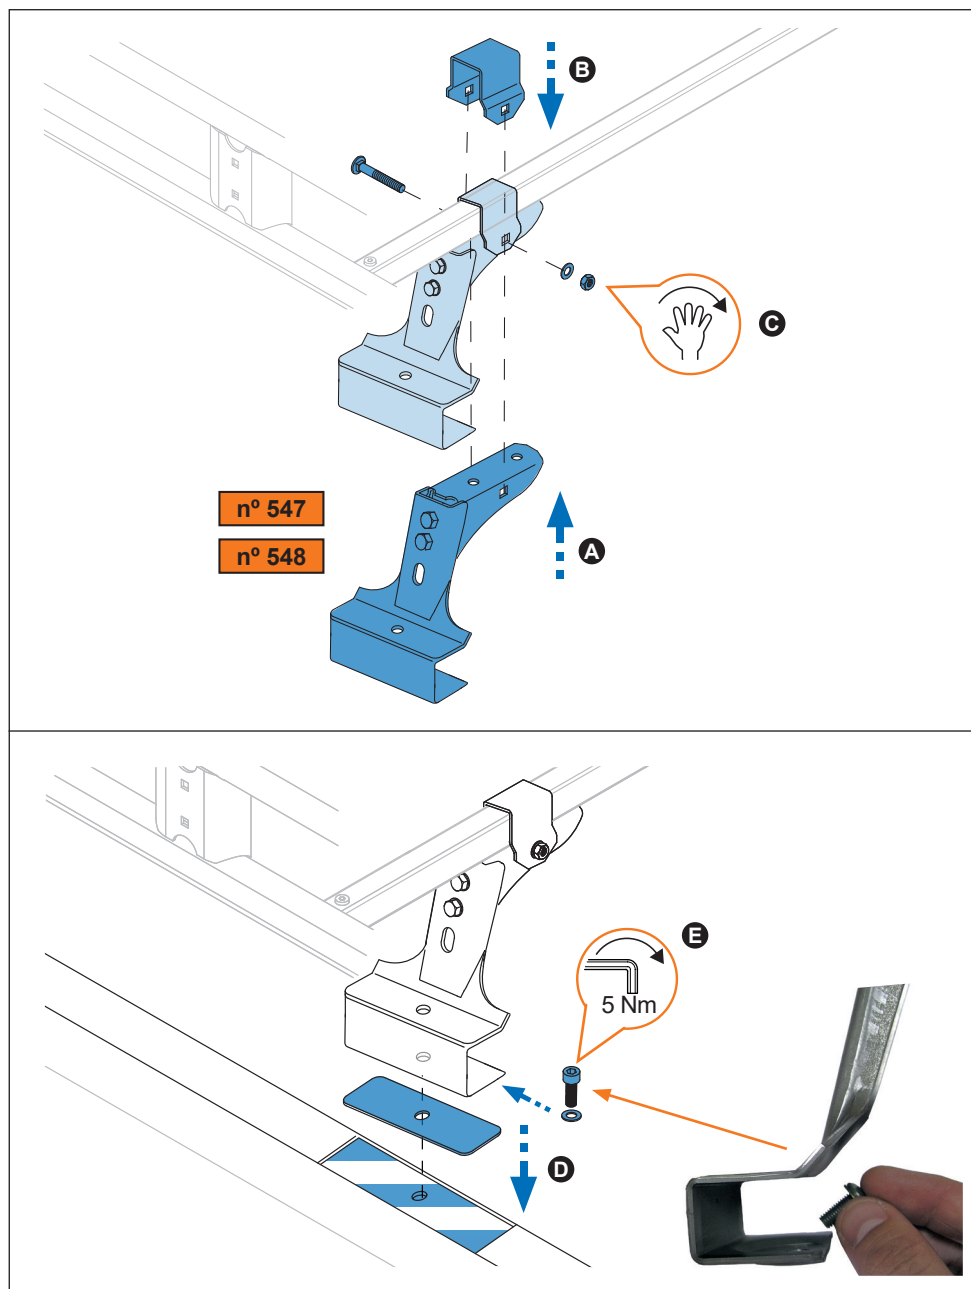

19.

