



|              |                                                           |                        |
|--------------|-----------------------------------------------------------|------------------------|
| <b>(E)</b>   | <b>Instrucción de montaje</b><br>¡Leer primero!           | Barras de acero        |
| <b>(GB)</b>  | <b>Assembly instructions</b><br>Read first!               | Steel bars             |
| <b>(F)</b>   | <b>Instruction de montage</b><br>Lire en premier!         | Barres d'acier         |
| <b>(D)</b>   | <b>Montageanleitung</b><br>Zuerst lesen!                  | Stahldachträger        |
| <b>(PT)</b>  | <b>Instruções de montagem</b><br>Ler primeiro!            | Barras d'aço           |
| <b>(PL)</b>  | <b>Instrukcja montażu</b><br>Najpierw przeczytaj!         | Belki stalowe          |
| <b>(CZ)</b>  | <b>Montážní návod</b><br>Čtěte pozorně!                   | Ocelové střešní nosiče |
| <b>(HU)</b>  | <b>Szerelési Utasítás</b><br>Először olvassd el!          | Acél rudak             |
| <b>(RO)</b>  | <b>Instructiuni de montaj</b><br>Intai cititi!            | Čelične šipke          |
| <b>(HR)</b>  | <b>Detaljne upute</b><br>Prvo procitati!                  | Bare din otel          |
| <b>(GR)</b>  | <b>Διαβάστε προσεκτικά τις</b><br>Οδηγίες Συναρμολόγησης! | Μπάρες Σιδερέ          |
| <b>(TR)</b>  | <b>Öncelikle montaj:</b><br>Talimatlarını okuyunuz!       | Çelik barlar           |
| <b>(RU)</b>  | <b>Инструкции по монтажу</b><br>Сначала прочитайте!       | Стальные поперечины    |
| <b>(I)</b>   | <b>Istruzioni di montaggio</b><br>Leggere per primo!      | Barre d'acciaio        |
| <b>(NL)</b>  | <b>Montagehandleiding</b><br>Eerst lezen!                 | Stalen dakdragers      |
| <b>(SLO)</b> | <b>Navodila za sestavljanje</b><br>Preberite!             | Jeklene prečke         |

# 922-450

Lv7 2018-r4

Modelo-model:



## Cruz Cargo SPro

Lote-Lot-Lot-Lot:

**01-14**

Peso-Weight-Poids-Gewicht:

**6,56 kg**

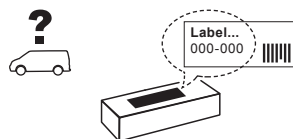

CEE - EEC type approval:

**(E9)** 26 R- 03 3022




**CITY CRASH** (✓)  
According to ISO/ P. AS 11154:2006

CRUZBER SA  
ES-A14018311  
P.I. Las Salinas II  
14960 - Rute - Spain  
[www.cruzber.com](http://www.cruzber.com)



1.



(E) Contenido embalaje: ¡Verificar!

x 1

x 1

(GB) Package content: Check!



(F) Contenu d'emballage: Vérifier!


(D) Packungsinhalt: Überprüfen!

(PT) Contéudo embalagem:  
Verificar!

x 3

x 4

(PL) Zawartość opakowania:  
sprawdź!

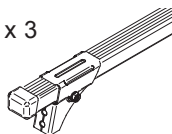

(CZ) Obsah balení: Zkontrolujte!

(823-323) 120 cm

1x (810-100)

(HU) Csomag tartalma: Ellenőrizd!

1x (810-117)

(RO) Pachetul contine: Verificati!

1x (810-118)

1x (805-033)

(HR) Sadržaj paketa: Provjeri!

x 6

x 6

(GR) Ελέγξτε το περιεχόμενο του  
πακέτου!



(TR) Paket içeriğini: Kontrol ediniz!

2x (817-546)

(813-061)

2x (817-547)

2x (817-548)


(RU) Содержание упаковки:  
Проверьте!

(I) Contenuto della confezione:  
Controllare!


(NL) Pakket inhoud: Controleer!

(SLO) Vsebina paketa: Preverite!


## 2.

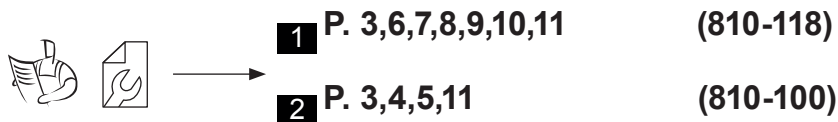


Ford Transit Connect Van L2 (2013 -->)

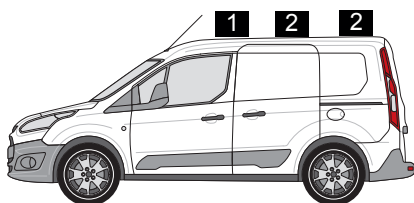

(810-100)  
(810-118)

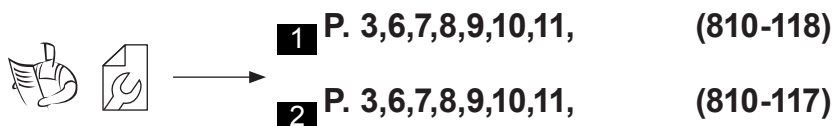


Ford Transit Connect Van Double Cab L2 (2013 -->)

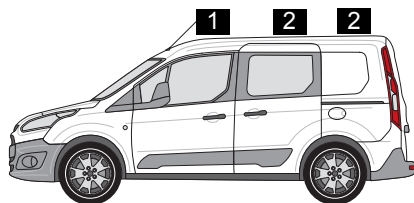


(810-117)  
(810-118)


Ford Transit Connect Kombi L2 (2013-->)  
Ford Tourneo Connect L2 (2013-->)

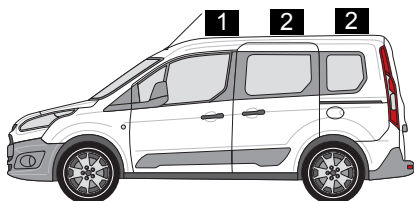

### 3.

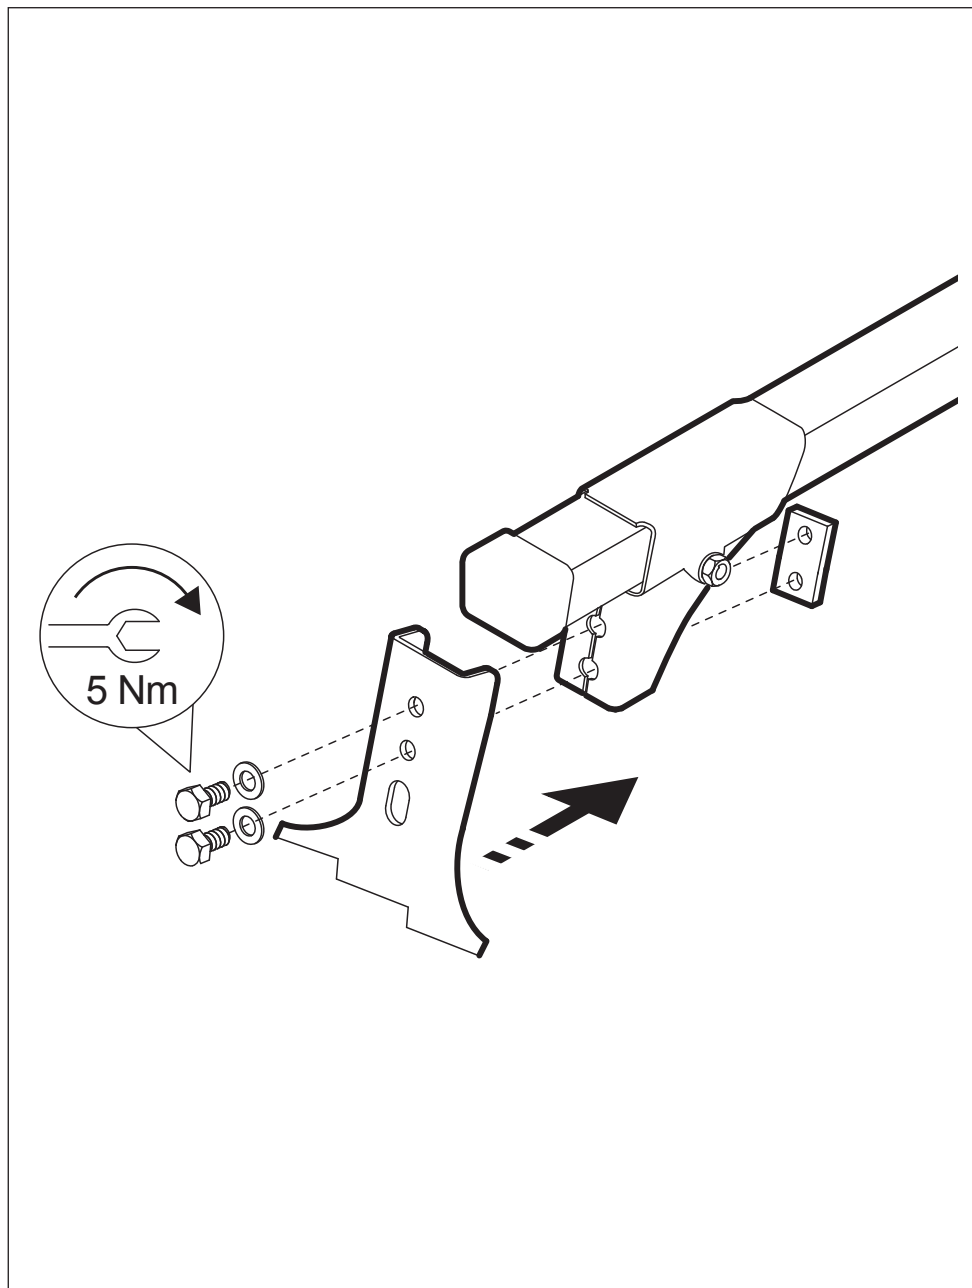


Transit Connect Van (2013 -->)

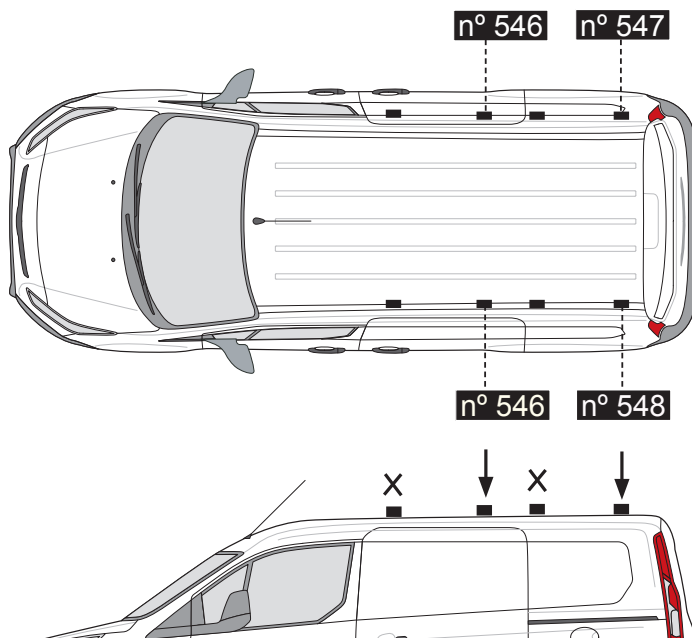


5. 





(810-100)

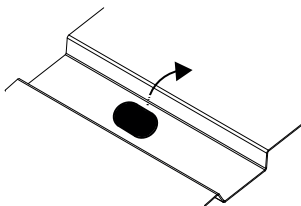

n° 546

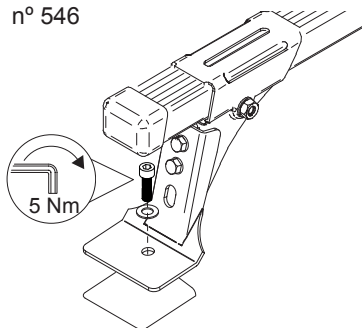

n° 547  
n° 548

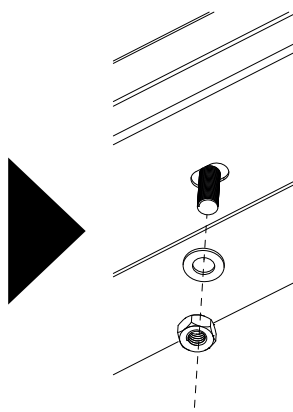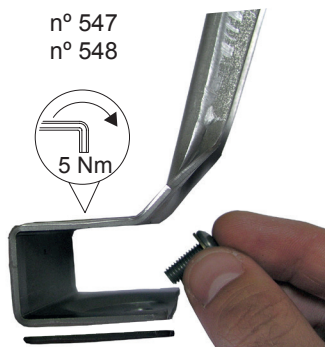


6.



(810-117)

Transit Connect Van Double Cab (2013 -->)  
Transit Connect Kombi (2013-->)  
Tourneo Connect (2013-->)

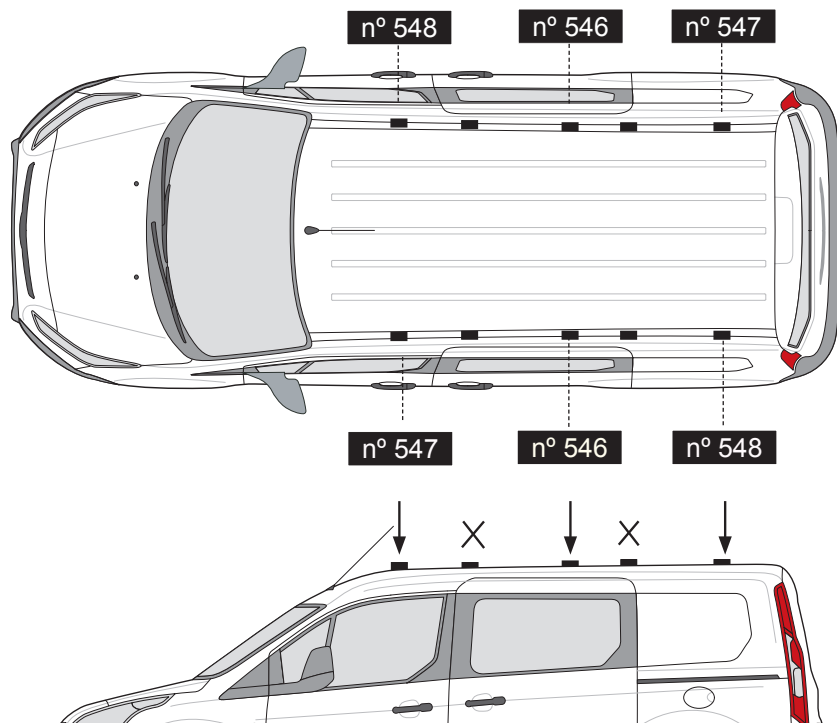


7.



(810-117)


Transit Connect Van (2013 -->)

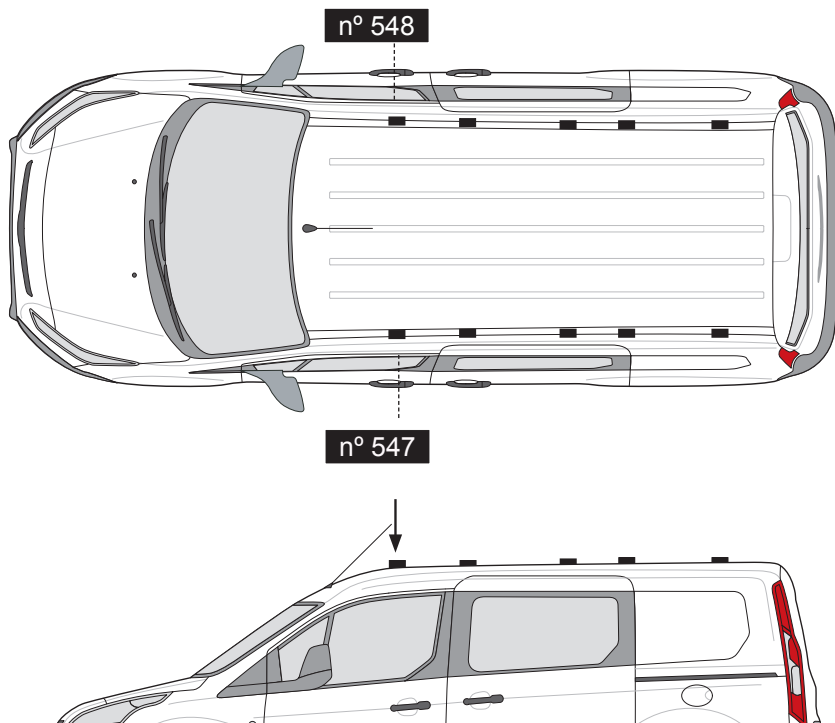

8.









(810-117)  
(810-118)

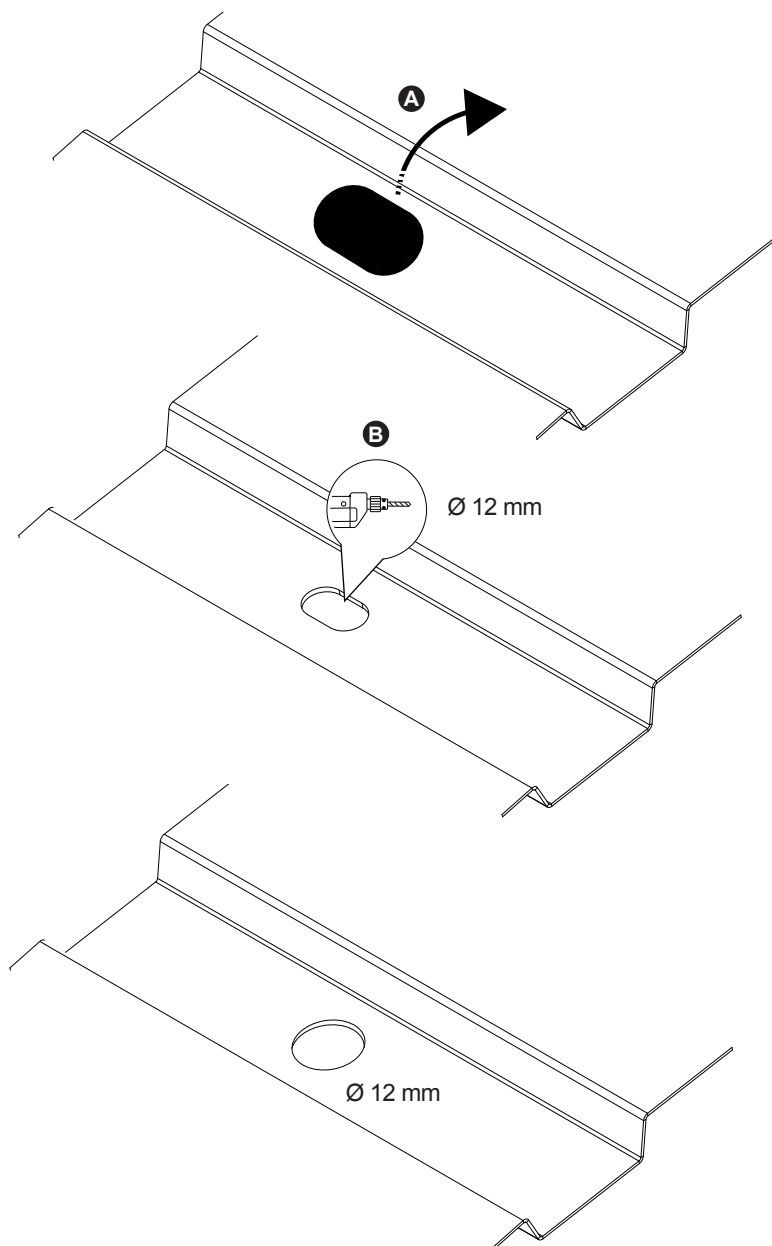

9.



(810-117)  
(810-118)

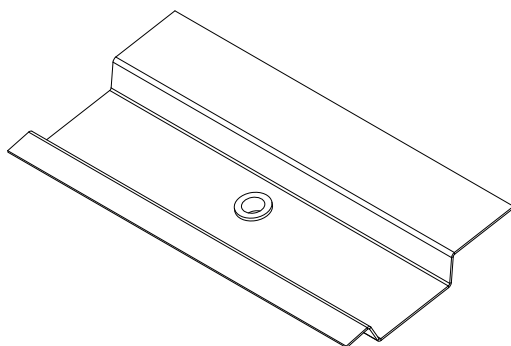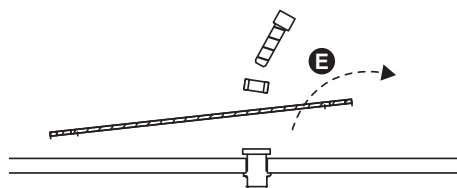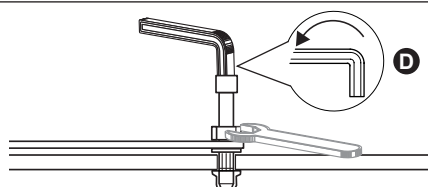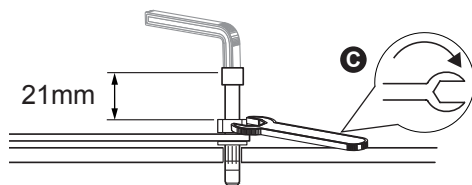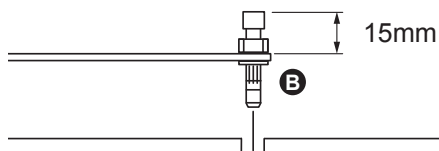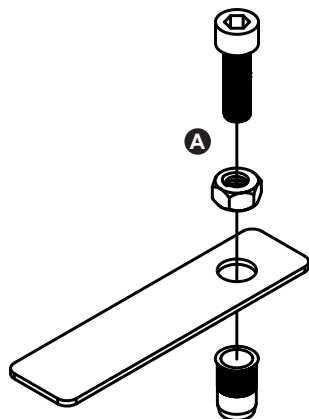


10.





(810-117)  
(810-118)

n° 546

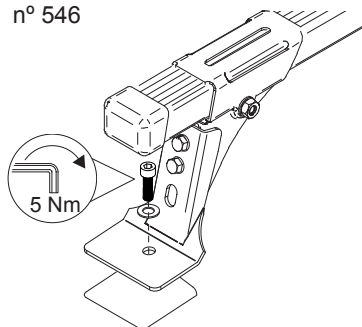

n° 547

n° 548

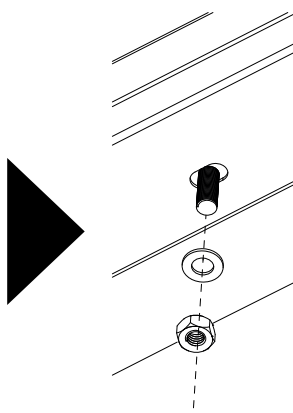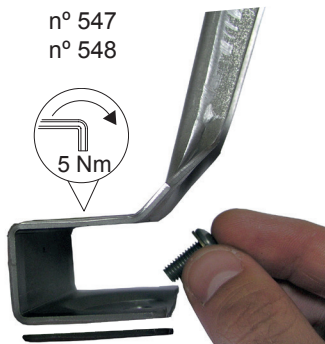

11.

