



Thule Rapid System Kit 1033





> Instructions

VOLVO S40, 4-dr Sedan, 96-99, 00-01, 02-03 / *00-04

VOLVO V40, 5-dr Estate, 96-99, 00-01, 02-03

VOLVO V40, 5-dr Wagon, *00-04

*North America

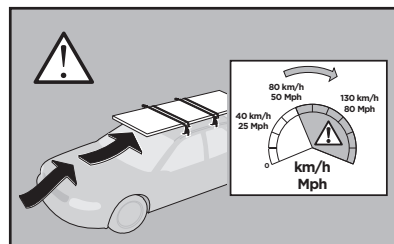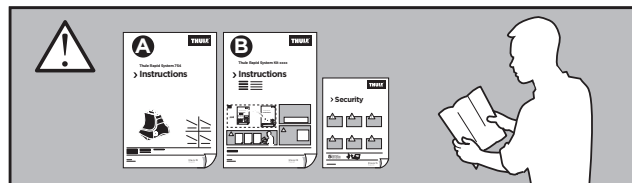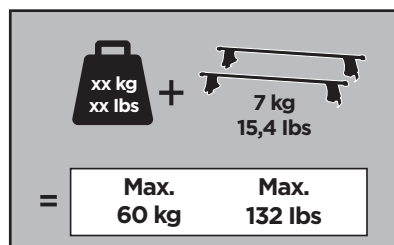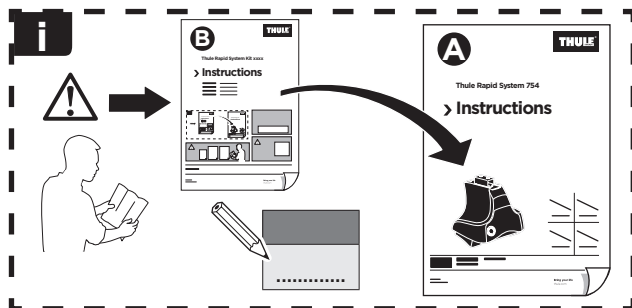


ISO 11154-E

141033

C.20121022
519-1033-02



Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

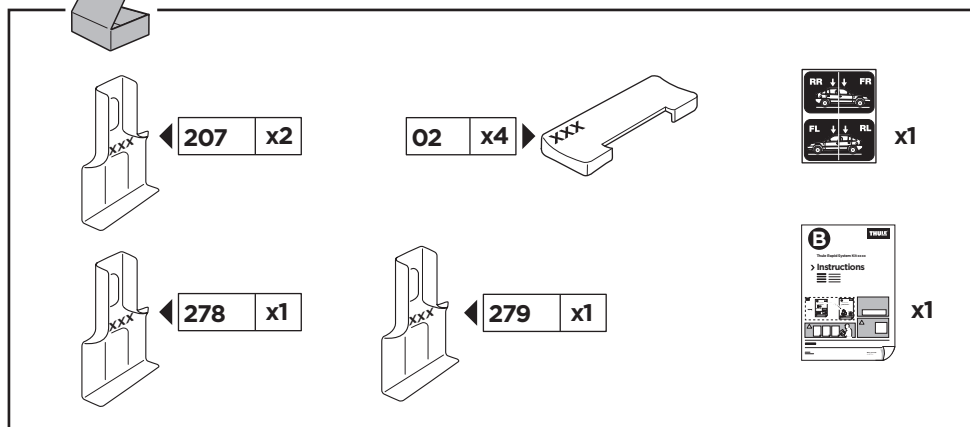

1

	X (scale)	X (mm)	X (inch)
VOLVO S40 , 4-dr Sedan, 96-99, 00-01, 02-03 / *00-04	29	941	37
VOLVO V40 , 5-dr Estate, 96-99, 00-01, 02-03	29	941	37
VOLVO V40 , 5-dr Wagon, *00-04	29	941	37

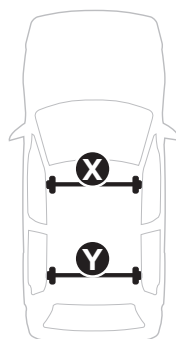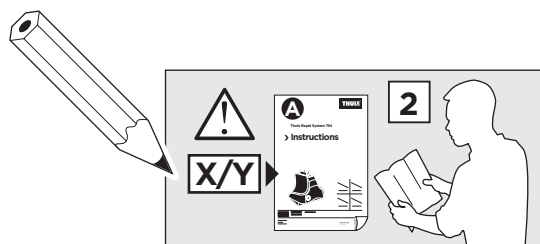



	Y (scale)	Y (mm)	Y (inch)
VOLVO S40 , 4-dr Sedan, 96-99, 00-01, 02-03 / *00-04	25	901	35 1/2
VOLVO V40 , 5-dr Estate, 96-99, 00-01, 02-03	24,5	896	35 1/4
VOLVO V40 , 5-dr Wagon, *00-04	24,5	896	35 1/4

2



VOLVO S40, 4-dr Sedan, 96-99, 00-01, 02-03 / *00-04

VOLVO V40, 5-dr Estate, 96-99, 00-01, 02-03

VOLVO V40, 5-dr Wagon, *00-04

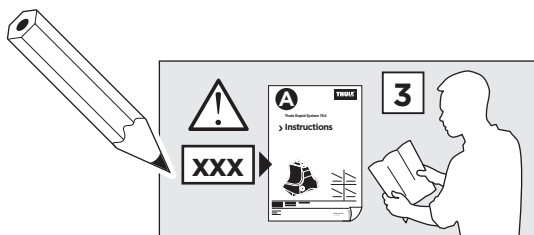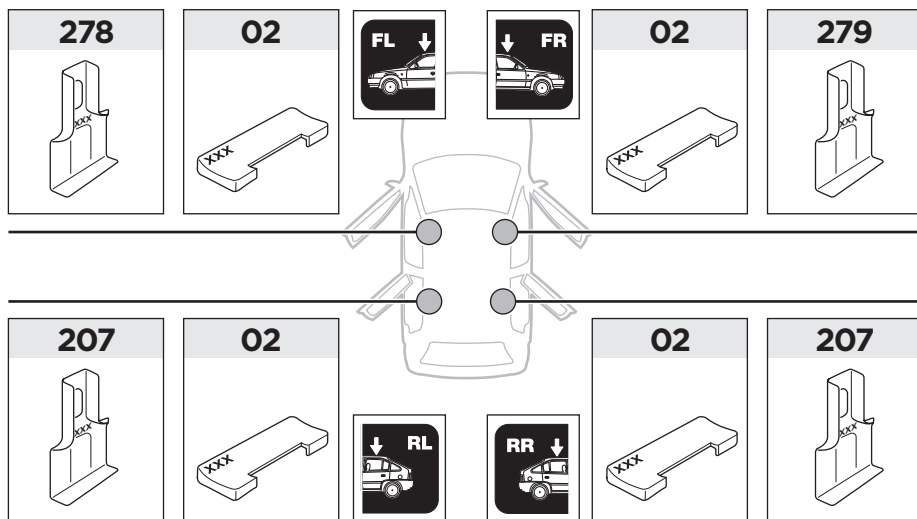

3

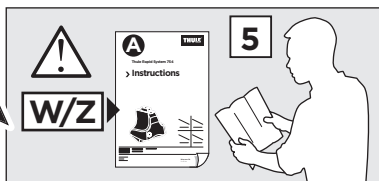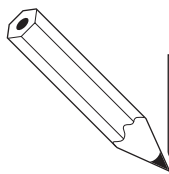

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO S40 , 4-dr Sedan, 96-99, 00-01, 02-03 / *00-04	210	650	8 1/4	25 5/8
VOLVO V40 , 5-dr Estate, 96-99, 00-01, 02-03	210	700	8 1/4	27 1/2
VOLVO V40 , 5-dr Wagon, *00-04	210	700	8 1/4	27 1/2

