
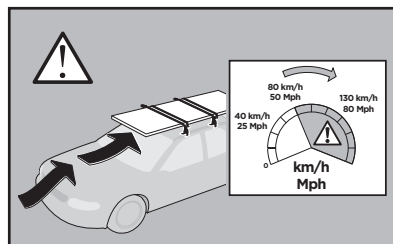
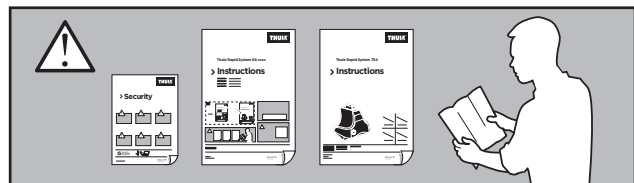
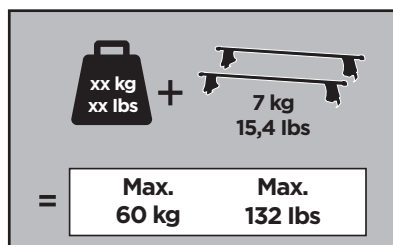


Thule Rapid System Kit 1035

> Instructions

VOLKSWAGEN Passat, 4-dr Sedan, 97-00 / *98-01

*North America

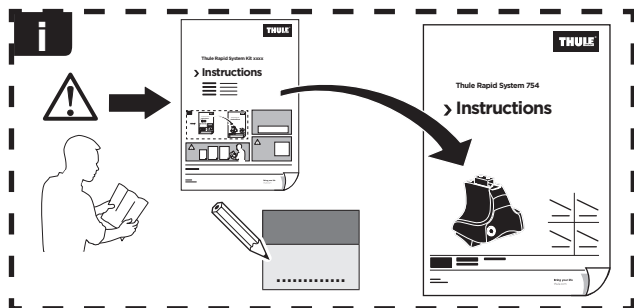

ISO 11154-E


141035
C.2013/0117
519-1035-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



23 x2



24 x2




100 x2



82 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	33	981	38 ⁵/₈

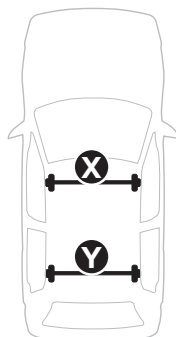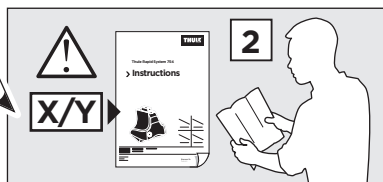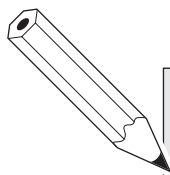



	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	32,5	976	38 ³/₈

2

VOLKSWAGEN Passat, 4-dr Sedan, 97-00 / *98-01

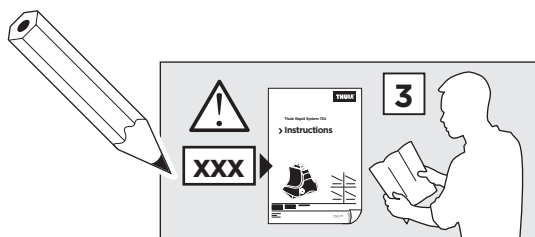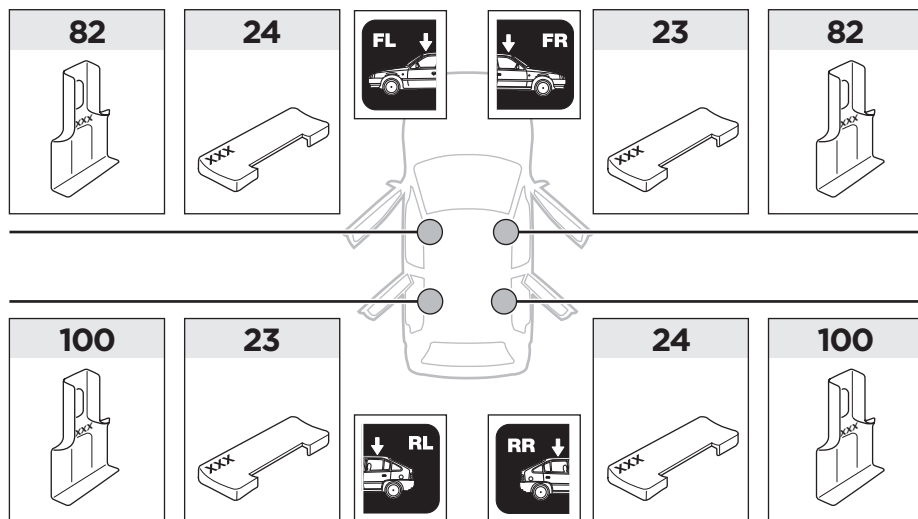

3

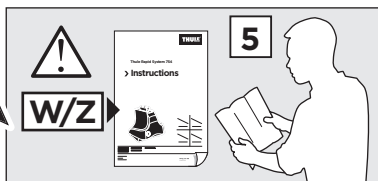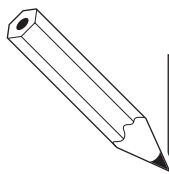

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLKSWAGEN Passat , 4-dr Sedan, 97-00 / *98-01	280	680	11	26 ³/₄

