
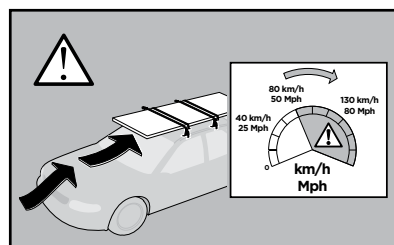
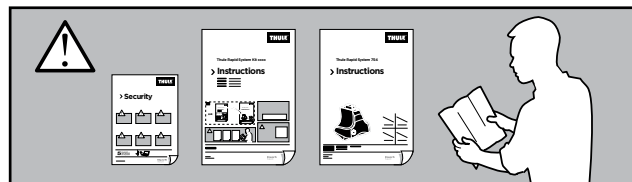
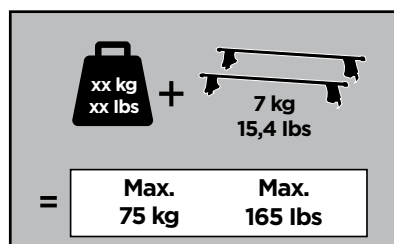


Thule Rapid System Kit 1036

> Instructions

RENAULT Mégane Scénic, 5-dr Estate, 97-02

RENAULT Scénic RX4, 5-dr Estate, 00-02

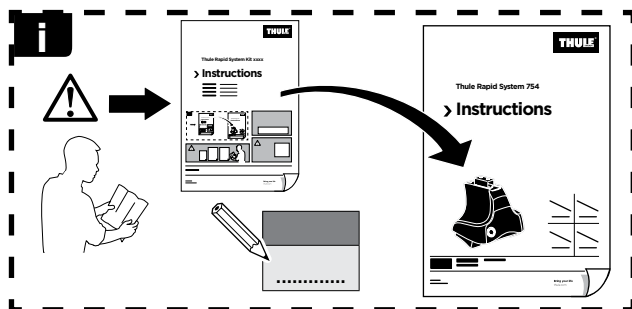


ISO 11154-E

141036

C.20121022
519-1036-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com




111 x2



x1






112 x2



x1

1

	X (scale)	X (mm)	X (inch)
RENAULT Mégane Scénic , 5-dr Estate, 97-02	33,5	986	38 7/8
RENAULT Scénic RX4 , 5-dr Estate, 00-02	33,5	986	38 7/8

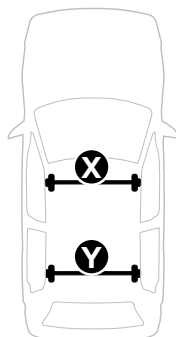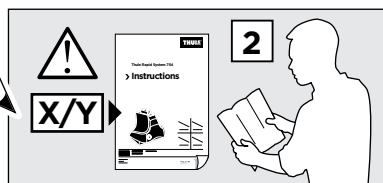
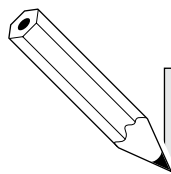


	Y (scale)	Y (mm)	Y (inch)
RENAULT Mégane Scénic , 5-dr Estate, 97-02	34	991	39
RENAULT Scénic RX4 , 5-dr Estate, 00-02	34	991	39



2

RENAULT Mégane Scénic, 5-dr Estate, 97-02

RENAULT Scénic RX4, 5-dr Estate, 00-02

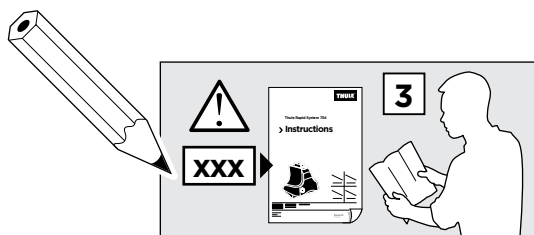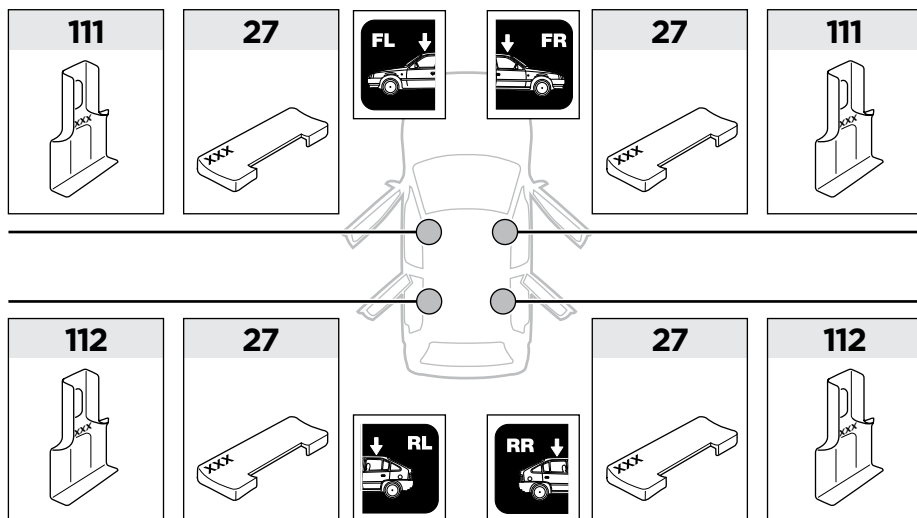

3

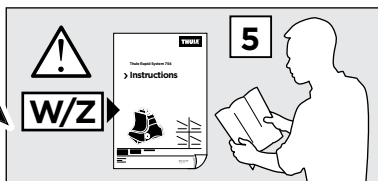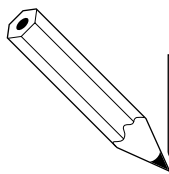

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Mégane Scénic , 5-dr Estate, 97-02	350	700	13 ³/₄	27 ¹/₂
RENAULT Scénic RX4 , 5-dr Estate, 00-02	350	700	13 ³/₄	27 ¹/₂

