
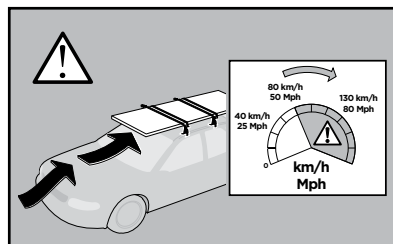
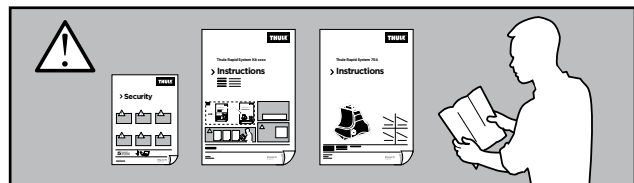
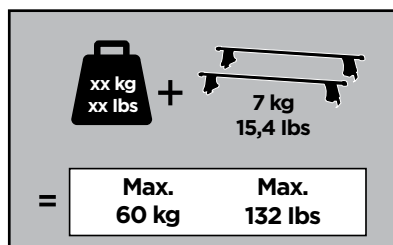


Thule Rapid System Kit 1038

> Instructions

AUDI A3, 3-dr Hatchback, 96-99, 00-02

AUDI A3, 5-dr Hatchback, 99-03

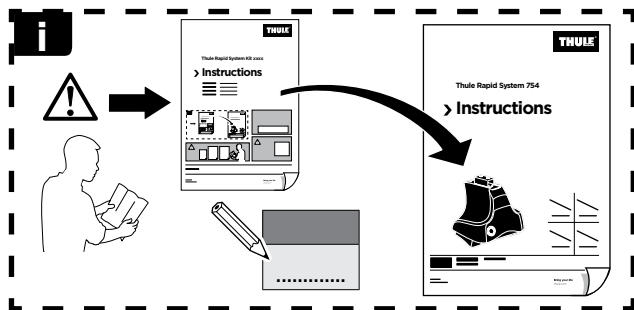

ISO 11154-E

141038


C.20121003
519-1038-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



03 x2



25 x2




90 x2



91 x2





x1





x1

1


	X (scale)	X (mm)	X (inch)
AUDI A3 , 3-dr Hatchback, 96-99, 00-02	28,5	936	36 ⁷ / ₈
AUDI A3 , 5-dr Hatchback, 99-03	28,5	936	36 ⁷ / ₈

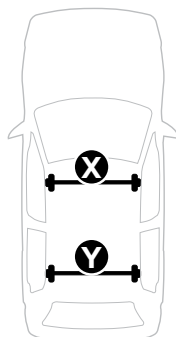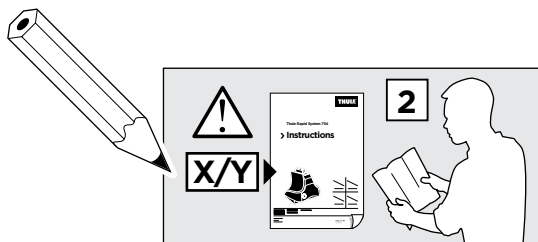

	Y (scale)	Y (mm)	Y (inch)
AUDI A3 , 3-dr Hatchback, 96-99, 00-02	27	921	36 ¹ / ₄
AUDI A3 , 5-dr Hatchback, 99-03	27	921	36 ¹ / ₄

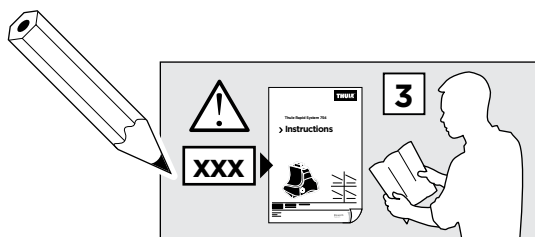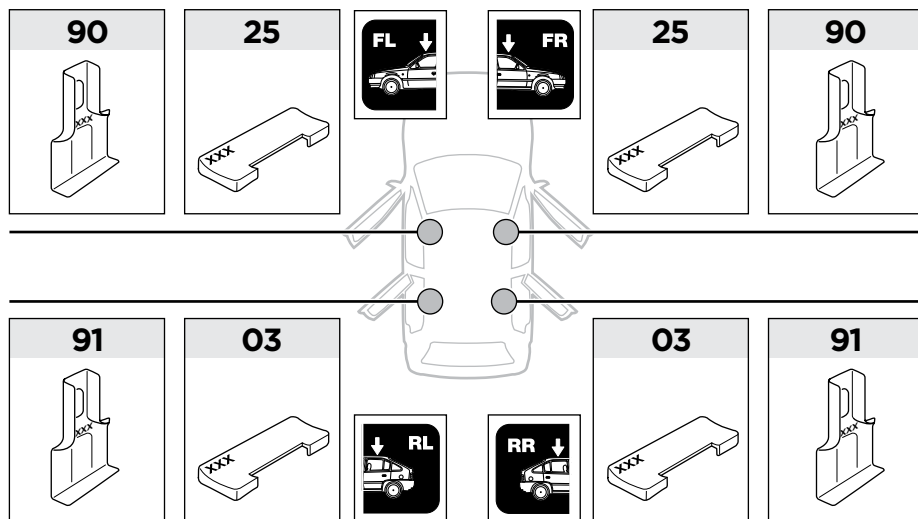
2**AUDI A3, 3-dr Hatchback, 96-99, 00-02****AUDI A3, 5-dr Hatchback, 99-03**

3

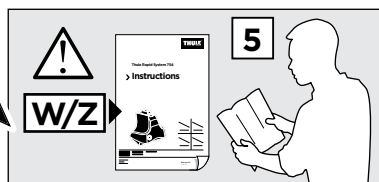


5

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A3, 3-dr Hatchback, 96-99, 00-02	280	700	11	27 1/2
AUDI A3, 5-dr Hatchback, 99-03	280	700	11	27 1/2

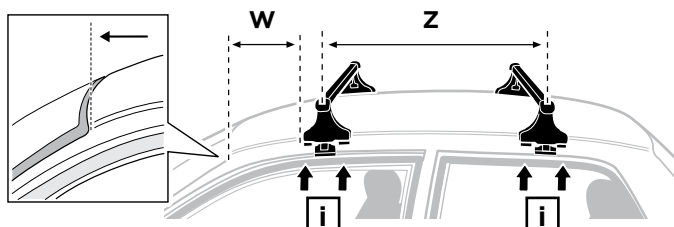

AUDI A3, 3-dr Hatchback, 96-99, 00-02

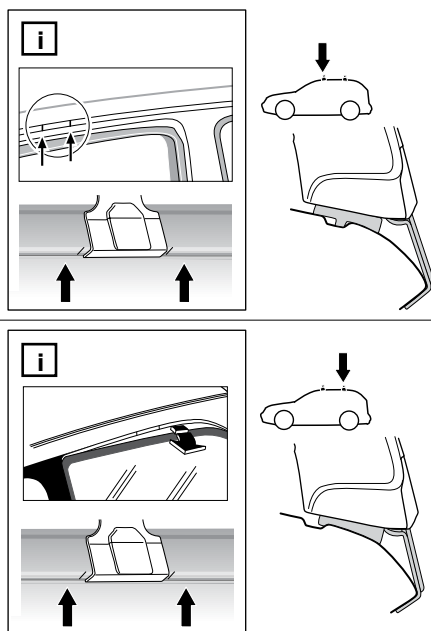

AUDI A3, 5-dr Hatchback, 99-03

