

Thule Rapid System Kit 1048





> Instructions

SAAB 9-5, 4-dr Sedan, 98-04, 05-09 / *99-09



SAAB 9-5, 5-dr Estate, 98-10

SAAB 9-5, 5-dr Wagon, *05-08


*North America

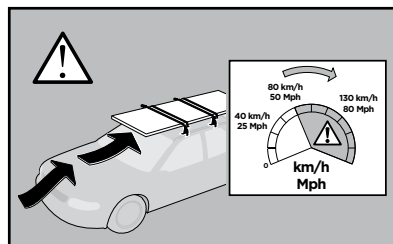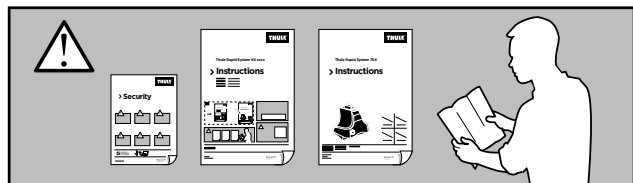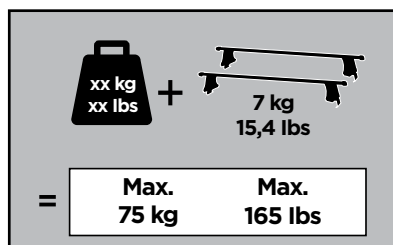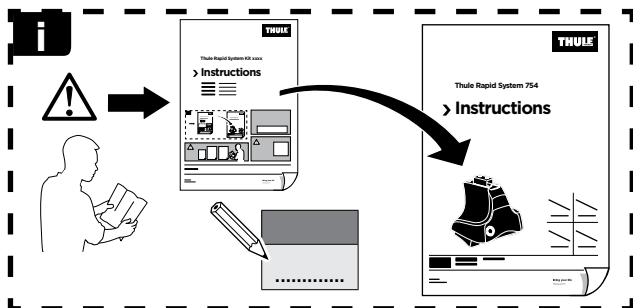

ISO 11154-E

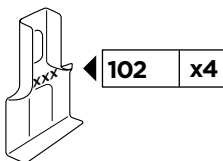



x1



x1

1

	X (scale)	X (mm)	X (inch)
SAAB 9-5 , 4-dr Sedan, 98-04, 05-09 / *99-09	34	991	39
SAAB 9-5 , 5-dr Estate, 98-10	34	991	39
SAAB 9-5 , 5-dr Wagon, *05-08	34	991	39

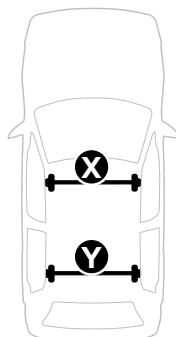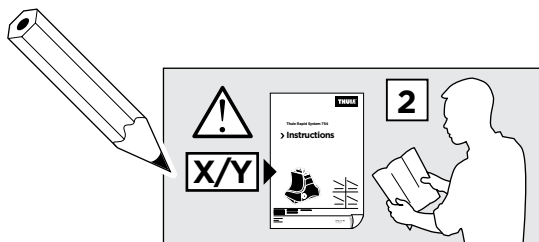



	Y (scale)	Y (mm)	Y (inch)
SAAB 9-5 , 4-dr Sedan, 98-04, 05-09 / *99-09	31,5	966	38
SAAB 9-5 , 5-dr Estate, 98-10	31,5	966	38
SAAB 9-5 , 5-dr Wagon, *05-08	31,5	966	38

2

SAAB 9-5, 4-dr Sedan, 98-04, 05-09 / *99-09

SAAB 9-5, 5-dr Estate, 98-10

SAAB 9-5, 5-dr Wagon, *05-08

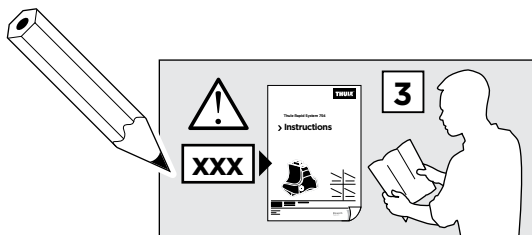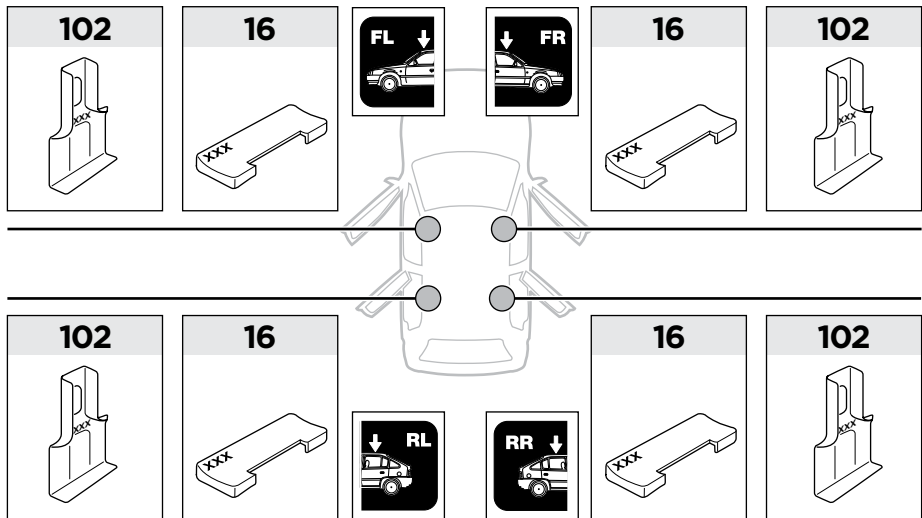

3

