


Kit 1086

- NISSAN King Cab**, 2-dr Single Cab, 86-97
- NISSAN King Cab**, 2-dr Single Cab, 98-01, 02-05
- NISSAN King Cab**, 2-dr Extended Cab, 86-97
- NISSAN King Cab**, 2-dr Extended Cab, 98-01, 02-05
- NISSAN King Cab**, 4-dr Double Cab, 86-97
- NISSAN King Cab**, 4-dr Double Cab, 98-01, 02-05
- NISSAN NP300 (D22)**, 2-dr Single Cab, 98-05, 05-15
- NISSAN NP300 (D22)**, 2-dr Extended Cab, 98-05, 05-15
- NISSAN NP300 (D22)**, 4-dr Double Cab, 98-05, 05-15
- NISSAN Pathfinder (WD21)**, 3-dr SUV, 86-96 / *87-96
- NISSAN Pathfinder (WD21)**, 5-dr SUV, 89-96 / *90-96
- NISSAN Terrano (WD21)**, 3-dr SUV, 86-96
- NISSAN Terrano (WD21)**, 5-dr SUV, 86-96

*North America

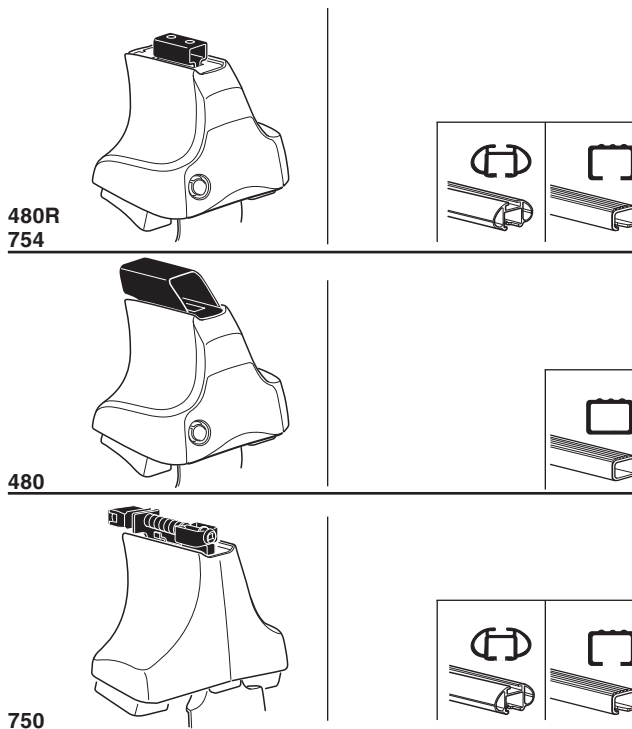

THULE[®]
SWEDEN



 $xx \text{ kg} / xx \text{ lbs}$
+

 $7 \text{ kg} / 15,4 \text{ lbs}$
+

 $3 \text{ kg} / 6,6 \text{ lbs}$
=
Max.
75kg/165 lbs


 $xx \text{ kg} / xx \text{ lbs}$
+

 $3,5 \text{ kg} / 7,7 \text{ lbs}$
=
Max.
30kg/66 lbs


80 km/h 130 km/h
 50 Mph 80 Mph
 40 km/h 25 Mph
 km/h Mph

THULE







+

Kit XXXX





THULE



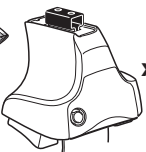

 **x1**
480R/754
 **x4**
 **x4**

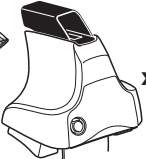 **x4**
 **x4**

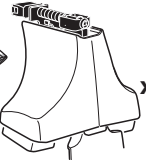 **x1**
480
 **x4**
 **x4**
 **x4**

 **x1**
750
 **x4**
 **x4**


 **x2**


 **x2**
 **x2**
 **x4**
 **x4**


 **x1**
 **x2**
 **x2**
 **x4**


 **x2**
 **x2**



 **x2**





174

x4



16

x4







x1





Kit

2



Herbály Autó www.herbalyauto.hu

503-1086-05

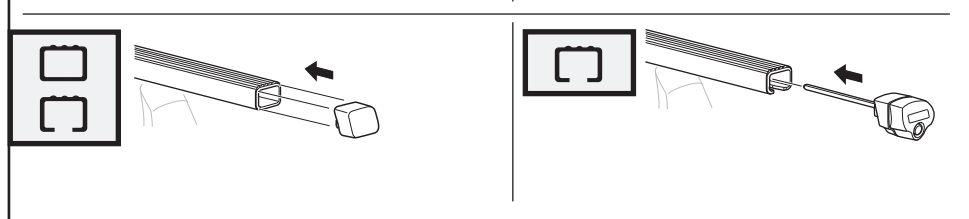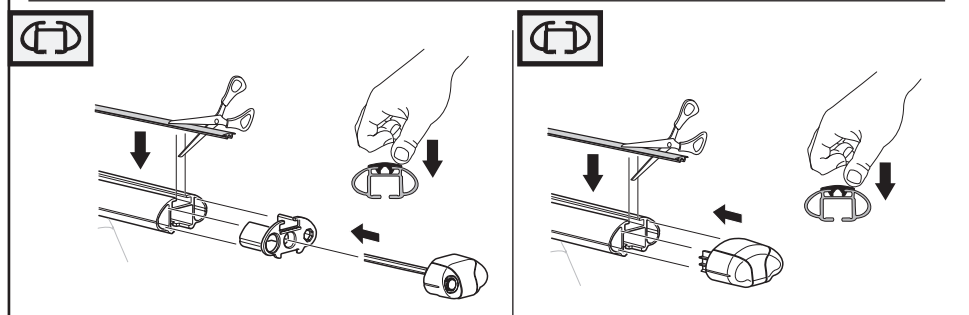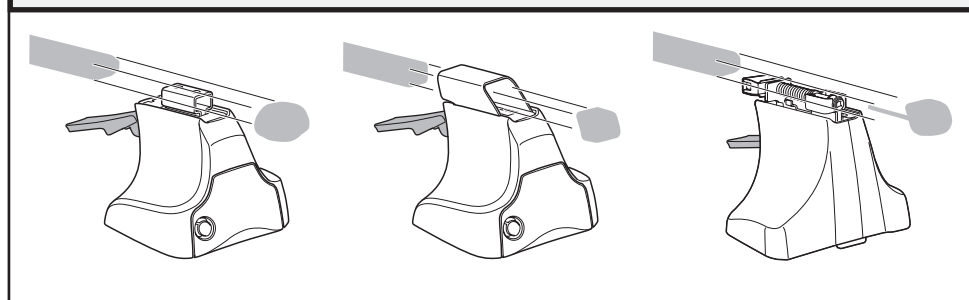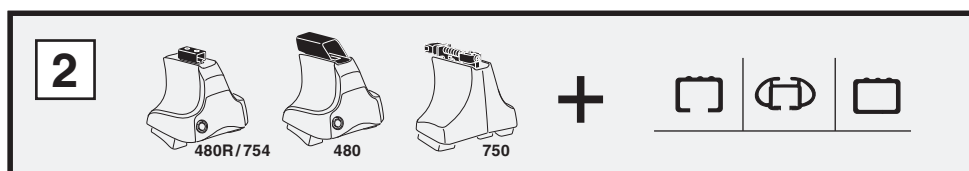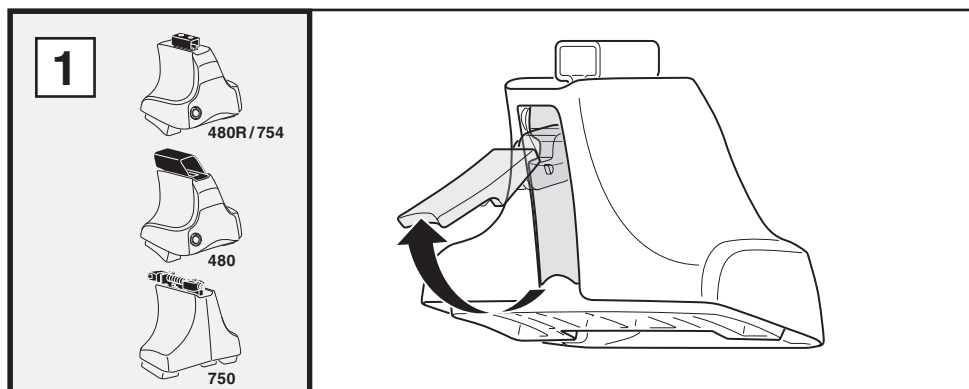

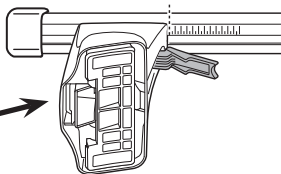3

1

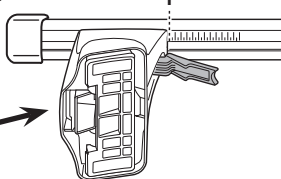2

X

NISSAN King Cab, 2-dr Single Cab, 86-97	38
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	37,5
NISSAN King Cab, 2-dr Extended Cab, 86-97	38
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	37,5
NISSAN King Cab, 4-dr Double Cab, 86-97	38
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	38
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	37,5
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	37,5
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	38
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	38
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	37
NISSAN Terrano (WD21), 3-dr SUV, 86-96	37
NISSAN Terrano (WD21), 5-dr SUV, 86-96	37

1

2

Y




NISSAN King Cab, 2-dr Single Cab, 86-97	–
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	–
NISSAN King Cab, 2-dr Extended Cab, 86-97	–
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	–
NISSAN King Cab, 4-dr Double Cab, 86-97	38
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	37,5
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	–
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	–
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	37,5
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	38
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	37
NISSAN Terrano (WD21), 3-dr SUV, 86-96	37
NISSAN Terrano (WD21), 5-dr SUV, 86-96	37

3





480R



480

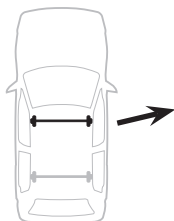
1

2

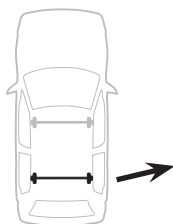
	X inch	X mm
NISSAN King Cab, 2-dr Single Cab, 86-97	40 ⁵ / ₈ "	1031 mm
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	40 ³ / ₈ "	1026 mm
NISSAN King Cab, 2-dr Extended Cab, 86-97	40 ⁵ / ₈ "	1031 mm
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	40 ³ / ₈ "	1026 mm
NISSAN King Cab, 4-dr Double Cab, 86-97	40 ⁵ / ₈ "	1031 mm
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	40 ⁵ / ₈ "	1031 mm
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	40 ³ / ₈ "	1026 mm
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	40 ³ / ₈ "	1026 mm
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	40 ⁵ / ₈ "	1031 mm
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	40 ⁵ / ₈ "	1031 mm
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 3-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 5-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm


1

2


	Y inch	Y mm
NISSAN King Cab, 2-dr Single Cab, 86-97	—	—
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	—	—
NISSAN King Cab, 2-dr Extended Cab, 86-97	—	—
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	—	—
NISSAN King Cab, 4-dr Double Cab, 86-97	40 ⁵ / ₈ "	1031 mm
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	40 ³ / ₈ "	1026 mm
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	—	—
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	—	—
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	40 ³ / ₈ "	1026 mm
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	40 ⁵ / ₈ "	1031 mm
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 3-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 5-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm

4

NISSAN King Cab, 2-dr Single Cab, 86-97


NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05

NISSAN King Cab, 2-dr Extended Cab, 86-97

NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05


NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15

NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15

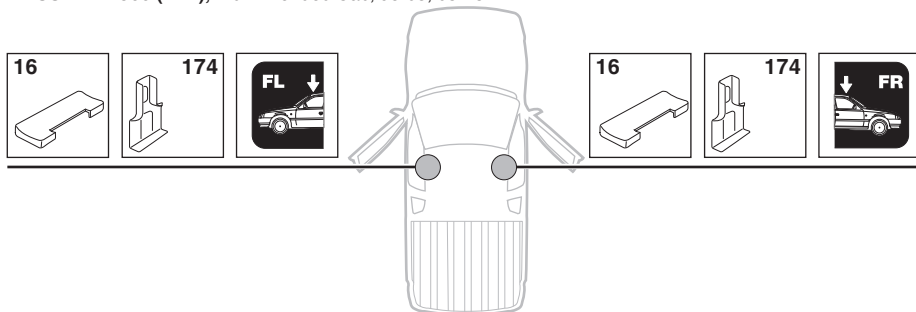

NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96

NISSAN Terrano (WD21), 3-dr SUV, 86-96

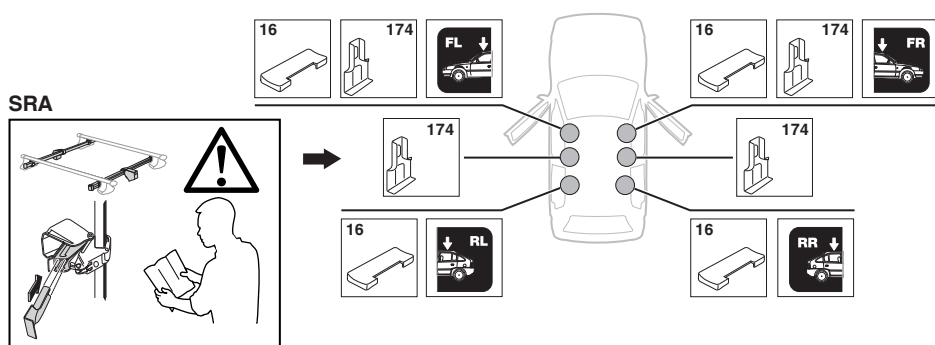

4







NISSAN King Cab, 4-dr Double Cab, 86-97

NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05



NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15

NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96



NISSAN Terrano (WD21), 5-dr SUV, 86-96

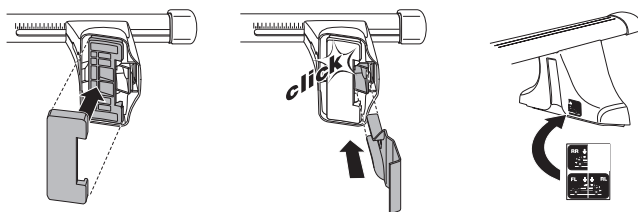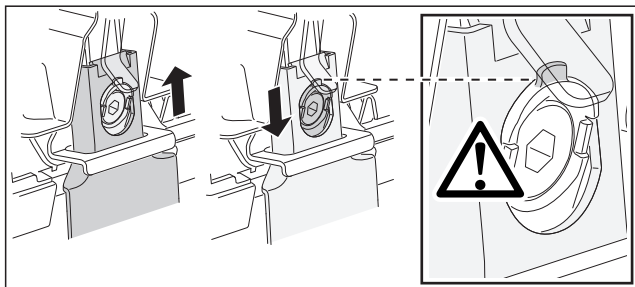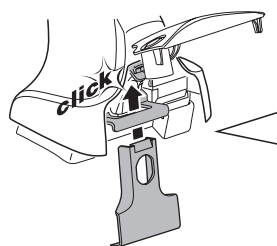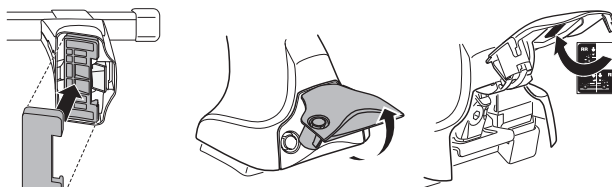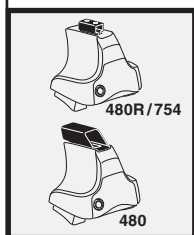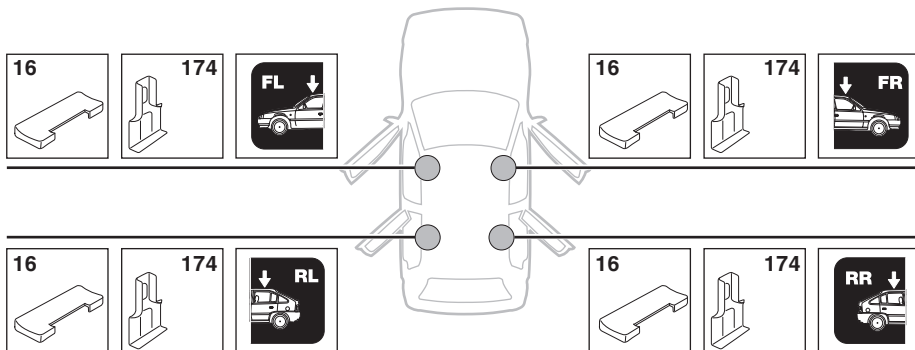


5

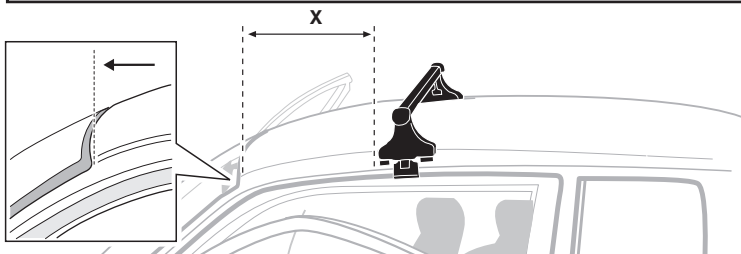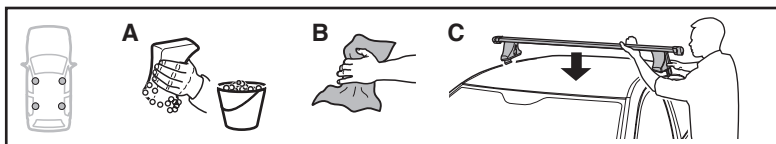



	X mm	Y mm	X inch	Y inch
NISSAN King Cab, 2-dr Single Cab, 86-97	280 mm	—	11"	—
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	260 mm	—	10 1/4"	—
NISSAN King Cab, 2-dr Extended Cab, 86-97	280 mm	—	11"	—
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	245 mm	—	9 5/8"	—
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	260 mm	—	10 1/4"	—
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	245 mm	—	9 5/8"	—

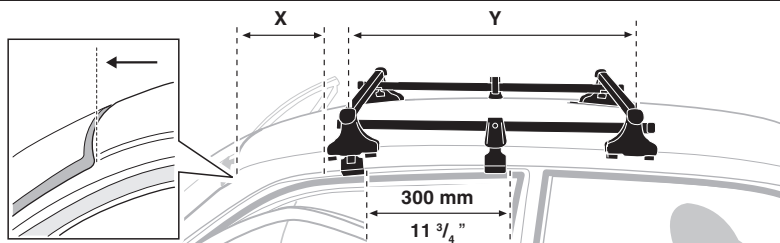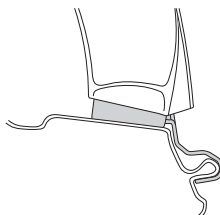



	X mm	Y mm	X inch	Y inch
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	100 mm	700 mm	3 7/8"	27 1/2"
NISSAN Terrano (WD21), 3-dr SUV, 86-96	100 mm	700 mm	3 7/8"	27 1/2"

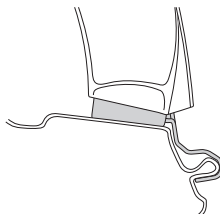

5

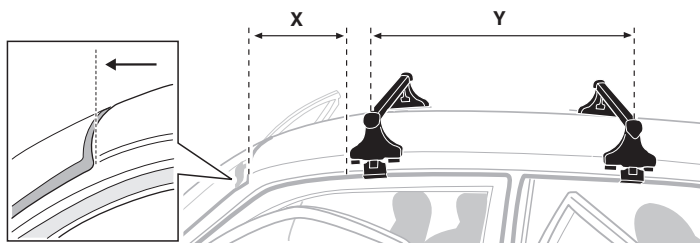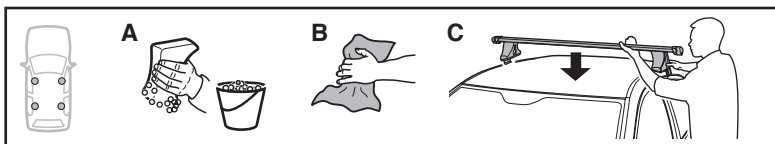

	X mm	Y mm	X inch	Y inch
NISSAN King Cab, 4-dr Double Cab, 86-97	300 mm	700 mm	11 3/4"	27 1/2"
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	270 mm	700 mm	10 5/8"	27 1/2"
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	420 mm	700 mm	16 1/4"	27 1/2"
NISSAN Terrano (WD21), 5-dr SUV, 86-96	420 mm	700 mm	16 1/4"	27 1/2"
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	270 mm	700 mm	10 5/8"	27 1/2"

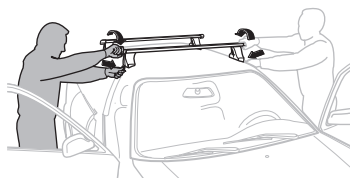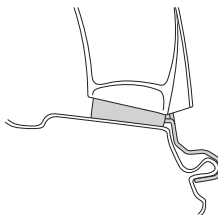

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokrétla багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın


中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ



6






480R/754





480

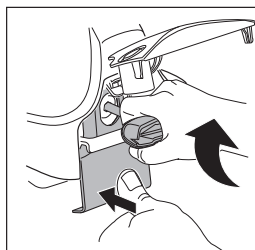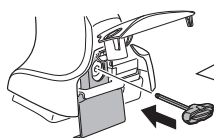


*
3 Nm

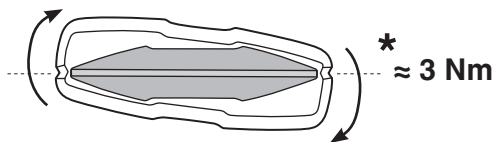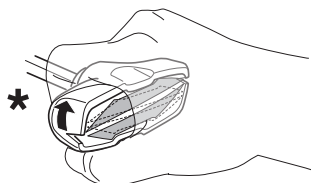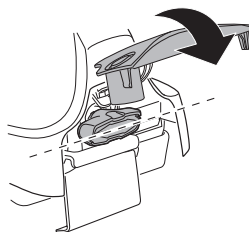


*
≈ 3 Nm

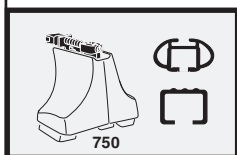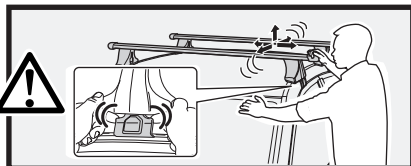

750

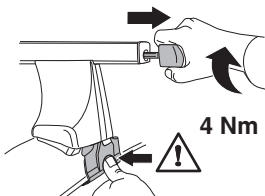








4 Nm





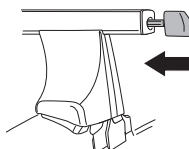


7



x1
17 mm

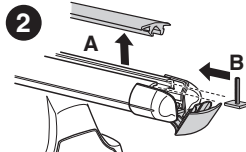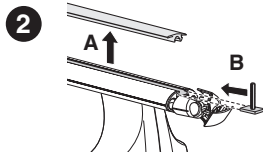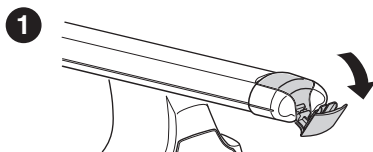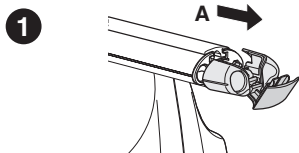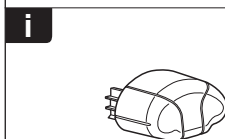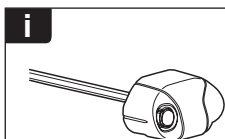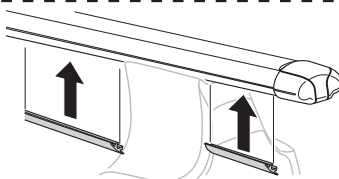

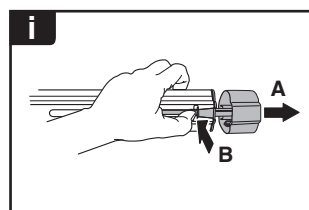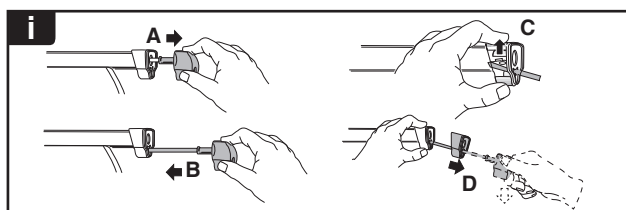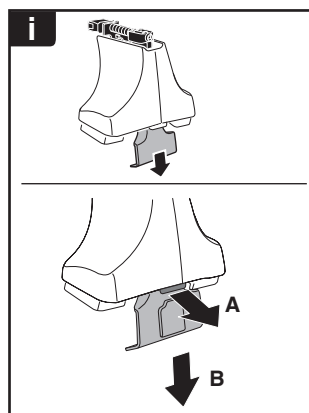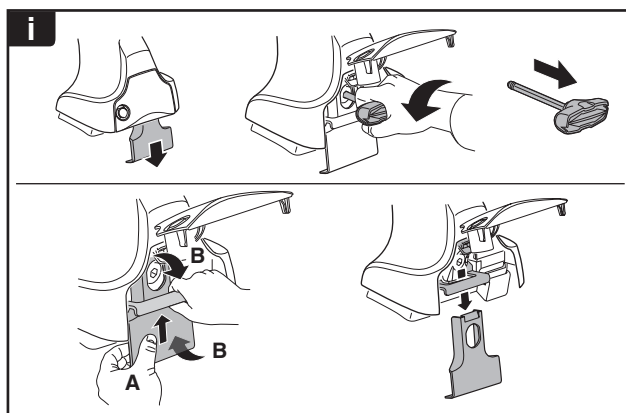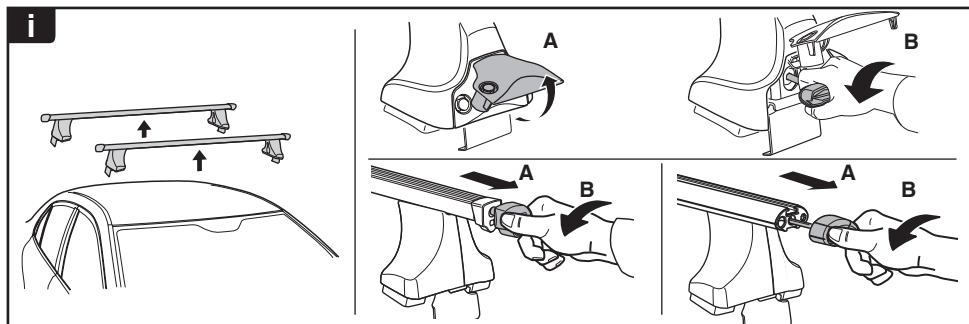

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
 NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
 customer.service@thule.com

www.thule.com



www.thuleprofessional.com








customer.service@thule.com








Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA





Thule Sweden AB, Box 69, 330 33 Hillestorp, SWEDEN

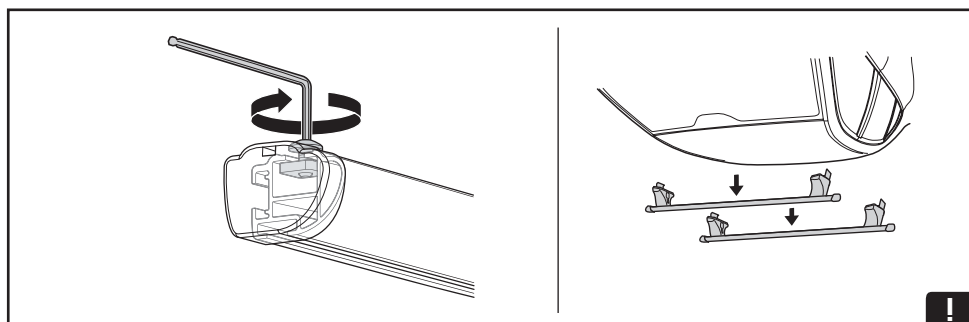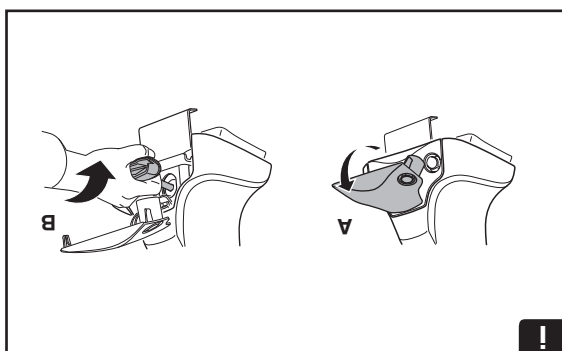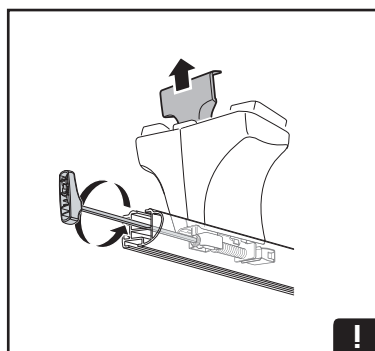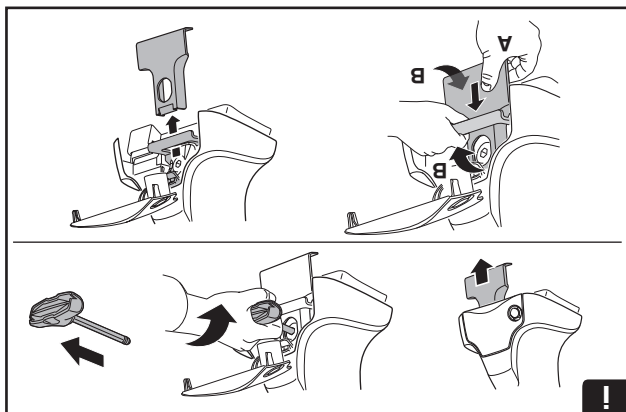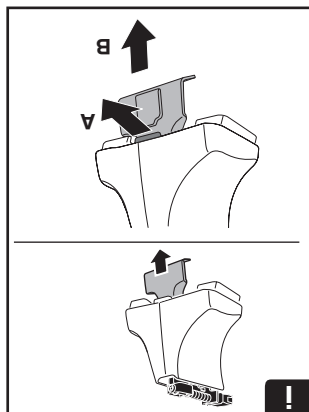

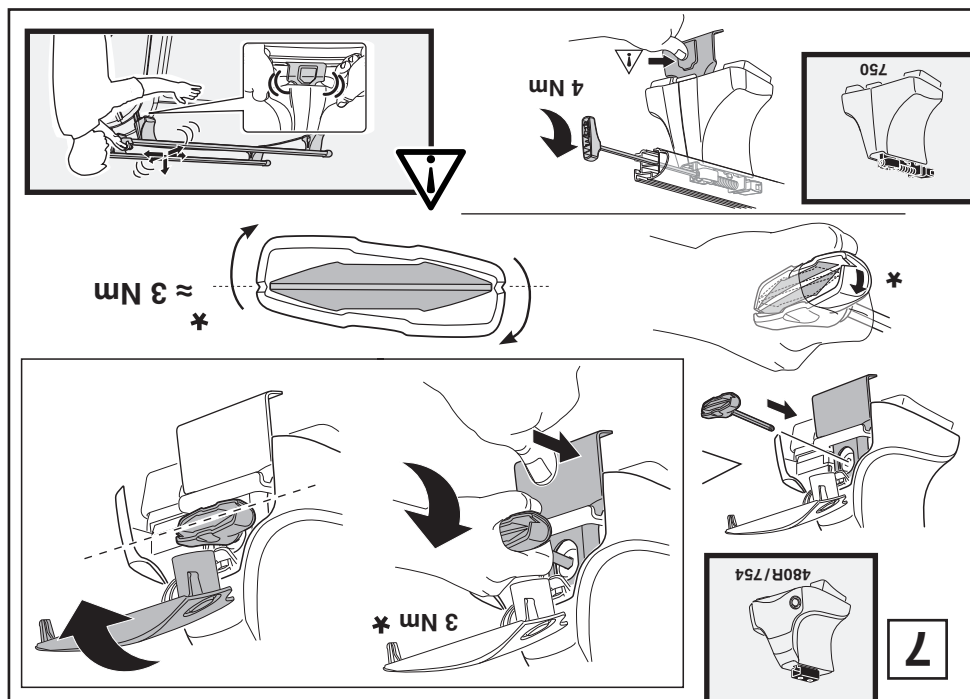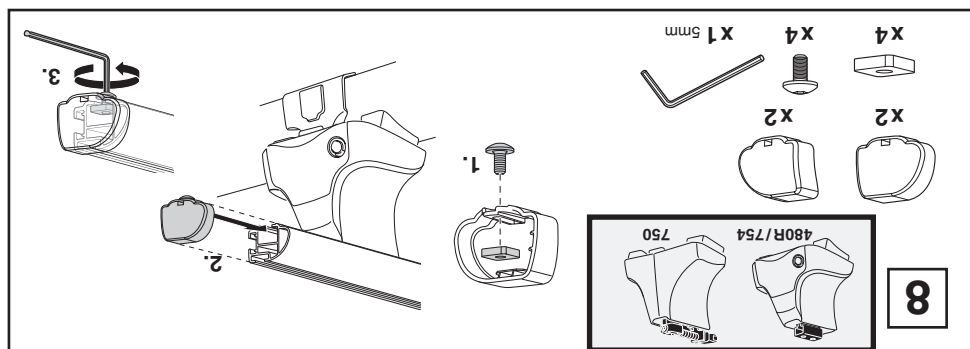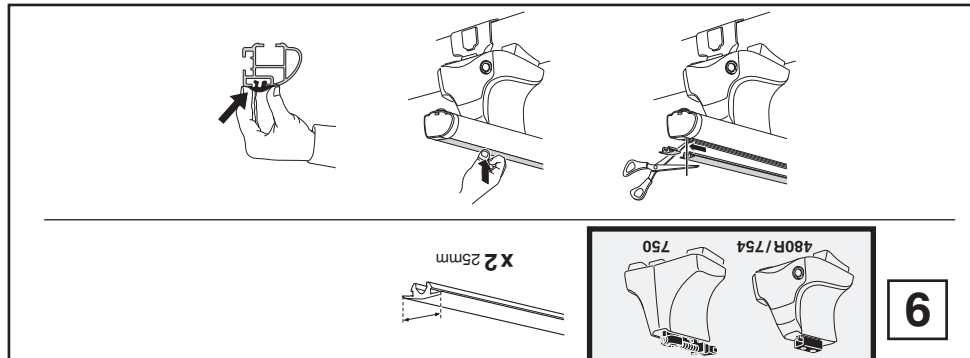

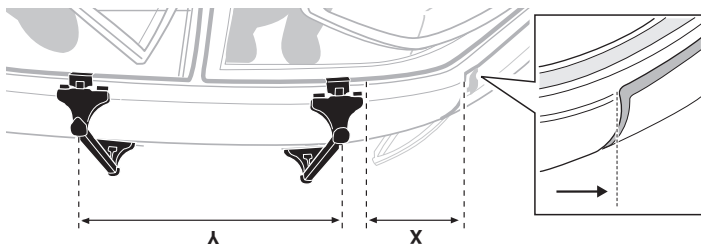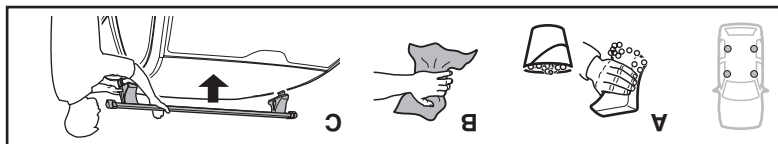


NISSAN King Cab, 4-dr Double Cab, 86-97	300 mm	700 mm	11 3/4" X	27 1/2" Y
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	270 mm	700 mm	10 5/8" X	27 1/2" Y
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / '90-96	420 mm	700 mm	16 1/4" X	27 1/4" Y
NISSAN Terrano (WD21), 5-dr SUV, 86-96	420 mm	700 mm	16 1/4" X	27 1/4" Y
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	270 mm	700 mm	10 5/8" X	27 1/2" Y

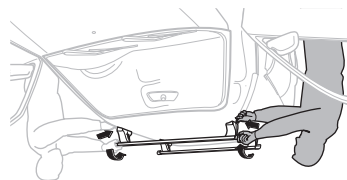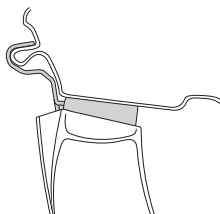



GB/US Tighten alternately
D Die Schrauben abwechselnd
F Serre alternativement chaque
 côté
NL Afwisselend aan de linker- en
 de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis



















FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Plevietiet pamīšus
LIT Užkūnikite pakaitomis
PL Śrubuj dokręcaj naprzemiennie
RU Затягивайте попеременно
 докrécaj napремениё.
CZ Pokrétta bagazníka dokrécaj
 dokrécaj napreмениё.
SK Dotiahnuť striedavo
SLO Privijajte izmenično.
HR Naizmenično zategnite
HU Egyarástól fűggetlenül
 szorítandó
GR Σφιγγείτε εναλλάξ
TR Donüşümü sklin
中文 交替拧紧
한국어 번갈아 가며 조입니다.
日本語 交互に締め付けてください。
ไทย หมุนสลับกัน

NISSAN Terrano (WD21), 3-dr SUV, 86-96		100 mm	700 mm
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96		100 mm	700 mm
3 7/8"	3 7/8"	X mm	Y mm
27 1/2"	27 1/2"	X inch	Y inch

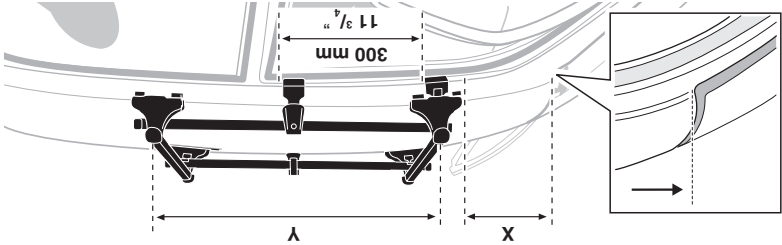


NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15		245 mm	—
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15		260 mm	—
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05		245 mm	—
NISSAN King Cab, 2-dr Extended Cab, 86-97		280 mm	—
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05		260 mm	—
NISSAN King Cab, 2-dr Single Cab, 86-97		280 mm	—
9 5/8"	11"	X mm	Y mm
10 1/4"	11"	X inch	Y inch
—	—	—	—

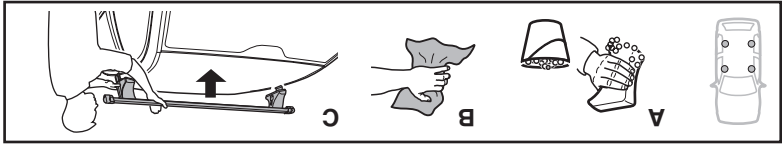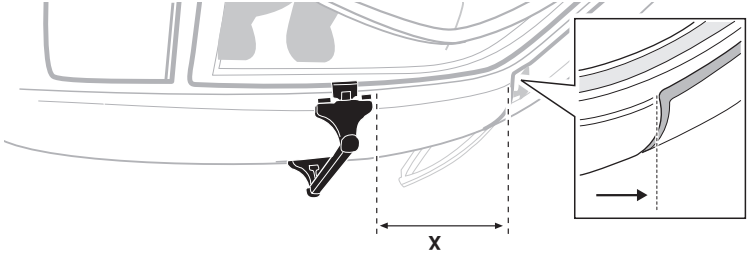


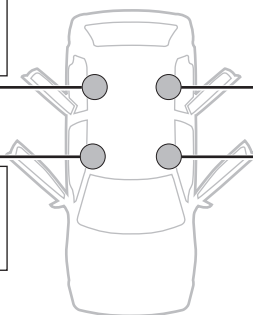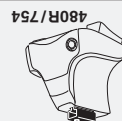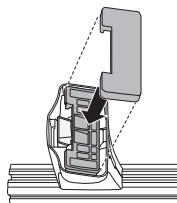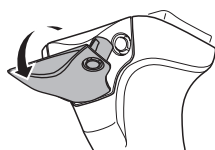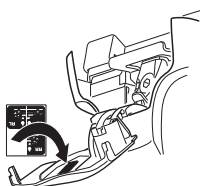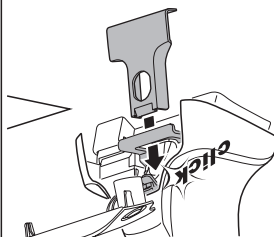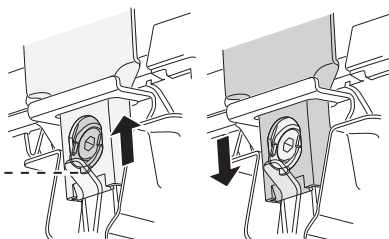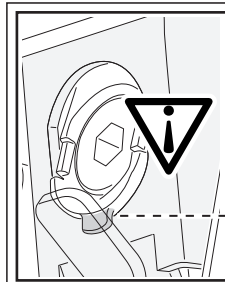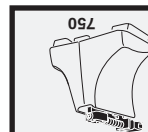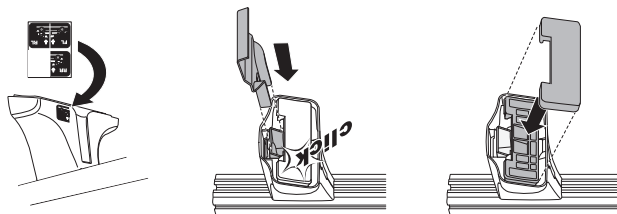

NISSAN King Cab, 4-dr Double Cab, 86-97
 NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05
 NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15
 NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96
 NISSAN Terrano (WD21), 5-dr SUV, 86-96

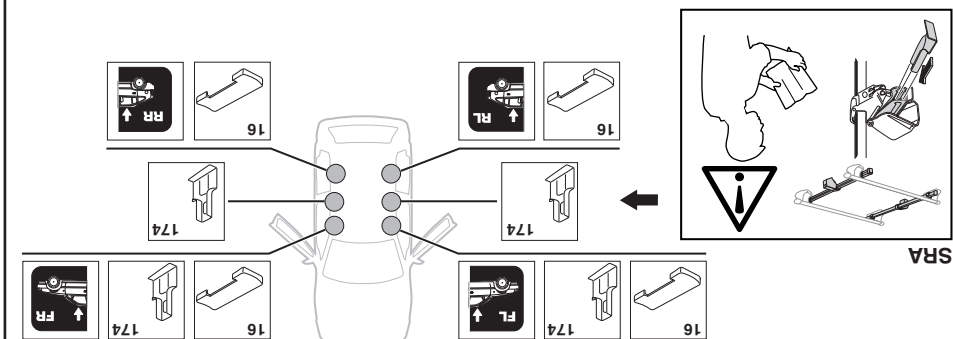


NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96
NISSAN Terrano (WD21), 3-dr SUV, 86-96

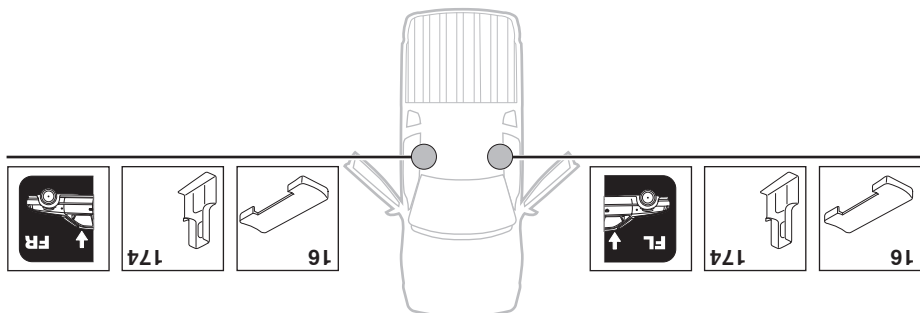





NISSAN King Cab, 2-dr Single Cab, 86-97
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05
NISSAN King Cab, 2-dr Extended Cab, 86-97
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15

5

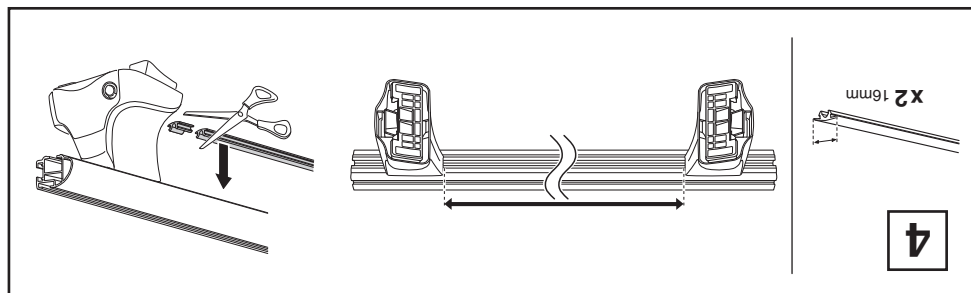





4

NISSAN King Cab, 2-dr Single Cab, 86-97	—	—
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	—	—
NISSAN King Cab, 2-dr Extended Cab, 86-97	—	—
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	—	—
NISSAN King Cab, 4-dr Double Cab, 86-97	40 ⁵ / ₈ "	1031 mm
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	40 ³ / ₈ "	1026 mm
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	—	—
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	—	—
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	40 ³ / ₈ "	1026 mm
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	40 ⁵ / ₈ "	1031 mm
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 3-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm
NISSAN Terrano (WD21), 5-dr SUV, 86-96	40 ¹ / ₄ "	1021 mm

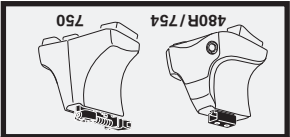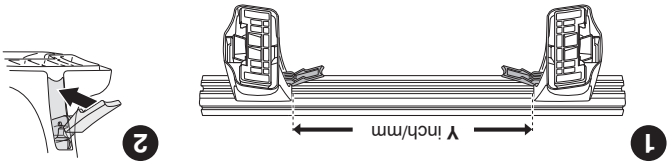
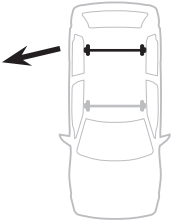


3


NISSAN King Cab, 2-dr Single Cab, 86-97	40 5/8"	1031 mm
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05	40 3/8"	1026 mm
NISSAN King Cab, 2-dr Extended Cab, 86-97	40 5/8"	1031 mm
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05	40 3/8"	1026 mm
NISSAN King Cab, 4-dr Double Cab, 86-97	40 5/8"	1031 mm
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05	40 3/8"	1026 mm
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15	40 3/8"	1026 mm
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15	40 3/8"	1026 mm
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15	40 5/8"	1031 mm
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96	40 5/8"	1031 mm
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96	40 1/4"	1021 mm
NISSAN Terrano (WD21), 3-dr SUV, 86-96	40 1/4"	1021 mm
NISSAN Terrano (WD21), 5-dr SUV, 86-96	40 1/4"	1021 mm

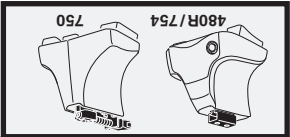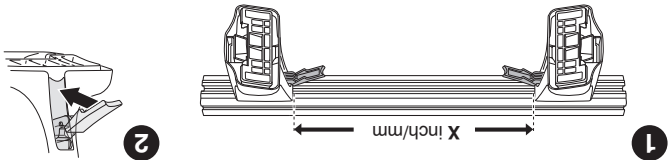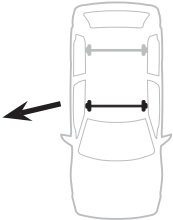







3

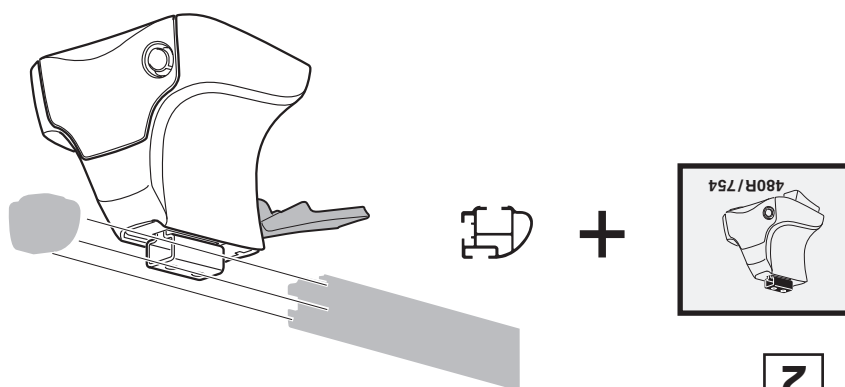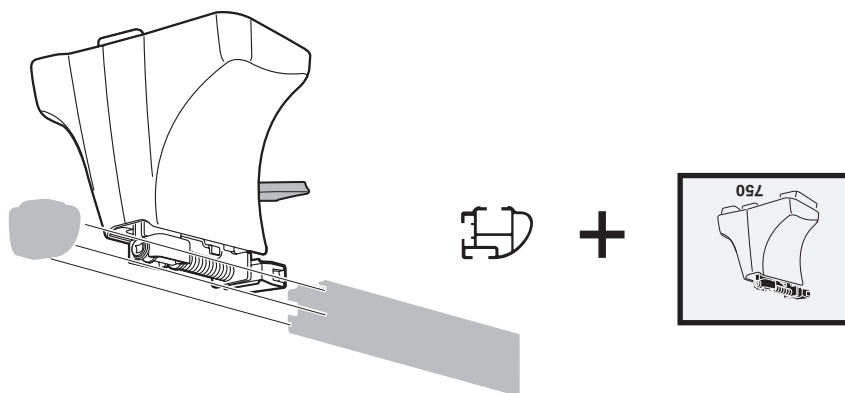

2

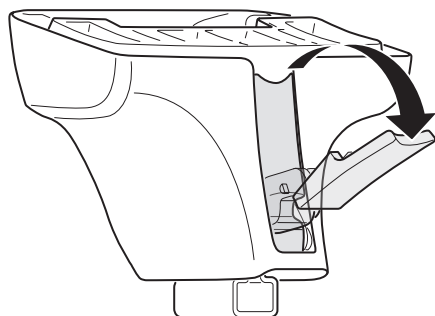

1

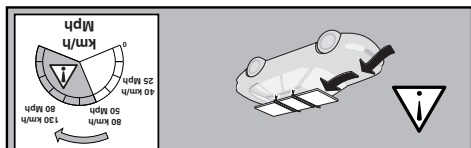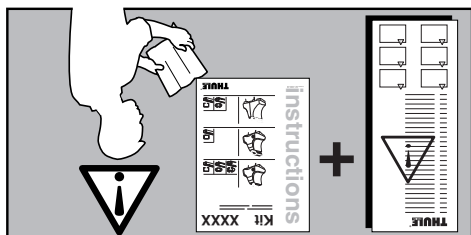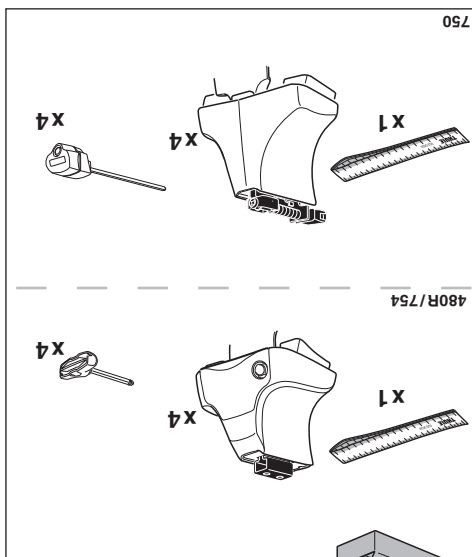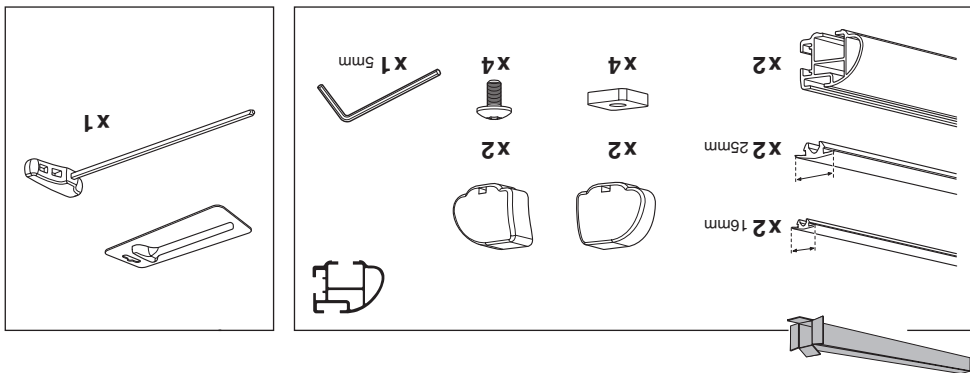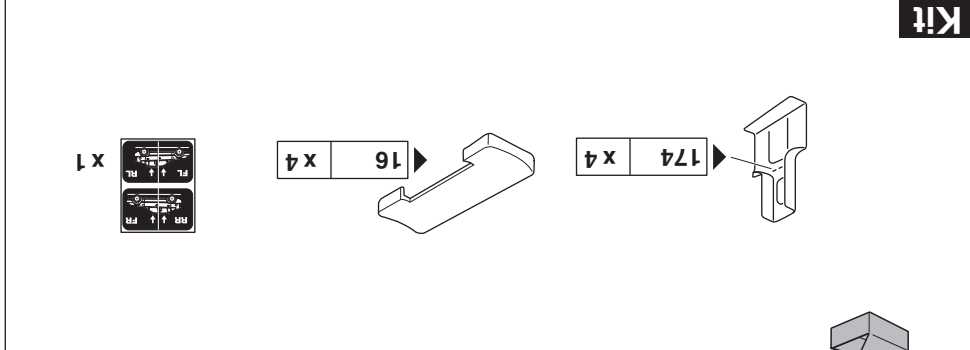


Instructions

ISO 11154-E

PROFESSIONAL

THULE
SWEDEN®

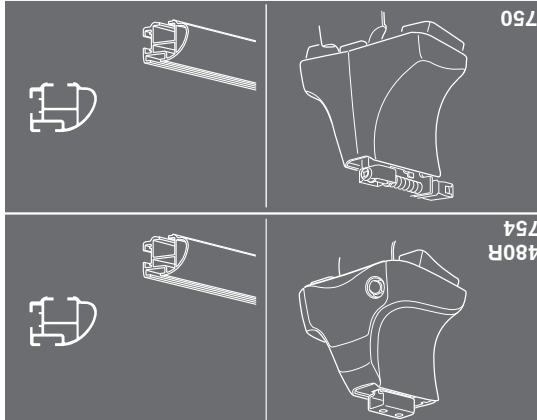

*North America

NISSAN King Cab, 2-dr Single Cab, 86-97
NISSAN King Cab, 2-dr Single Cab, 98-01, 02-05
NISSAN King Cab, 2-dr Extended Cab, 86-97
NISSAN King Cab, 2-dr Extended Cab, 98-01, 02-05
NISSAN King Cab, 4-dr Double Cab, 86-97
NISSAN King Cab, 4-dr Double Cab, 98-01, 02-05
NISSAN NP300 (D22), 2-dr Single Cab, 98-05, 05-15
NISSAN NP300 (D22), 2-dr Extended Cab, 98-05, 05-15
NISSAN NP300 (D22), 4-dr Double Cab, 98-05, 05-15
NISSAN Pathfinder (WD21), 3-dr SUV, 86-96 / *87-96
NISSAN Pathfinder (WD21), 5-dr SUV, 89-96 / *90-96
NISSAN Terrano (WD21), 3-dr SUV, 86-96
NISSAN Terrano (WD21), 5-dr SUV, 86-96

Kit 1086