







## Thule Rapid System Kit 1106

# > Instructions

**FIAT Seicento**, 3-dr Hatchback, 98-00, 01-04

**FIAT 600**, 3-dr Hatchback, 05-10

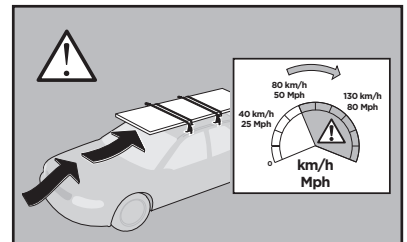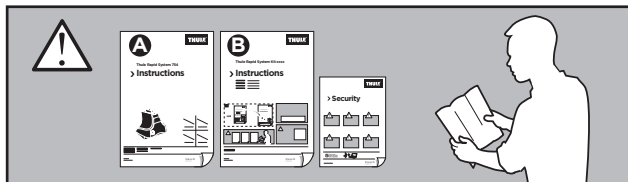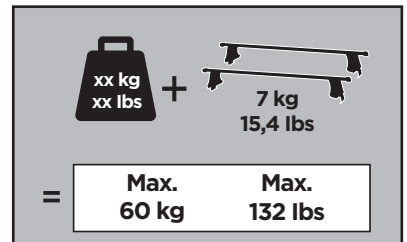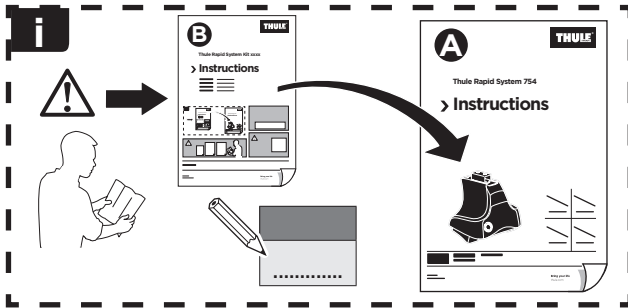


ISO 11154-E

141106  
C.20150617  
519-1106-04


Herbály Autó [www.herbalyauto.hu](http://www.herbalyauto.hu)

Bring your life  
[thule.com](http://thule.com)

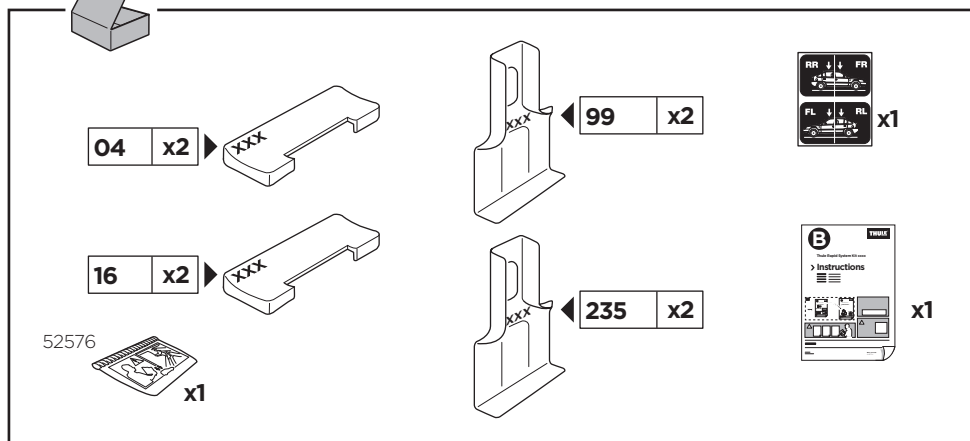

1

|                                                     | X (scale) | X (mm) | X (inch)                       |
|-----------------------------------------------------|-----------|--------|--------------------------------|
| <b>FIAT Seicento</b> , 3-dr Hatchback, 98-00, 01-04 | 18,5      | 836    | 32 <sup>7</sup> / <sub>8</sub> |
| <b>FIAT 600</b> , 3-dr Hatchback, 05-10             | 18,5      | 836    | 32 <sup>7</sup> / <sub>8</sub> |


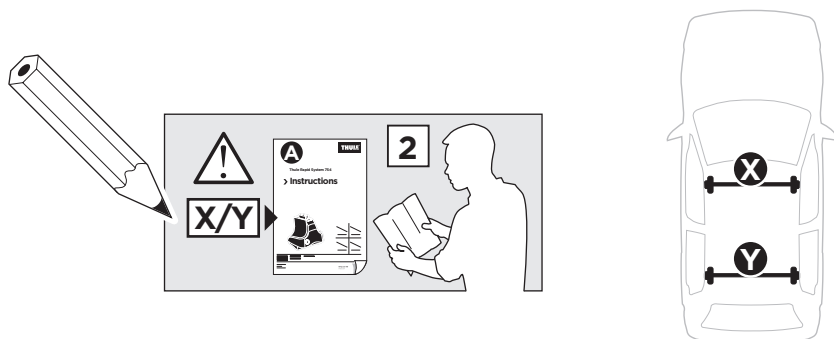


|                                                     | Y (scale) | Y (mm) | Y (inch)                       |
|-----------------------------------------------------|-----------|--------|--------------------------------|
| <b>FIAT Seicento</b> , 3-dr Hatchback, 98-00, 01-04 | 19        | 841    | 33 <sup>1</sup> / <sub>8</sub> |
| <b>FIAT 600</b> , 3-dr Hatchback, 05-10             | 19        | 841    | 33 <sup>1</sup> / <sub>8</sub> |



# 2

**FIAT Seicento**, 3-dr Hatchback, 98-00, 01-04

**FIAT 600**, 3-dr Hatchback, 05-10

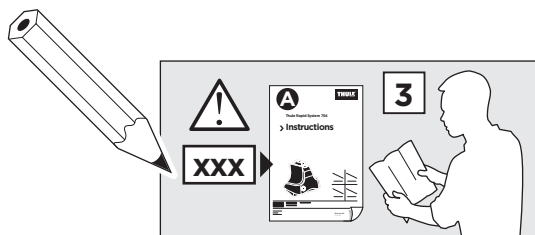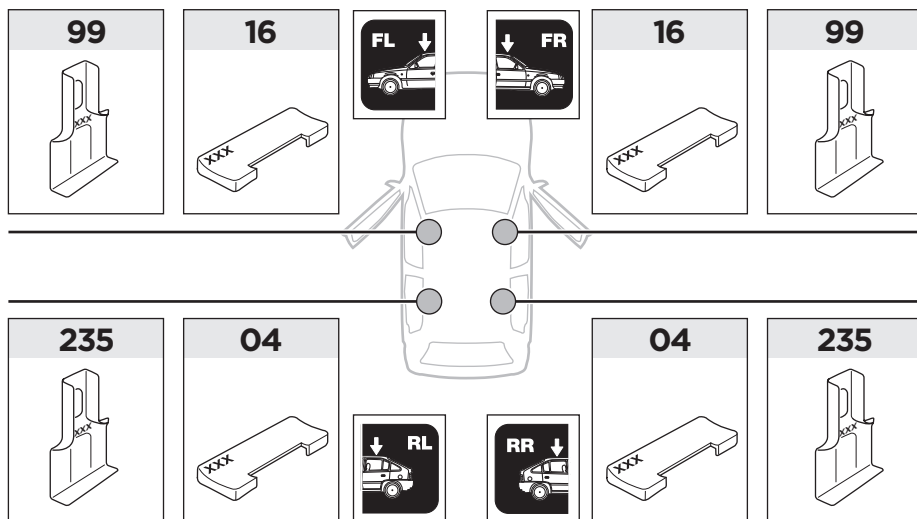

# 3

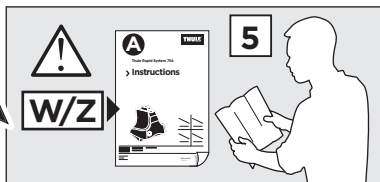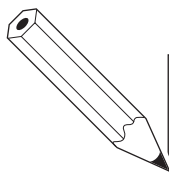

|                                                     | W (mm)     | Z (mm)     | W (inch)   | Z (inch)    |
|-----------------------------------------------------|------------|------------|------------|-------------|
| <b>FIAT Seicento</b> , 3-dr Hatchback, 98-00, 01-04 | <b>215</b> | <b>700</b> | <b>8 ½</b> | <b>27 ½</b> |
| <b>FIAT 600</b> , 3-dr Hatchback, 05-10             | <b>215</b> | <b>700</b> | <b>8 ½</b> | <b>27 ½</b> |

