
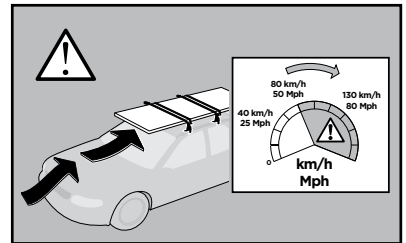
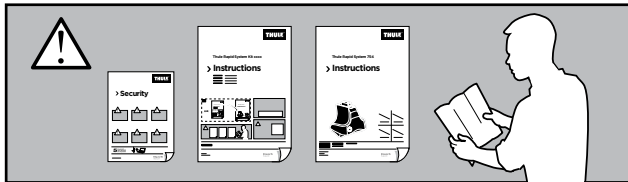
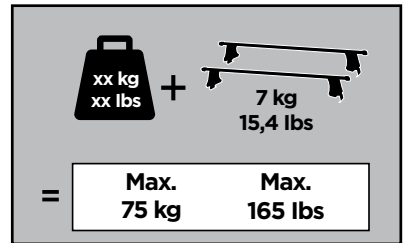


Thule Rapid System Kit 1111

> Instructions

VOLVO S80, 4-dr Sedan, 98-06 / *99-06

*North America

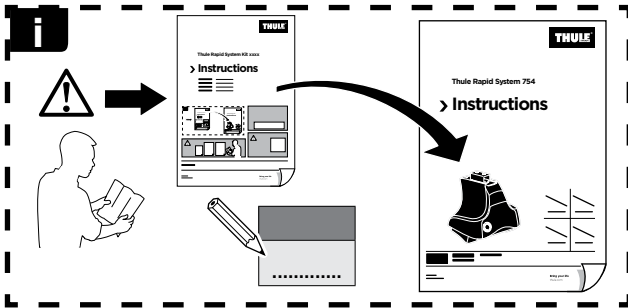

ISO 11154-E

141111


C.20121003
519-1111-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



58 x4




148 x2



x1





324 x2



x1

1


	X (scale)	X (mm)	X (inch)
VOLVO S80 , 4-dr Sedan, 98-06 / *99-06	44	1091	43

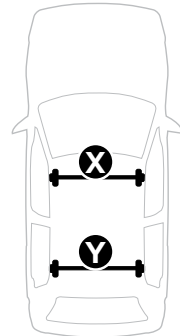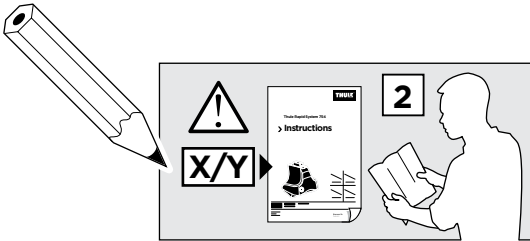


	Y (scale)	Y (mm)	Y (inch)
VOLVO S80 , 4-dr Sedan, 98-06 / *99-06	38	1031	40 ⁵ / ₈

2

VOLVO S80, 4-dr Sedan, 98-06 / *99-06

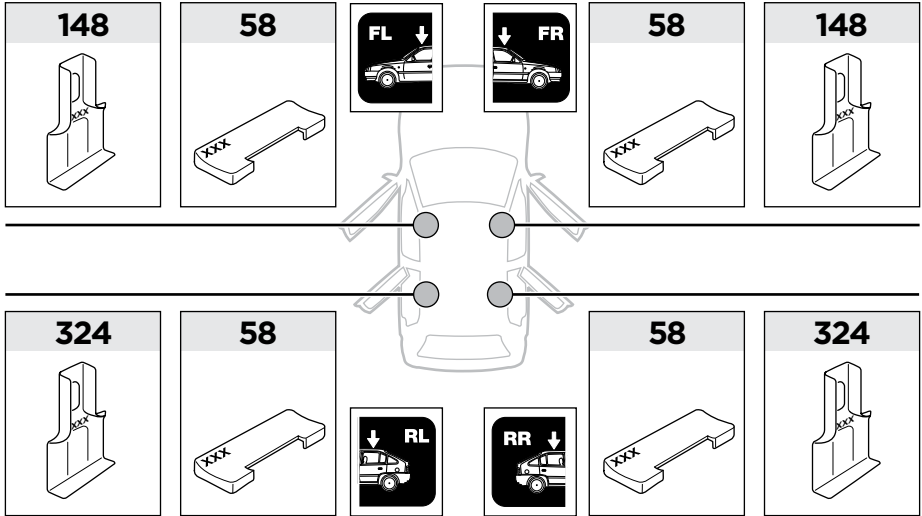

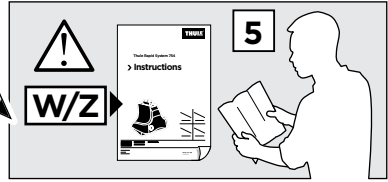3

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO S80, 4-dr Sedan, 98-06 / *99-06	200	700	7 7/8	27 1/2

