
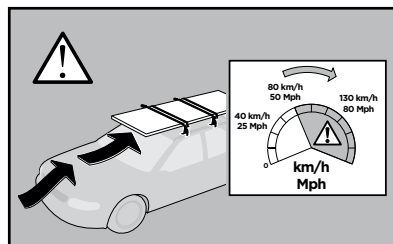
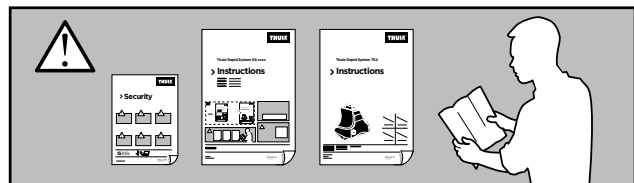
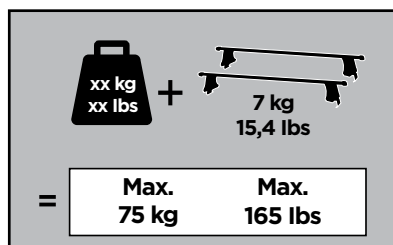


Thule Rapid System Kit 1149

> Instructions

HOLDEN Commodore V.T., 4-dr Sedan, 97-05

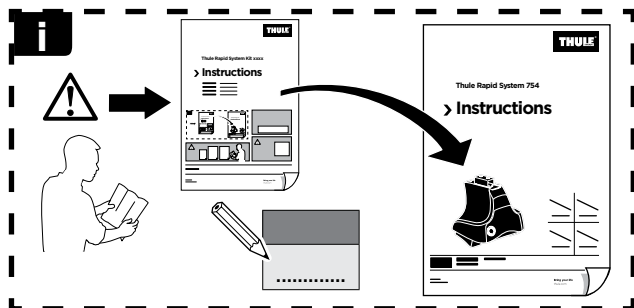



ISO 11154-E

141149


C.20121018
519-1149-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com

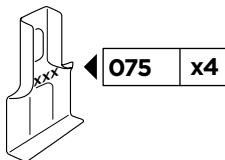




x1



x1

1



	X (scale)	X (mm)	X (inch)
HOLDEN Commodore V.T , 4-dr Sedan, 97-05	41	1061	41 ³ / ₄

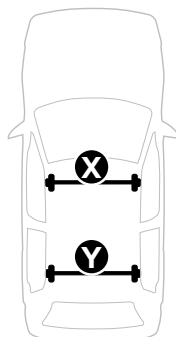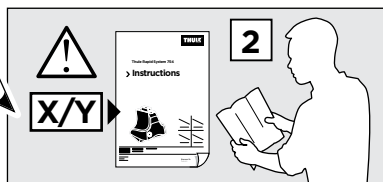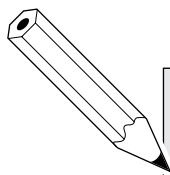



	Y (scale)	Y (mm)	Y (inch)
HOLDEN Commodore V.T , 4-dr Sedan, 97-05	41,5	1066	42

2

HOLDEN Commodore V.T, 4-dr Sedan, 97-05

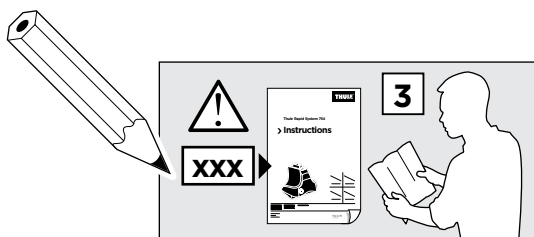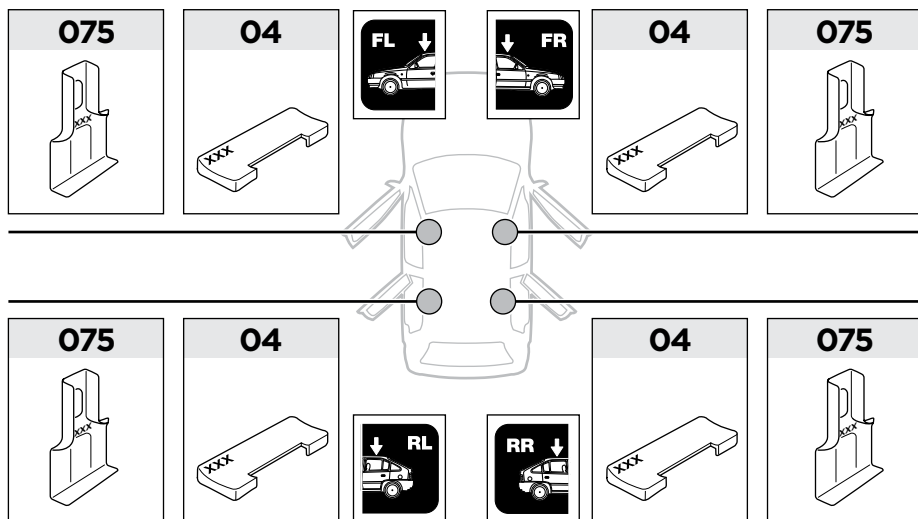

3

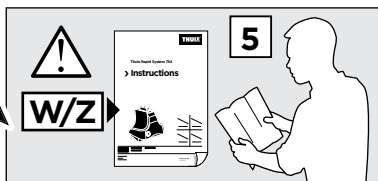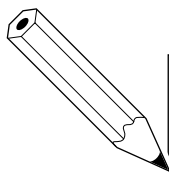

	W (mm)	Z (mm)	W (inch)	Z (inch)
HOLDEN Commodore V.T., 4-dr Sedan, 97-05	270	710	10 ⁵/₈	28

