



Thule Rapid System Kit 1165





> Instructions

TOYOTA Estima, 5-dr MPV, 00-02, 03-05*

TOYOTA Previa, 5-dr MPV, 00-02, 03-05*

TOYOTA Tarago, 5-dr MPV, 00-02, 03-05*

***With twin moon roof**

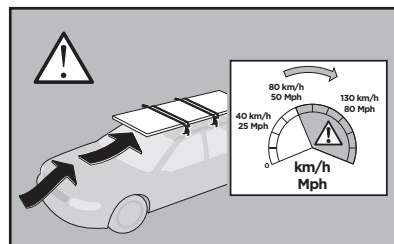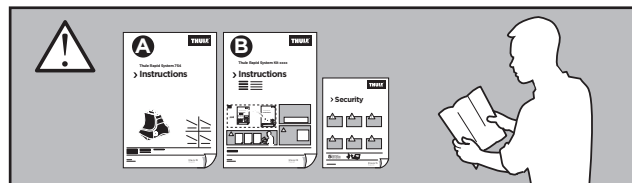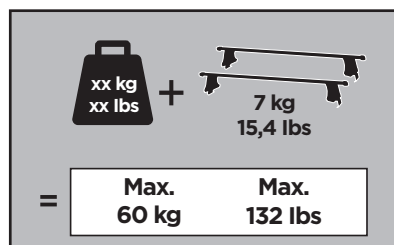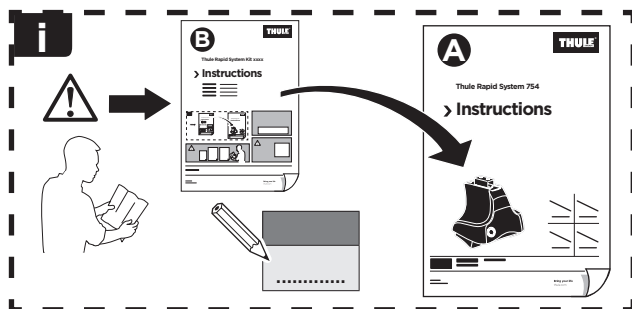

ISO 11154-E

141165


C.20190306
519-1165-03

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



46 x4



283 x4



x1



50029



30148






30113



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Estima , 5-dr MPV, 00-02, 03-05	34	991	39
TOYOTA Previa , 5-dr MPV, 00-02, 03-05	34	991	39
TOYOTA Tarago , 5-dr MPV, 00-02, 03-05	34	991	39

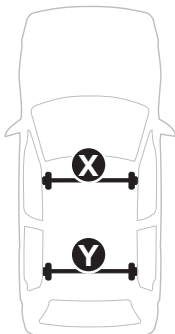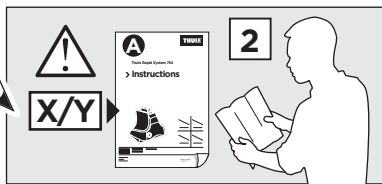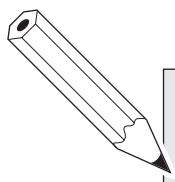



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Estima , 5-dr MPV, 00-02, 03-05	31	961	37 ⁷/₈
TOYOTA Previa , 5-dr MPV, 00-02, 03-05	31	961	37 ⁷/₈
TOYOTA Tarago , 5-dr MPV, 00-02, 03-05	31	961	37 ⁷/₈

2

TOYOTA Estima, 5-dr MPV, 00-02, 03-05

TOYOTA Previa, 5-dr MPV, 00-02, 03-05

TOYOTA Tarago, 5-dr MPV, 00-02, 03-05

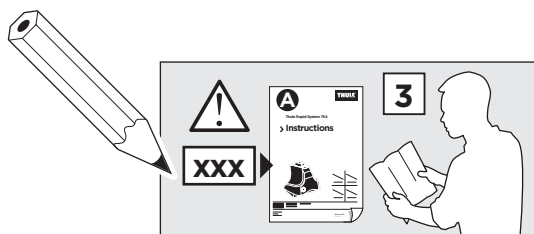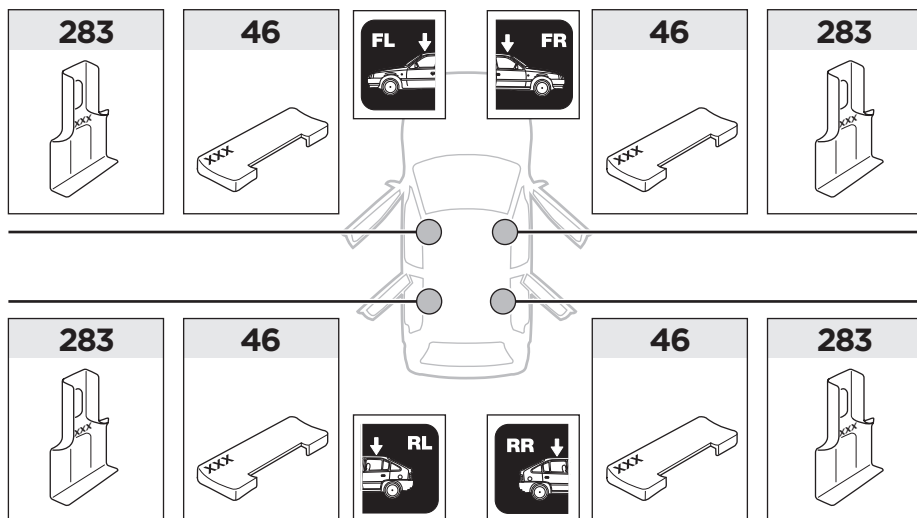

3

