



Thule Rapid System Kit 1184

> Instructions





CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08

CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*

PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08

PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

* without sunroof

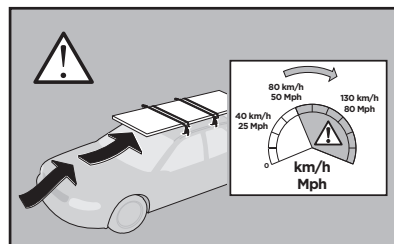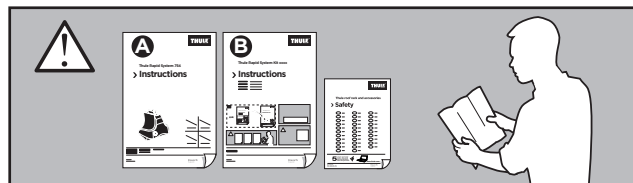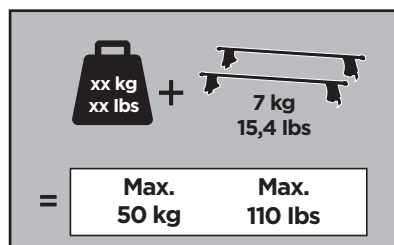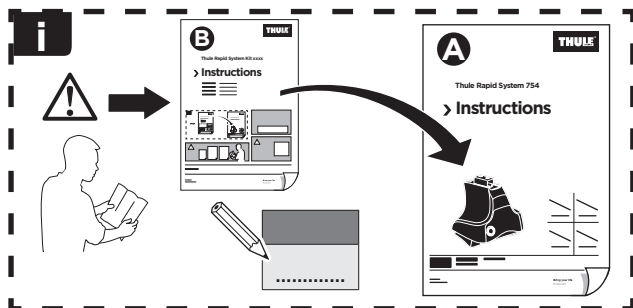

ISO 11154-E

141184

C.20150920

519-1184-02


Herbály Autó www.herbalyauto.hu

Bring your life


thule.com



346 x 4



22 x 4





x1




x1

1

	X (scale)	X (mm)	X (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷/₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	21	861	33 ⁷/₈
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷/₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	23,5	886	34 ⁷/₈

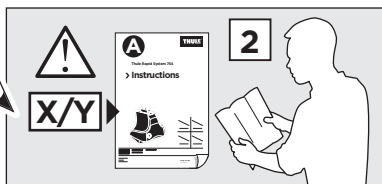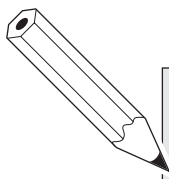

2

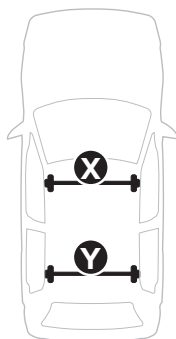

	Y (scale)	Y (mm)	Y (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹/₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	20	851	33 ¹/₂
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹/₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	24	891	35 ¹/₈



2

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08


CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*

PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08




PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

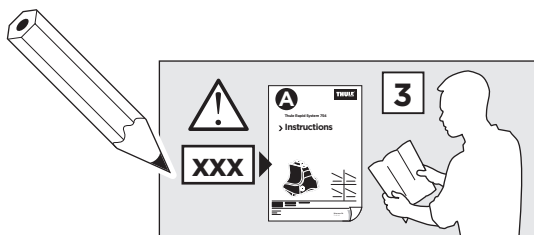
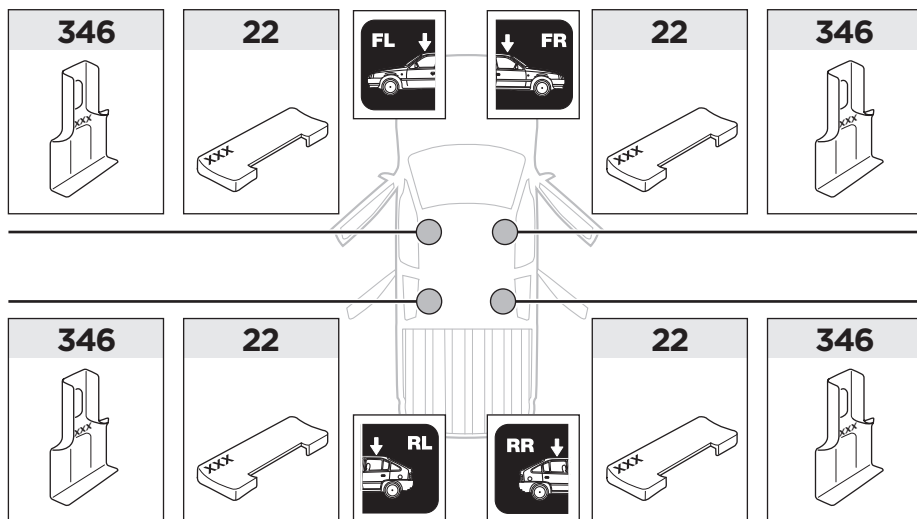




3

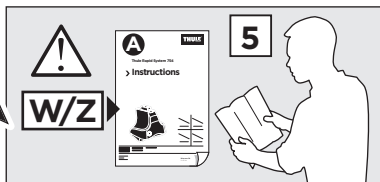


	W (mm)	Z (mm)	W (inch)	Z (inch)
CITROËN Berlingo , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈
CITROËN Xsara Picasso , 5-dr MPV, 00-03, 04-12	320	700	12 ⁵ / ₈	27 ¹ / ₂
PEUGEOT Partner , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈
PEUGEOT Ranch , 3/4-dr Van, 97-02, 03-08	770	600	30 ³ / ₈	23 ⁵ / ₈

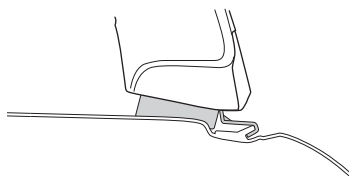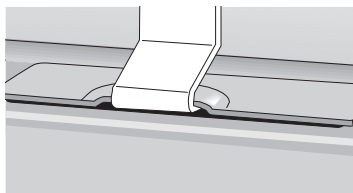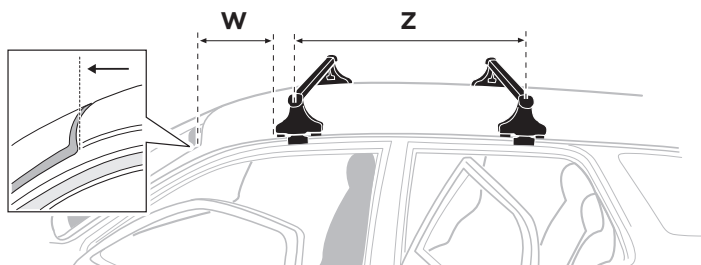

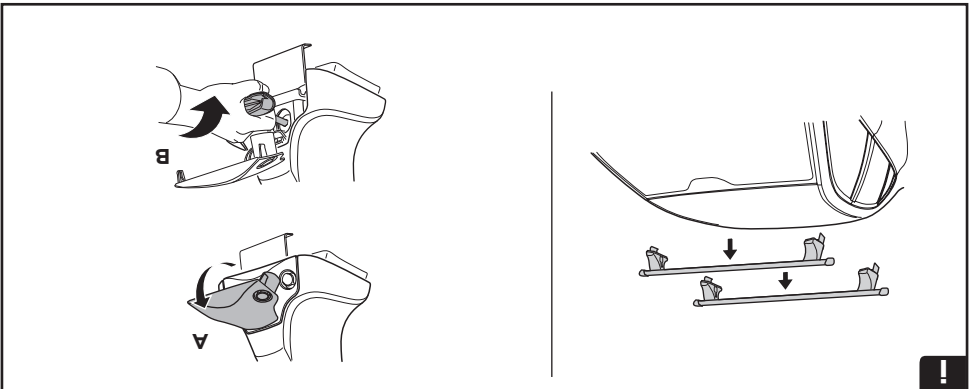
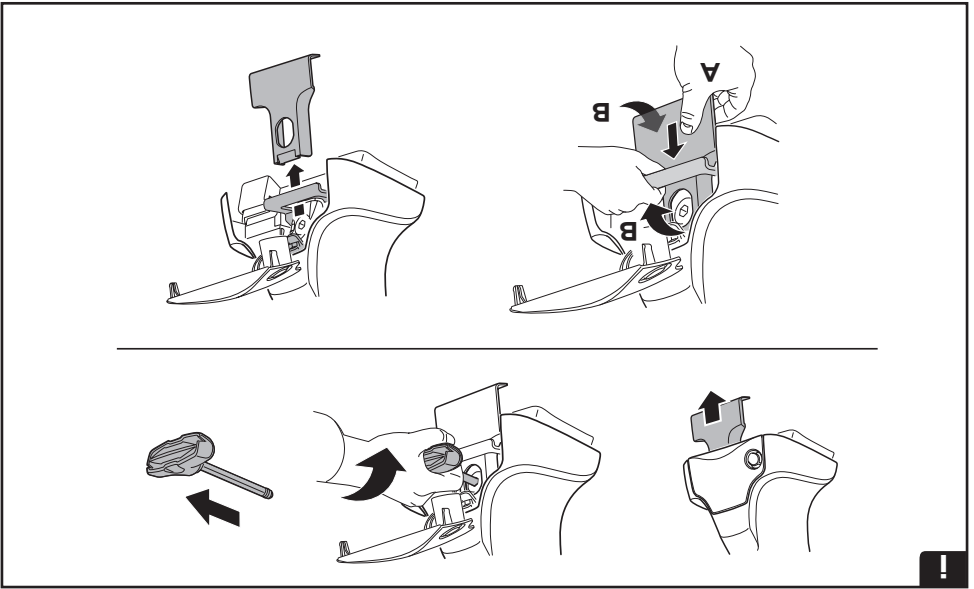


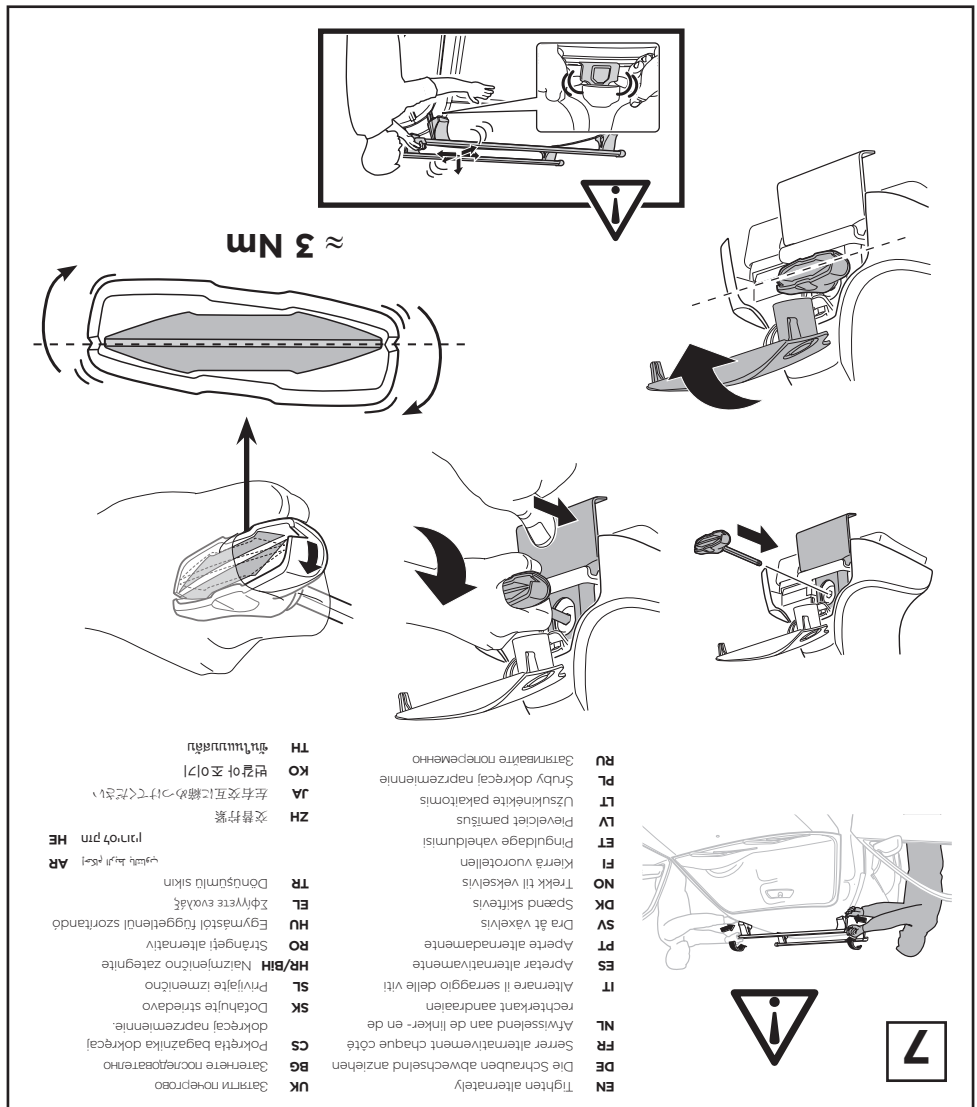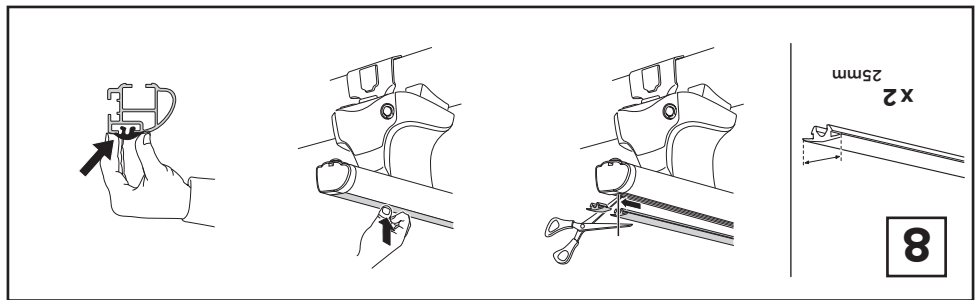


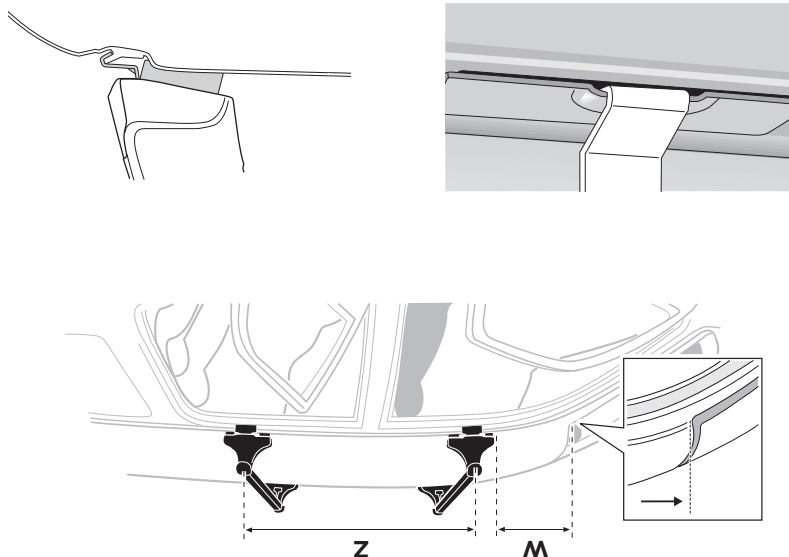


CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08	770	600	30 $\frac{3}{8}$	23 $\frac{3}{8}$
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12	320	700	12 $\frac{5}{8}$	27 $\frac{1}{2}$
PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08	770	600	30 $\frac{3}{8}$	23 $\frac{3}{8}$
PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08	770	600	30 $\frac{3}{8}$	23 $\frac{3}{8}$


X mm Y mm X inch Y inch

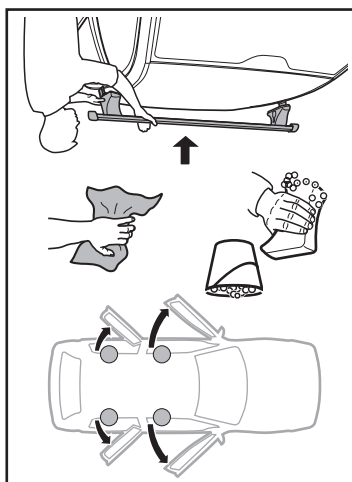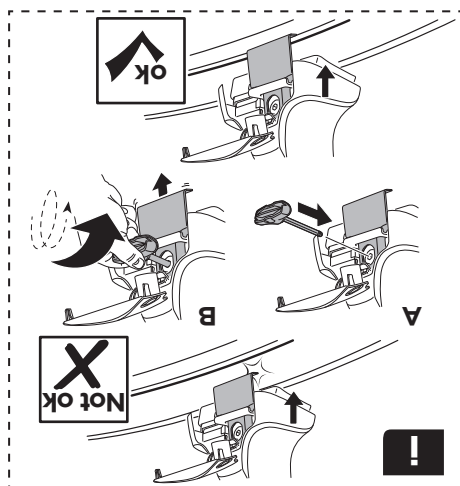

6

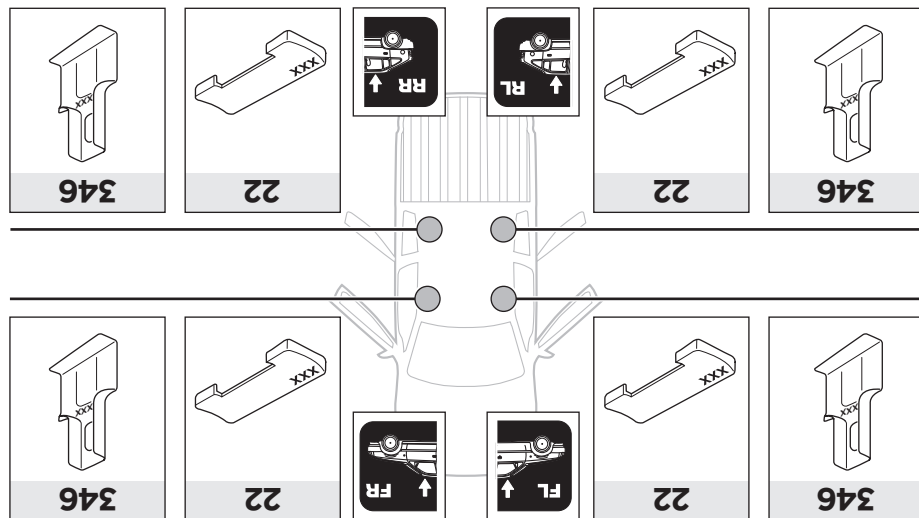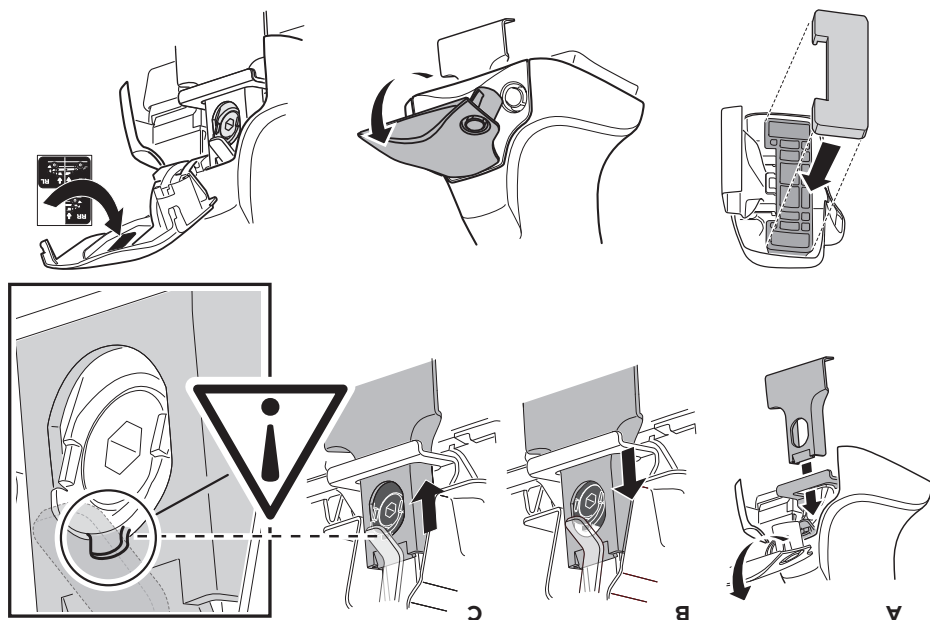

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
 CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
 PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
 PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

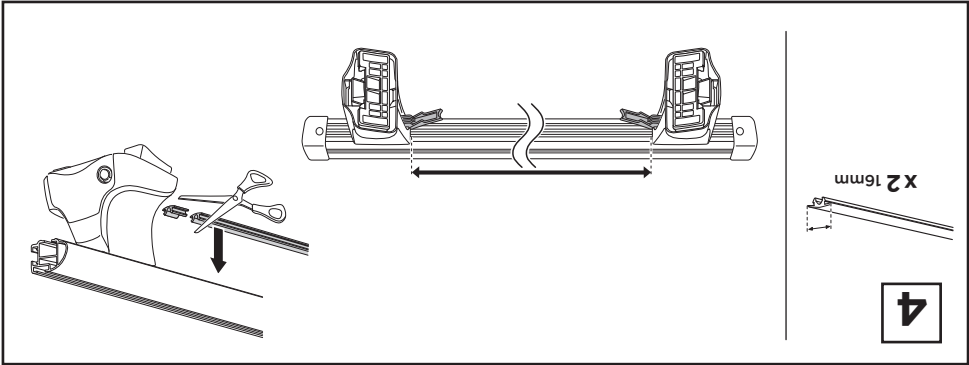

1

Y inch/mm

2

Y inch	Y mm
35 1/8	891
35 1/8	891
33 1/2	851
35 1/8	891

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

1




X inch/mm

2


X inch	X mm
34 7/8	886
34 7/8	886
33 7/8	861
34 7/8	886

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12
PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08







3

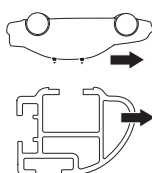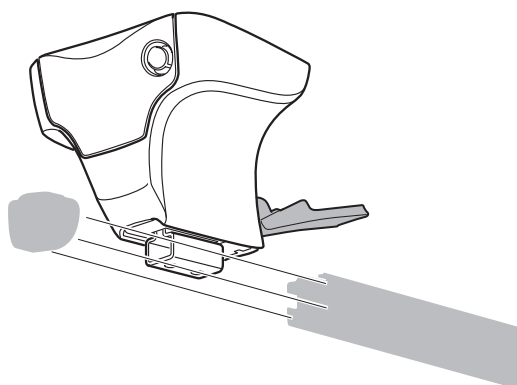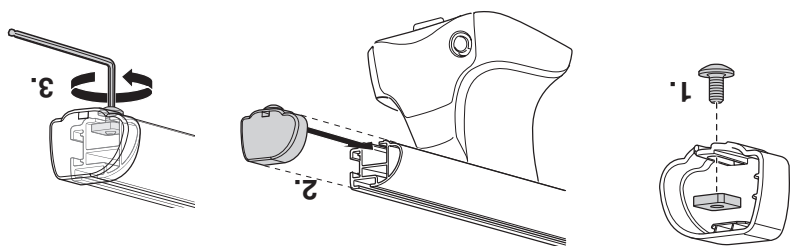

2

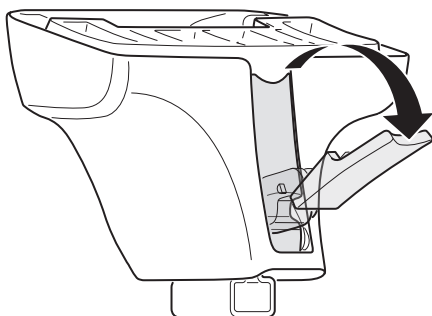

1

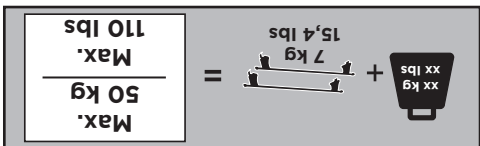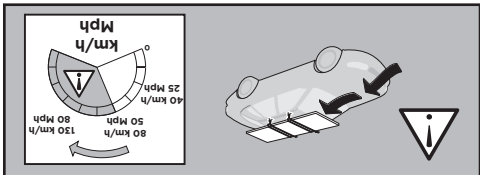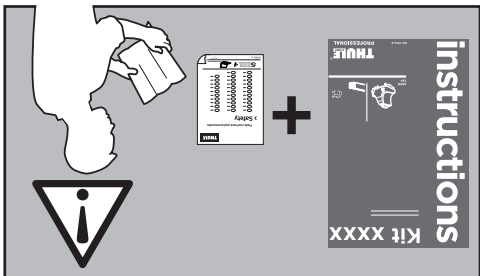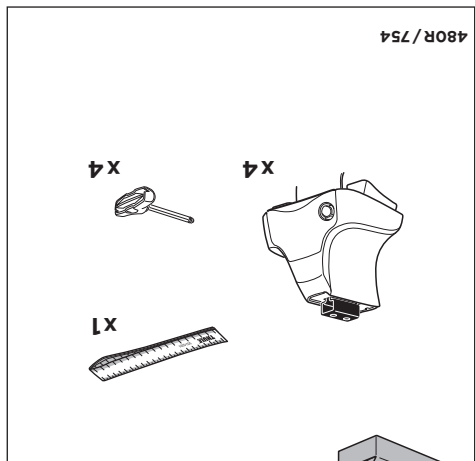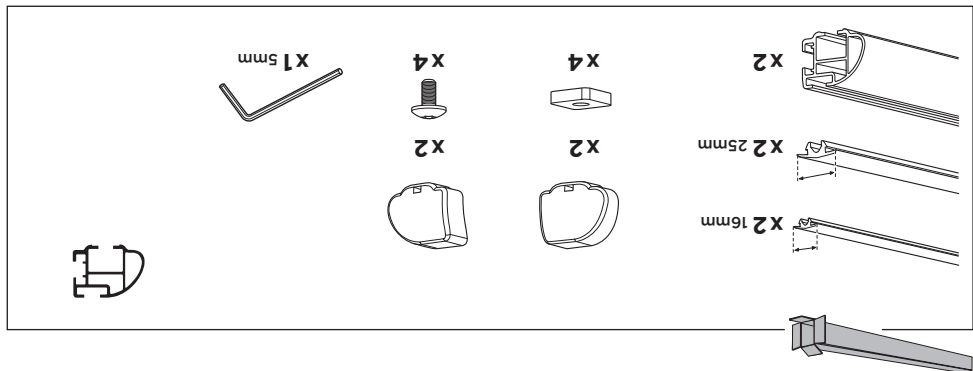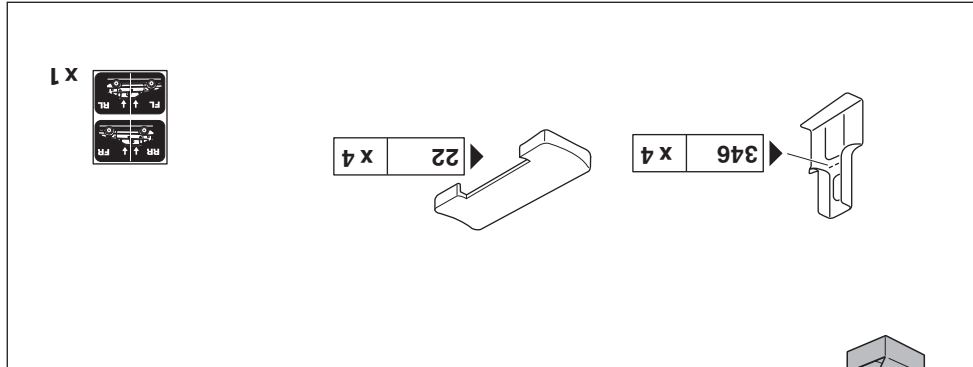


instructions

Kit 1184

CITROËN Berlingo, 3/4-dr Van, 97-02, 03-08
 CITROËN Xsara Picasso, 5-dr MPV, 00-03, 04-12*
 PEUGEOT Partner, 3/4-dr Van, 97-02, 03-08
 PEUGEOT Ranch, 3/4-dr Van, 97-02, 03-08

* without sunroof

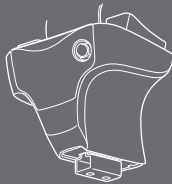

480R
754



ISO 11154-E

PROFESSIONAL

THULE
SWEDEN