





Thule Rapid System Kit 1193

> Instructions

VOLVO V70, 5-dr Estate, 00-03

VOLVO V70, 5-dr Wagon, *01-04

*North America

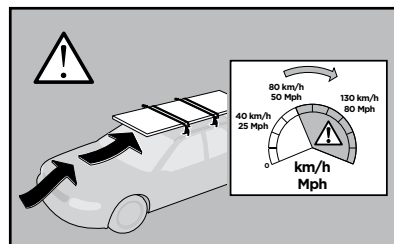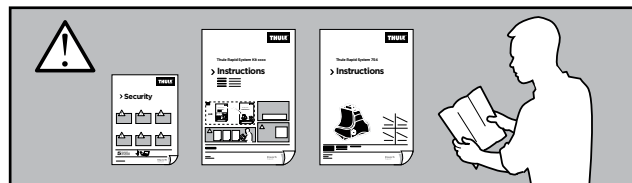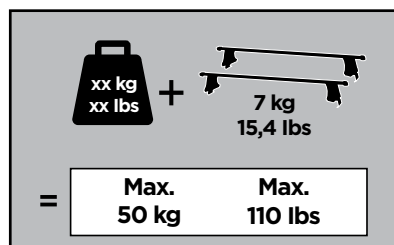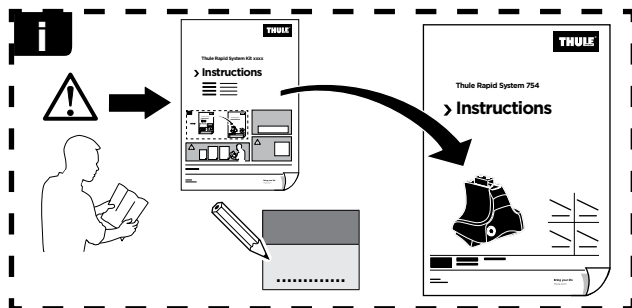

ISO 11154-E

141193




C.20121018
519-1193-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com





x1

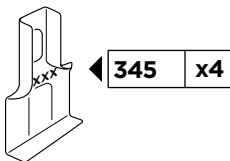

x1

1

	X (scale)	X (mm)	X (inch)
VOLVO V70 , 5-dr Estate, 00-03	36	1011	39 ³ / ₄
VOLVO V70 , 5-dr Wagon, *01-04	36	1011	39 ³ / ₄

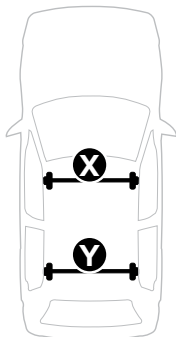
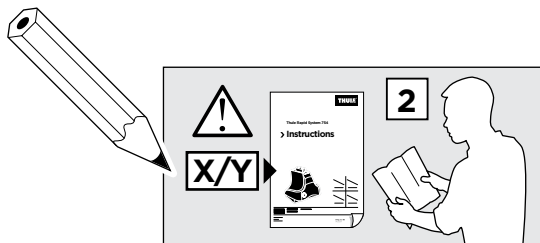


	Y (scale)	Y (mm)	Y (inch)
VOLVO V70 , 5-dr Estate, 00-03	35	1001	39 ³ / ₈
VOLVO V70 , 5-dr Wagon, *01-04	35	1001	39 ³ / ₈



2

VOLVO V70 5-dr Estate, 00-03

VOLVO V70 5-dr Wagon, *01-04

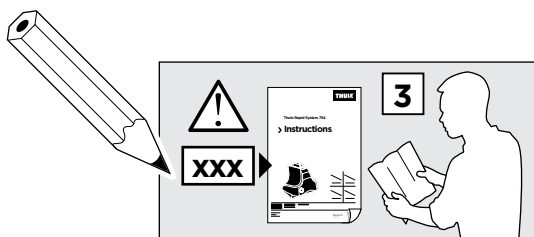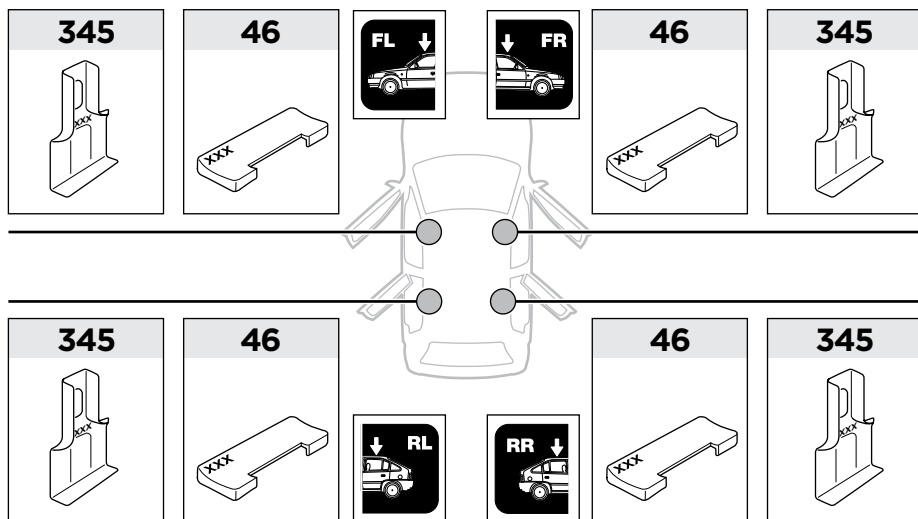

3

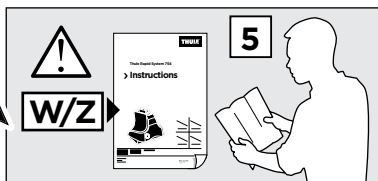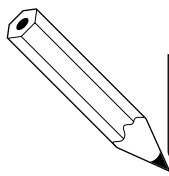

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO V70, 5-dr Estate, 00-03	460	700	18 1/8	27 1/2
VOLVO V70, 5-dr Wagon, *01-04	460	700	18 1/8	27 1/2

