







Thule Rapid System Kit 1202

> Instructions

HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08*

* Without roof railing

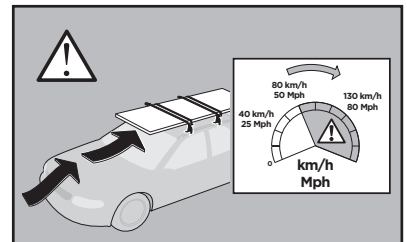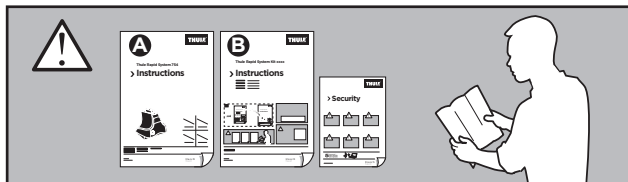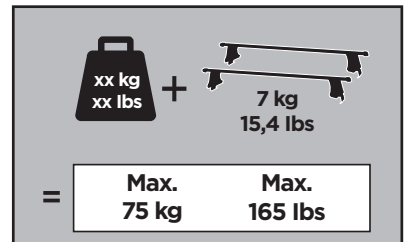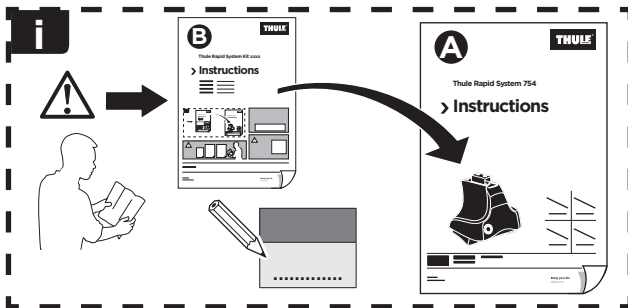

ISO 11154-E

141202

C.20130619
519-1202-01


Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



15

x4



370

x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08*	45	1101	43 ³ / ₈

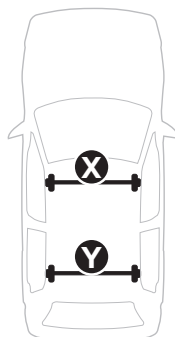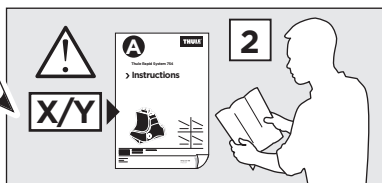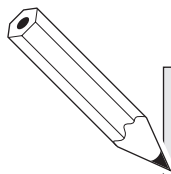


	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08*	43	1081	42 ¹ / ₂

2

HYUNDAI Trajet, 5-dr MPV, 99-03, 04-08*

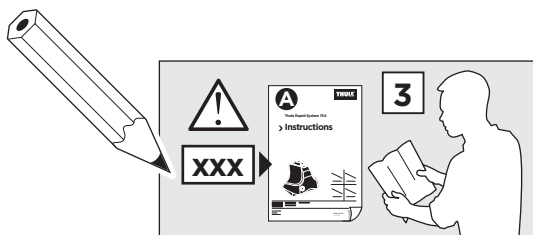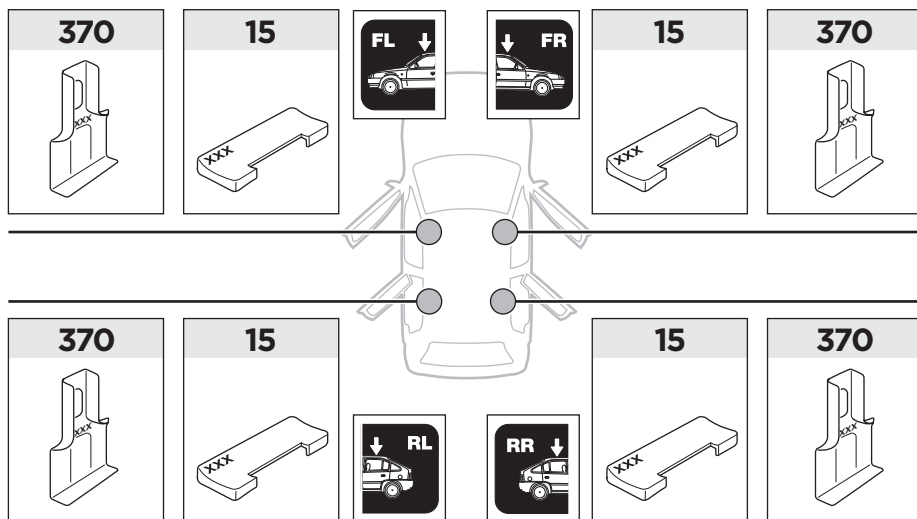

3

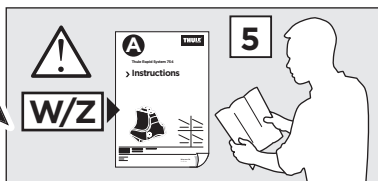

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Trajet , 5-dr MPV, 99-03, 04-08*	370	700	14 ⁵/₈	27 ¹/₂

