
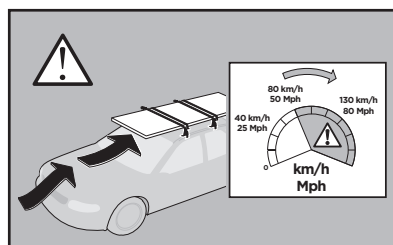
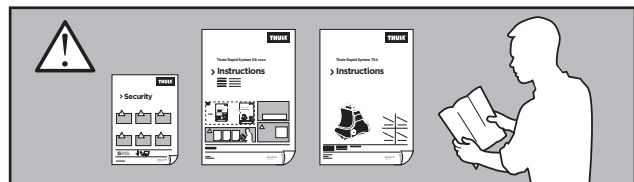
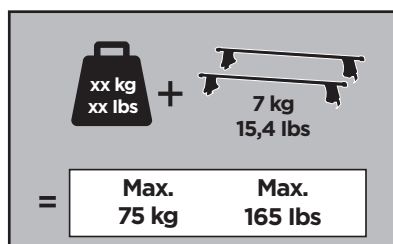


Thule Rapid System Kit 1260

> Instructions

CHRYSLER Voyager, 5-dr MPV, 01-07

CHRYSLER Grand Voyager, 5-dr MPV, 01-07

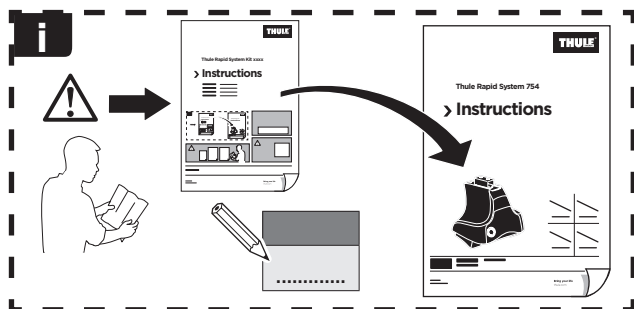

ISO 11154-E

141260

C.2013/0107
519-1260-01


Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



x1

85 x4






106 x4



x1

1

	X (scale)	X (mm)	X (inch)
CHRYSLER Voyager , 5-dr MPV, 01-07	37	1021	40 1/4
CHRYSLER Grand Voyager , 5-dr MPV, 01-07	37	1021	40 1/4

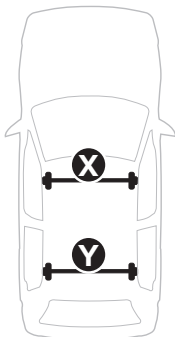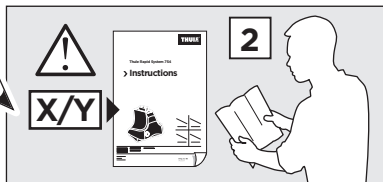
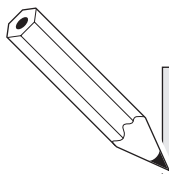


	Y (scale)	Y (mm)	Y (inch)
CHRYSLER Voyager , 5-dr MPV, 01-07	37	1021	40 1/4
CHRYSLER Grand Voyager , 5-dr MPV, 01-07	37	1021	40 1/4



2

CHRYSLER Voyager, 5-dr MPV, 01-07

CHRYSLER Grand Voyager, 5-dr MPV, 01-07

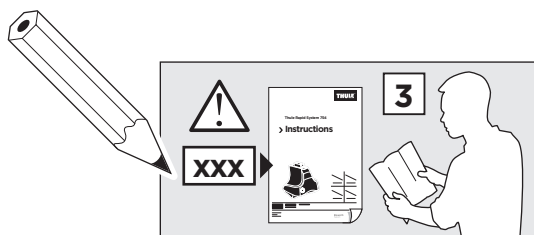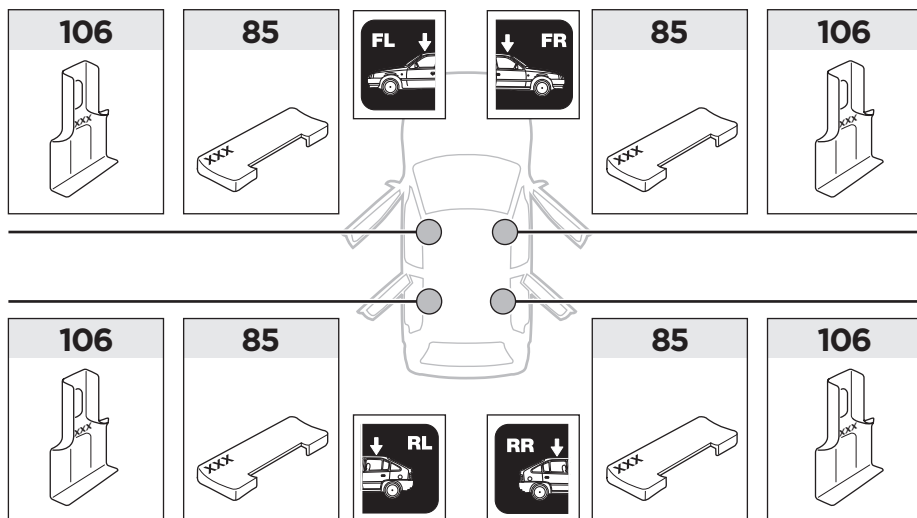

3

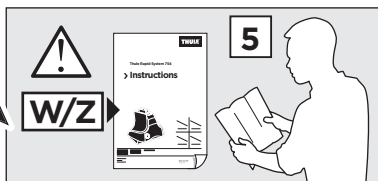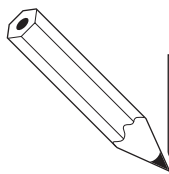

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHRYSLER Voyager , 5-dr MPV, 01-07	610	700	24	27 ½
CHRYSLER Grand Voyager , 5-dr MPV, 01-07	610	700	24	27 ½

