
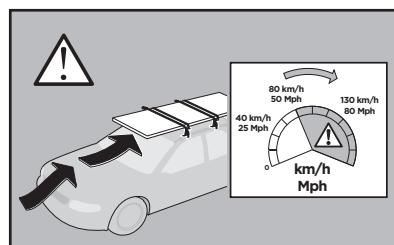
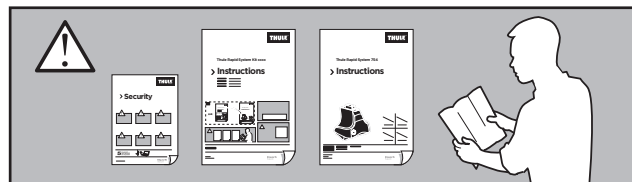
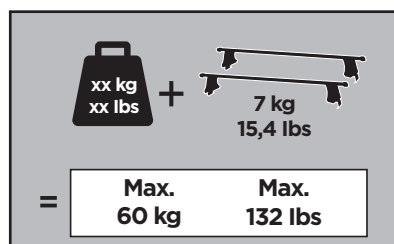


Thule Rapid System Kit 1288

> Instructions

TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07

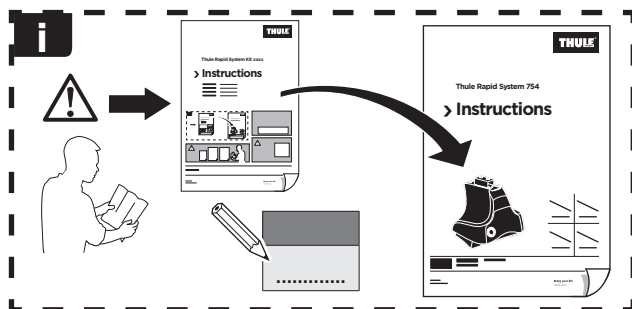

ISO 11154-E

141288


C.2013/0117
519-1288-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



109 x4




552 x2



553 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07	58	1231	48 1/2

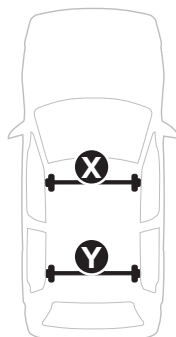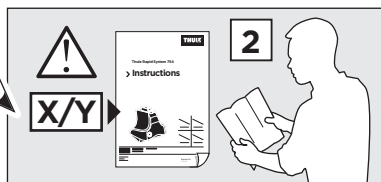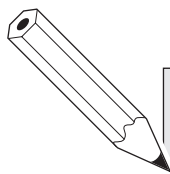


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07	56	1211	47 5/8

2

TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07

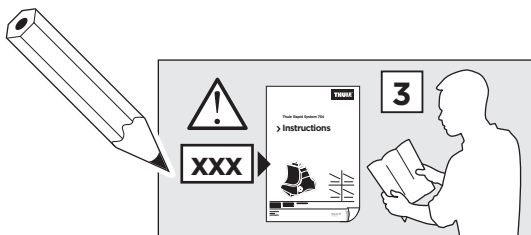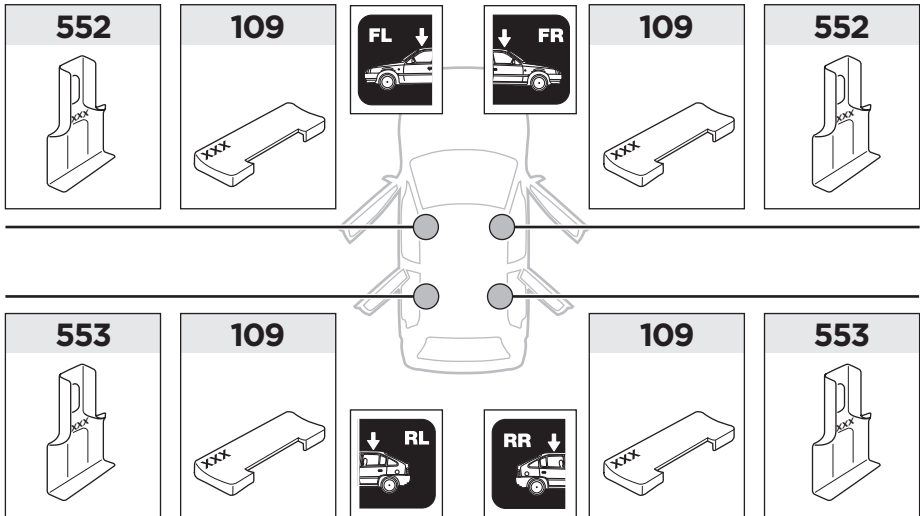

3

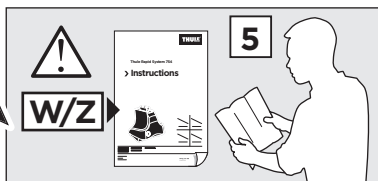

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Land Cruiser 100, 5-dr SUV, 98-01, 02-07	385	710	15 1/8	28

