
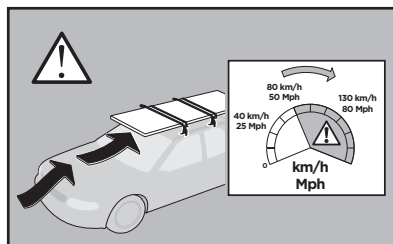
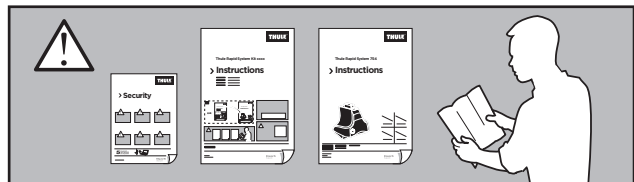
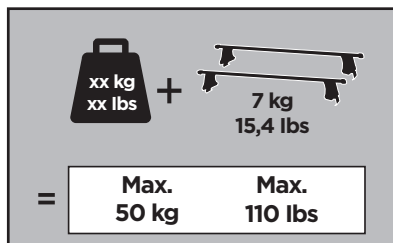


# Thule Rapid System Kit 1291

# > Instructions

KIA Carens, 5-dr MPV, 02-06

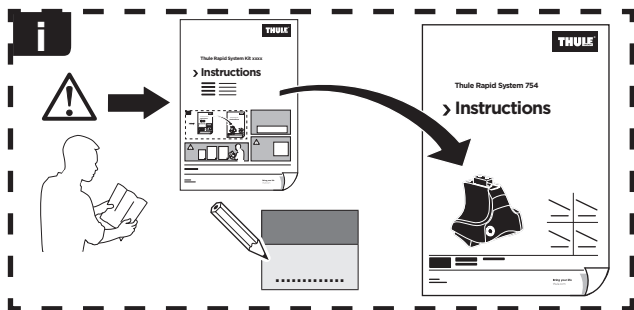

ISO 11154-E

141291

C.2013/0107  
519-1291-01


Herbály Autó [www.herbalyauto.hu](http://www.herbalyauto.hu)

Bring your life


[thule.com](http://thule.com)



19 x2



80 x2



503 x4





x1



x1

1



	X (scale)	X (mm)	X (inch)
KIA Carens, 5-dr MPV, 02-06	28,5	936	36 7/8

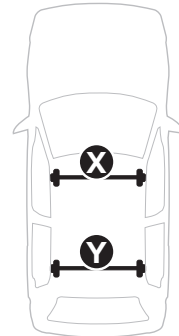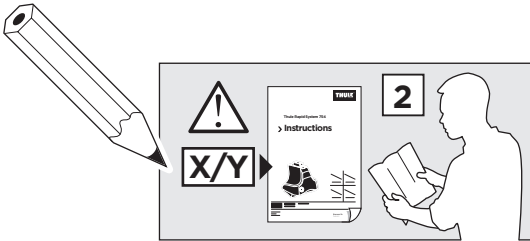


	Y (scale)	Y (mm)	Y (inch)
KIA Carens, 5-dr MPV, 02-06	27,5	926	36 1/2

**2**

**KIA Carens, 5-dr MPV, 02-06**

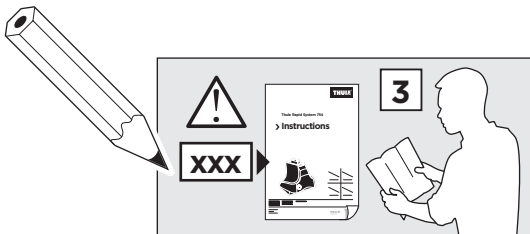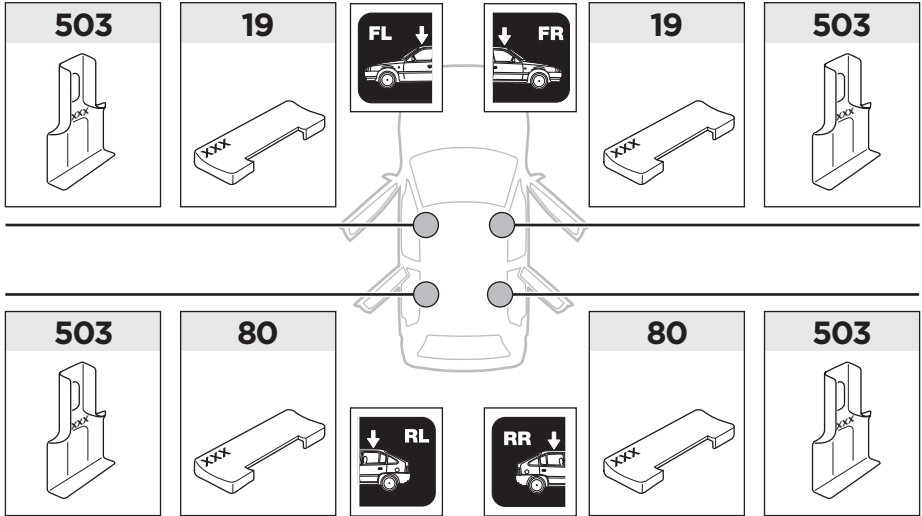

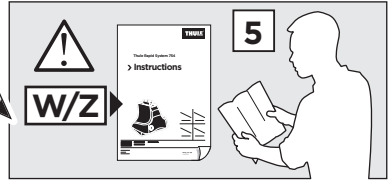**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>KIA Carens, 5-dr MPV, 02-06</b>	<b>390</b>	<b>700</b>	<b>15 <sup>3</sup>/<sub>8</sub></b>	<b>27 <sup>1</sup>/<sub>2</sub></b>

