
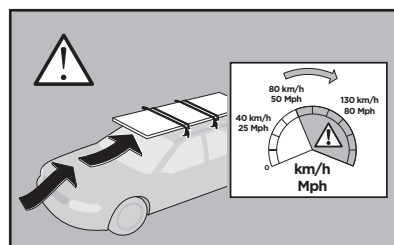
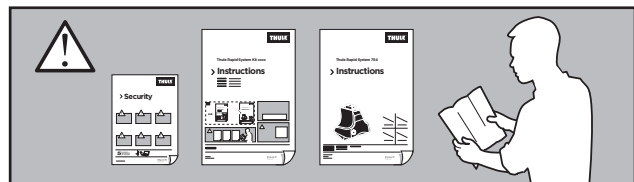
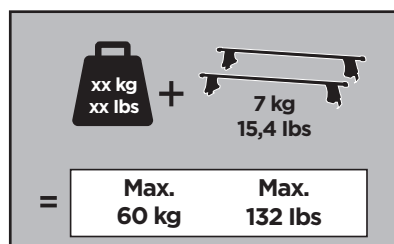


Thule Rapid System Kit 1296

> Instructions

TOYOTA Wish, 5-dr MPV, 03-

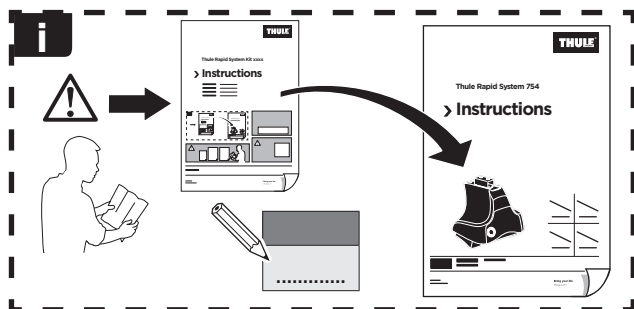

ISO 11154-E

141296


C.20121122
519-1296-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




120 x1



121 x1



124 x2




556 x2



557 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Wish, 5-dr MPV, 03-	29,5	946	37 ¹ / ₄

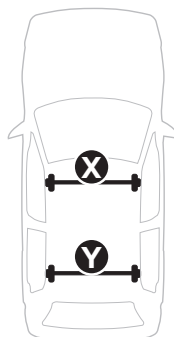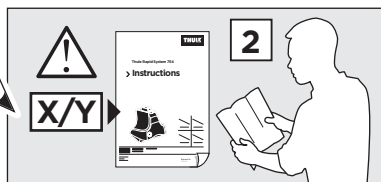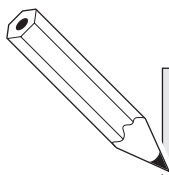



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Wish, 5-dr MPV, 03-	26	911	35 ⁷ / ₈

2

TOYOTA Wish, 5-dr MPV, 03-

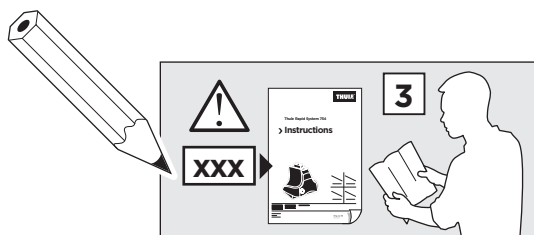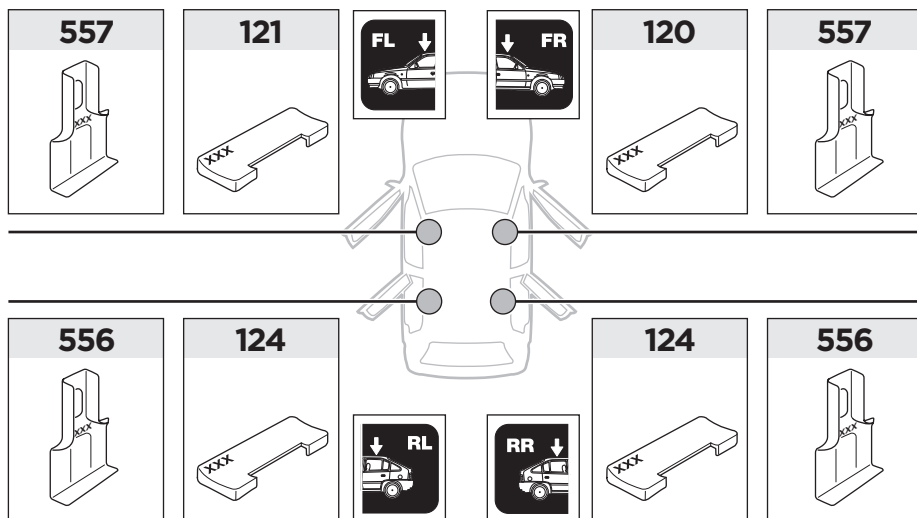

3

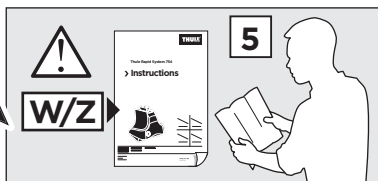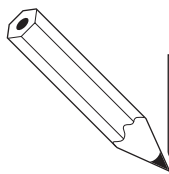

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Wish, 5-dr MPV, 03-	340	710	13 ³/₈	28

