





**THULE**
SWEDEN

Thule Rapid System Kit 1301

> Instructions

OPEL Meriva, 5-dr MPV, 03-09

VAUXHALL Meriva, 5-dr MPV, 03-09

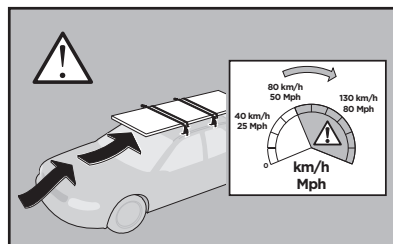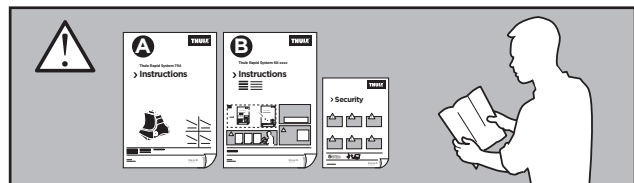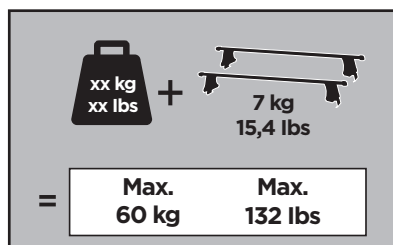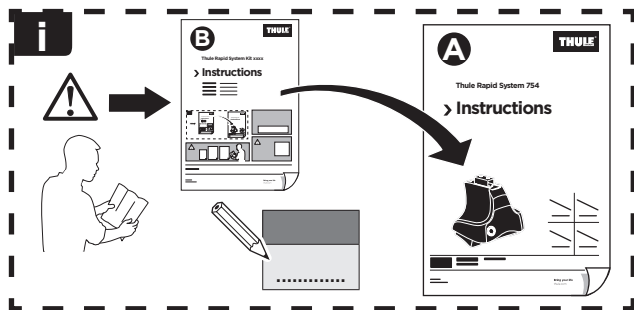

ISO 11154-E

141301


C.20130617
519-1301-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



04 x4



549 x2



x1






550 x2



x1

1

	X (scale)	X (mm)	X (inch)
OPEL Meriva, 5-dr MPV, 03-09	38,5	1036	40 ³/₄
VAUXHALL Meriva, 5-dr MPV, 03-09	38,5	1036	40 ³/₄

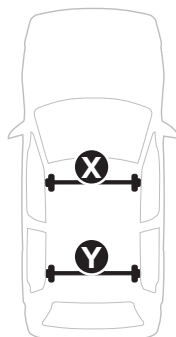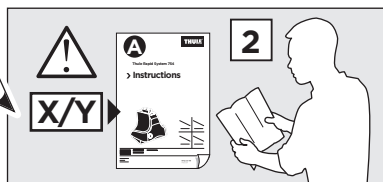
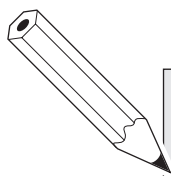


	Y (scale)	Y (mm)	Y (inch)
OPEL Meriva, 5-dr MPV, 03-09	32,5	976	38 ³/₈
VAUXHALL Meriva, 5-dr MPV, 03-09	32,5	976	38 ³/₈



2

OPEL Meriva, 5-dr MPV, 03-09

VAUXHALL Meriva, 5-dr MPV, 03-09

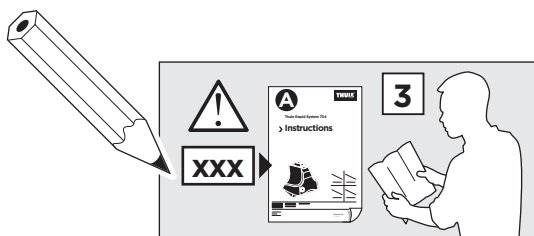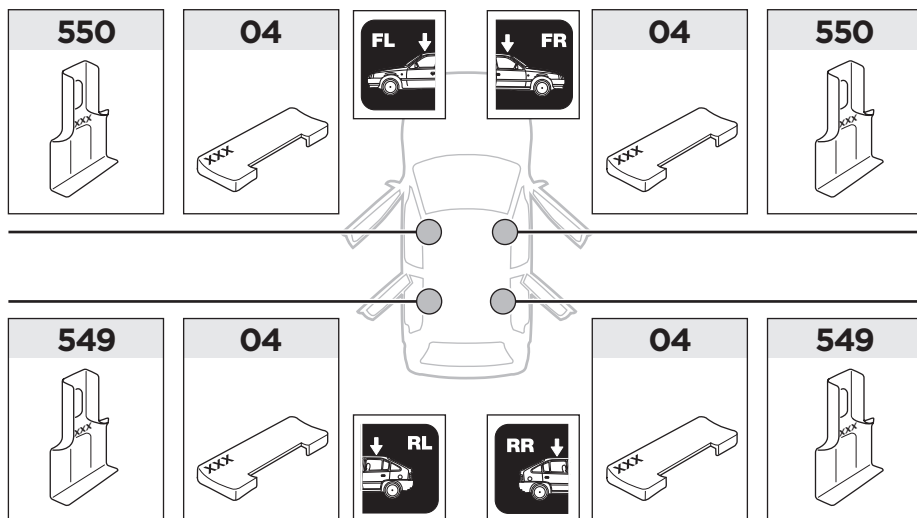

3

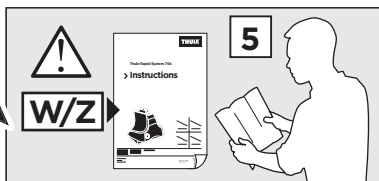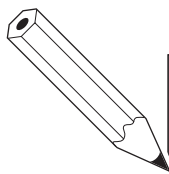

	W (mm)	Z (mm)	W (inch)	Z (inch)
OPEL Meriva, 5-dr MPV, 03-09	250	700	9 ⁷/₈	27 ¹/₂
VAUXHALL Meriva, 5-dr MPV, 03-09	250	700	9 ⁷/₈	27 ¹/₂

