





**THULE**
SWEDEN

Thule Rapid System Kit 1316

> Instructions

TOYOTA Succeed, 5-dr Estate, 02-

TOYOTA Probox, 5-dr Estate, 02-

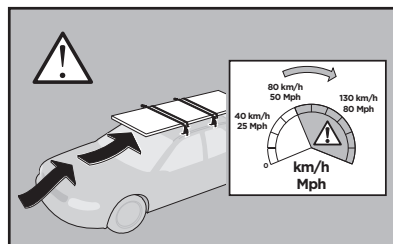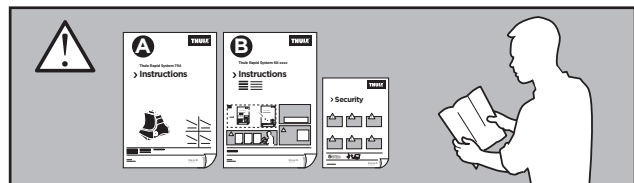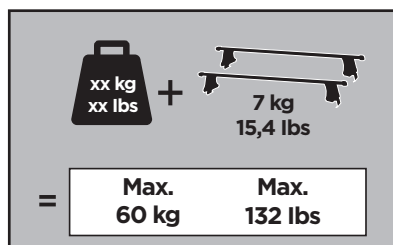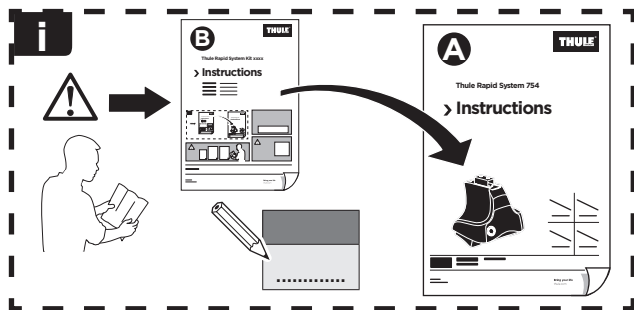

ISO 11154-E

141316

C.20130619
519-1316-01


Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



x1

119 x4






505 x4



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Succeed , 5-dr Estate, 02-	39	1041	41
TOYOTA Probox , 5-dr Estate, 02-	39	1041	41

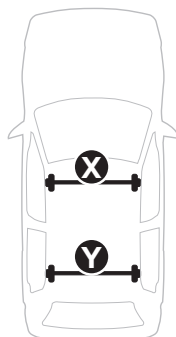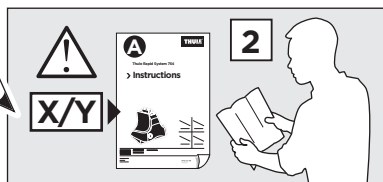
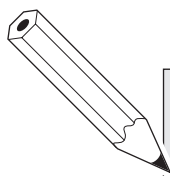


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Succeed , 5-dr Estate, 02-	37	1021	40 1/4
TOYOTA Probox , 5-dr Estate, 02-	37	1021	40 1/4


2

TOYOTA Succeed, 5-dr Estate, 02-

TOYOTA Probox, 5-dr Estate, 02-

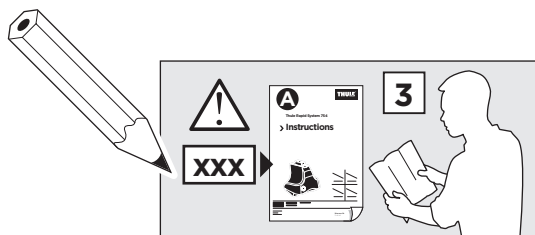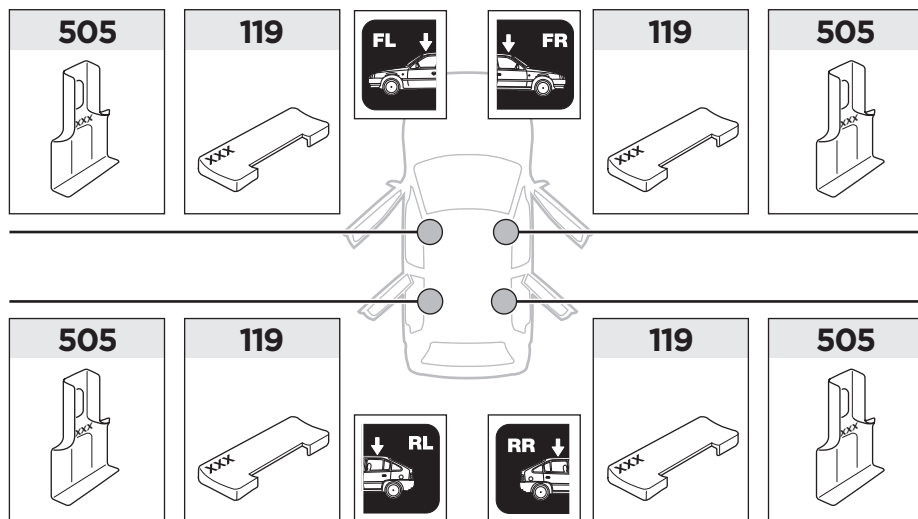

3

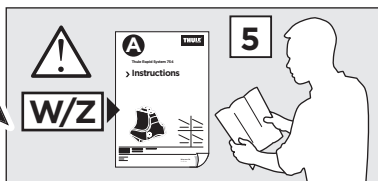

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Succeed , 5-dr Estate, 02-	430	705	16 ⁷/₈	27 ³/₄
TOYOTA Probox , 5-dr Estate, 02-	430	705	16 ⁷/₈	27 ³/₄

