
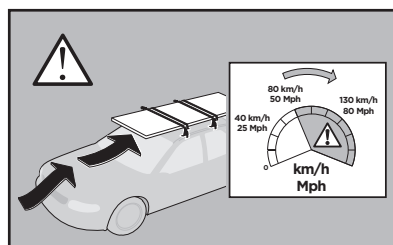
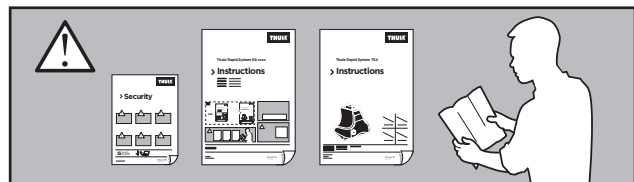
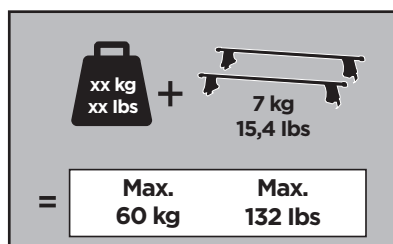


Thule Rapid System Kit 1337

> Instructions

VW Fox, 3-dr Hatchback, 03–

VW Fox, 5-dr Hatchback, 05–

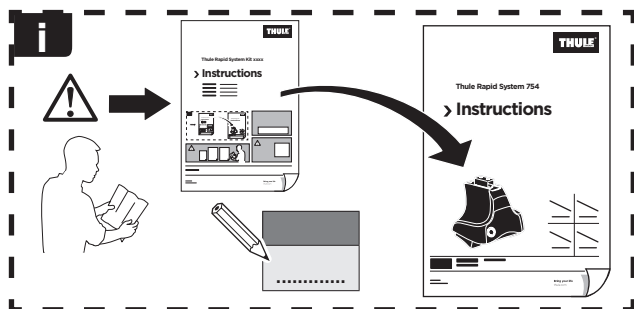

ISO 11154-E

141337


C.20121122
519-1337-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



217 x4



598 x4



x1




x1



x4






743 x2



x1



1

	X (scale)	X (mm)	X (inch)
VW Fox, 3-dr Hatchback, 03-	35	1001	39 ³ / ₈
VW Fox, 5-dr Hatchback, 05-	35	1001	39 ³ / ₈

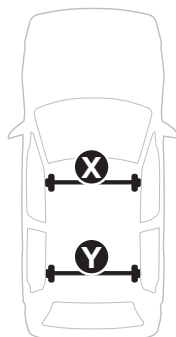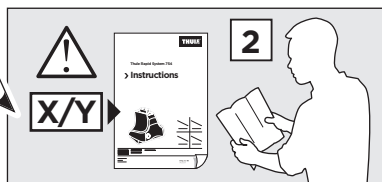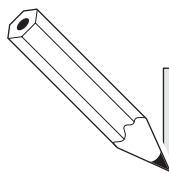


	Y (scale)	Y (mm)	Y (inch)
VW Fox, 3-dr Hatchback, 03-	32,5	976	38 ³ / ₈
VW Fox, 5-dr Hatchback, 05-	32,5	976	38 ³ / ₈


2

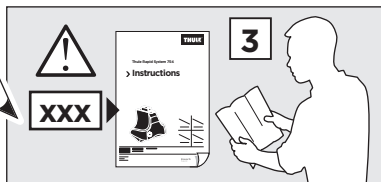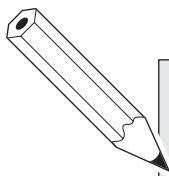



VW Fox, 3-dr Hatchback, 03-

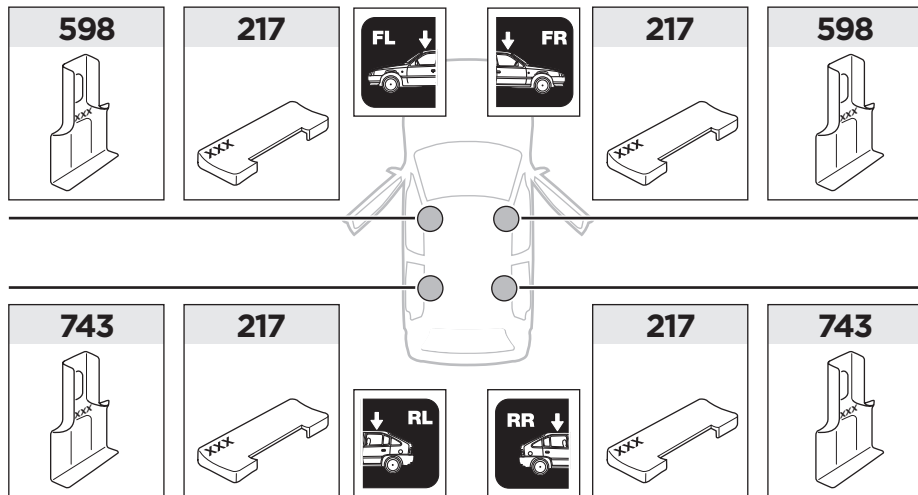


VW Fox, 5-dr Hatchback, 05-

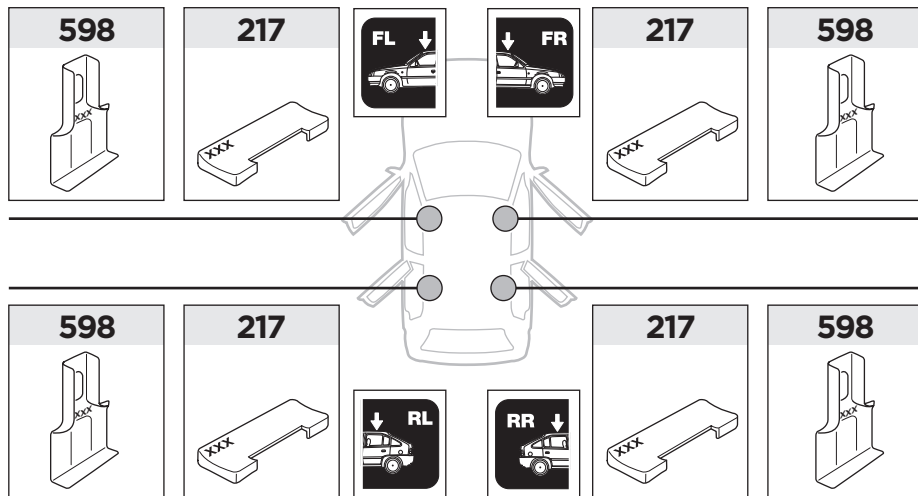


3

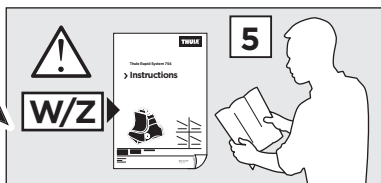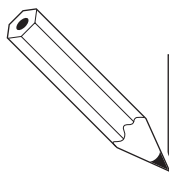

	W (mm)	Z (mm)	W (inch)	Z (inch)
VW Fox, 3-dr Hatchback, 03-	330	720	13	28 ³/₈
VW Fox, 5-dr Hatchback, 05-	330	745	13	29 ³/₈

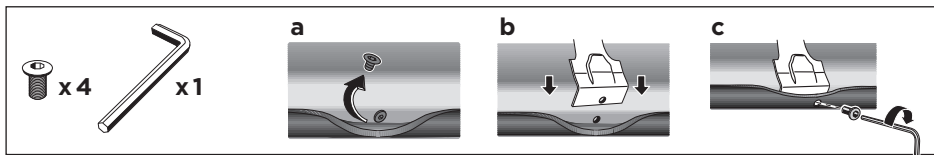

VW Fox, 3-dr Hatchback, 03-

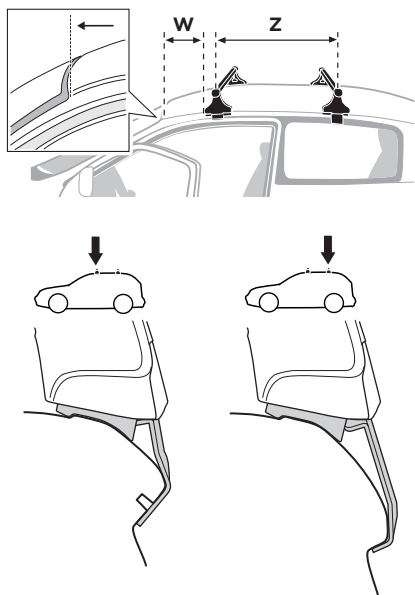

VW Fox, 5-dr Hatchback, 05-

