
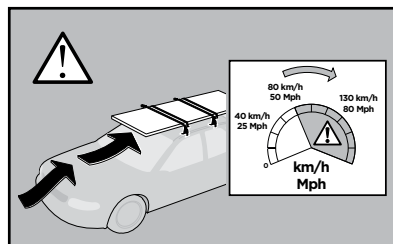
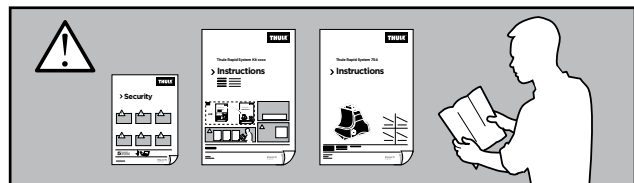
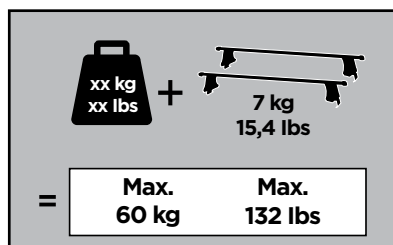


Thule Rapid System Kit 1345

> Instructions

TOYOTA Prius, 5-dr Hatchback, 04-08 / *04-09


*North America

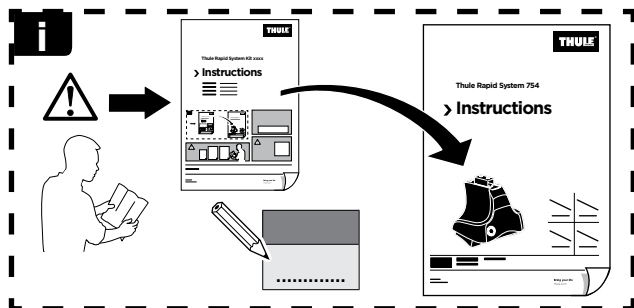


ISO 11154-E



163 x2




164 x2



727 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Prius, 5-dr Hatchback, 04-08 / *04-09	40	1051	41 ³ / ₈

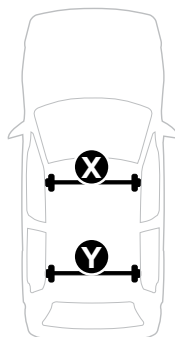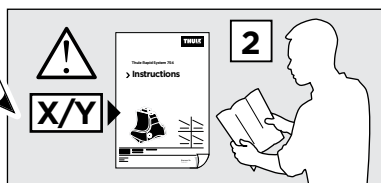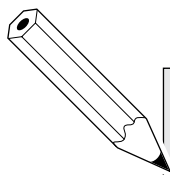



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Prius, 5-dr Hatchback, 04-08 / *04-09	38	1031	40 ⁵ / ₈

2

TOYOTA Prius, 5-dr Hatchback, 04-08 / *04-09

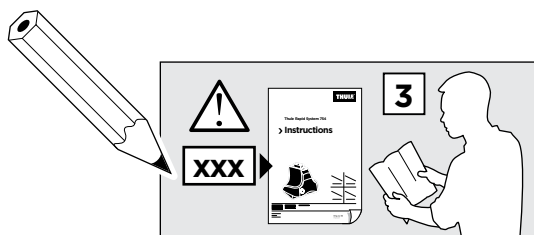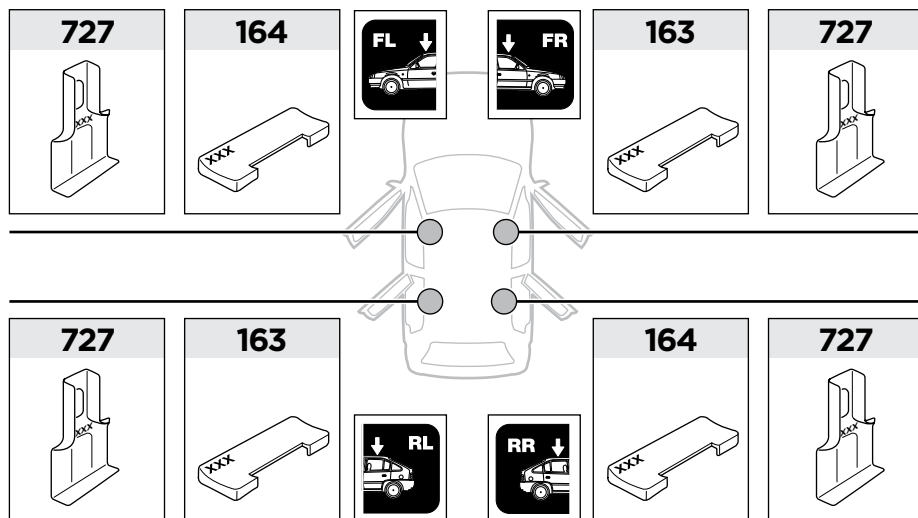

3

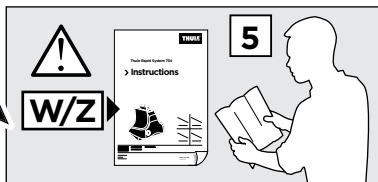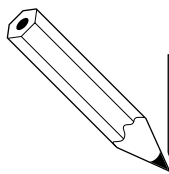

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Prius, 5-dr Hatchback, 04-08 / *04-09	320	600	12 ⁵/₈	23 ⁵/₈

