





Thule Rapid System Kit 1369

> Instructions

VOLVO V50, 5-dr Estate, 04-12

VOLVO V50, 5-dr Wagon, *05-10


*North America

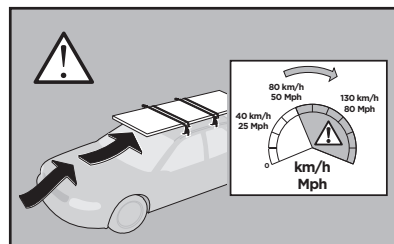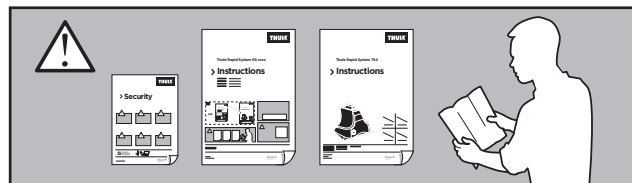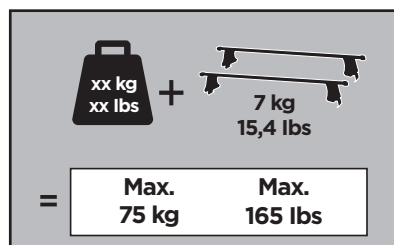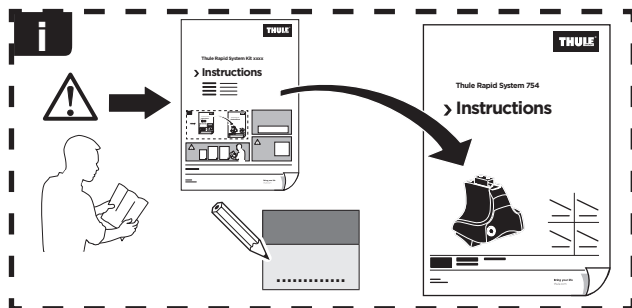


ISO 11154-E



163 x2



164 x2




629 x2



697 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
VOLVO V50 , 5-dr Estate, 04-12	41	1061	41 ³ / ₄
VOLVO V50 , 5-dr Wagon, *05-10	41	1061	41 ³ / ₄

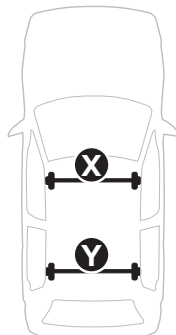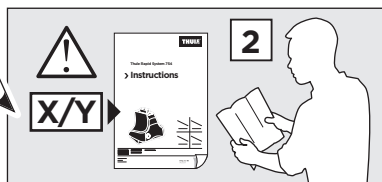
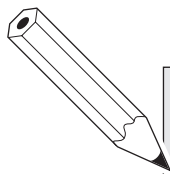


	Y (scale)	Y (mm)	Y (inch)
VOLVO V50 , 5-dr Estate, 04-12	37	1021	40 ¹ / ₄
VOLVO V50 , 5-dr Wagon, *05-10	37	1021	40 ¹ / ₄



2

VOLVO V50, 5-dr Estate, 04-12

VOLVO V50, 5-dr Wagon, *05-10

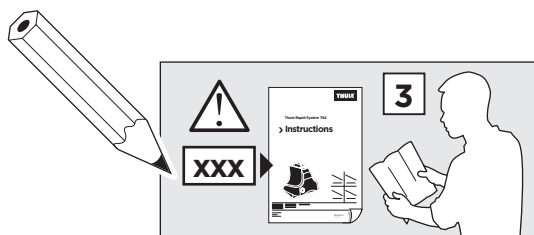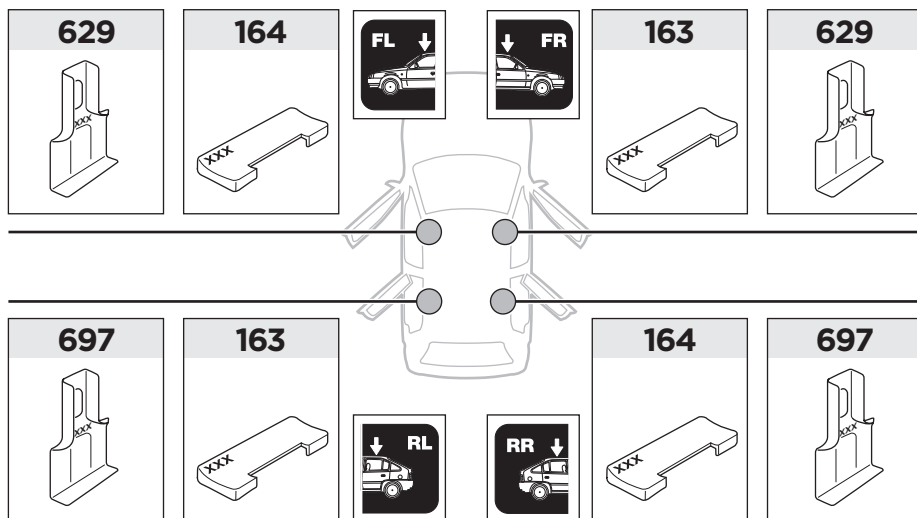

3

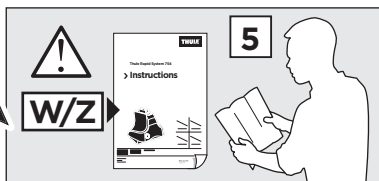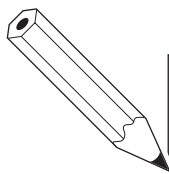

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO V50 , 5-dr Estate, 04-12	225	800	8 ⁷/₈	31 ¹/₂
VOLVO V50 , 5-dr Wagon, *05-10	225	800	8 ⁷/₈	31 ¹/₂

