
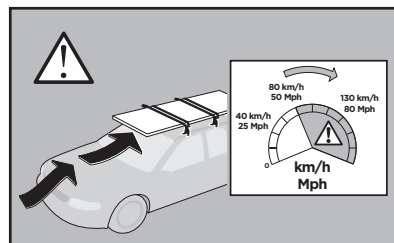
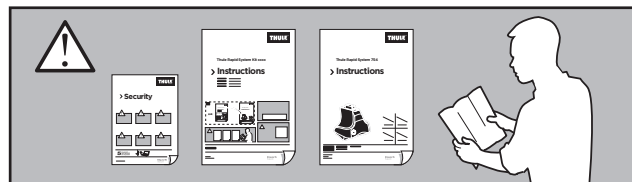
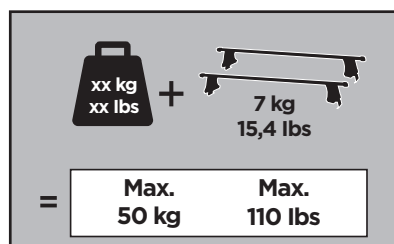


Thule Rapid System Kit 1371

> Instructions

TOYOTA Avanza, 5-dr MPV, 04-10

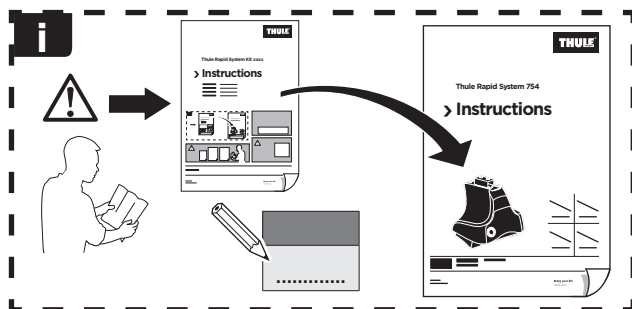

ISO 11154-E

141371


C.20130805
519-1371-02

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



32 x4




581 x2



x1






711 x2



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Avanza, 5-dr MPV, 04-10	33,5	986	38 ⁷ / ₈

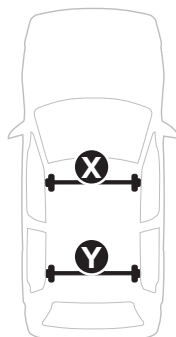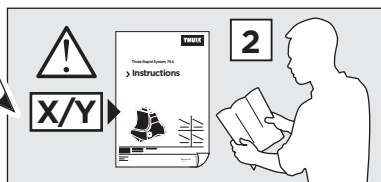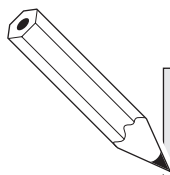


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Avanza, 5-dr MPV, 04-10	31,5	966	48

2

TOYOTA Avanza, 5-dr MPV, 04-10

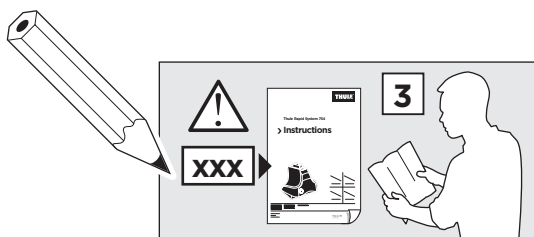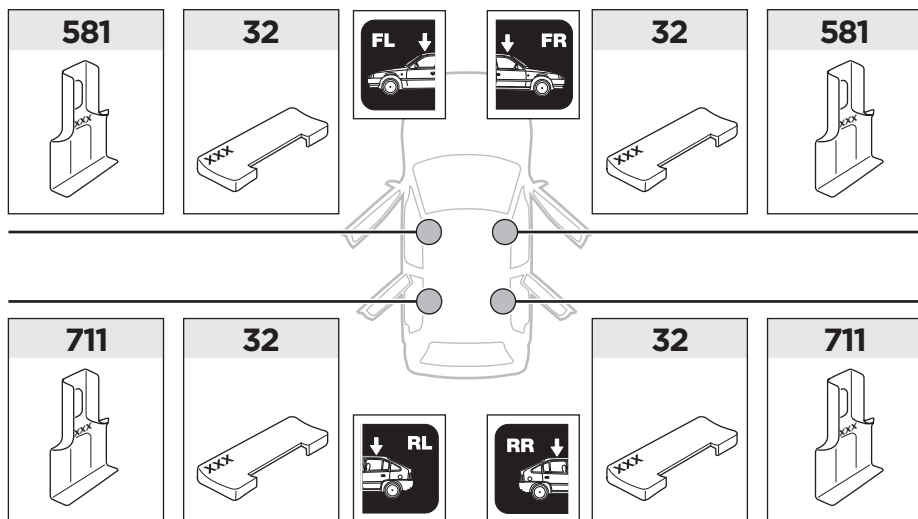

3

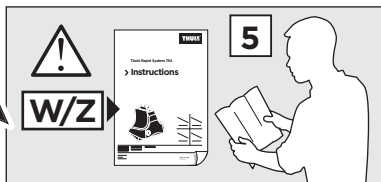

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Avanza , 5-dr MPV, 04-10	300	700	11 ³/₄	27 ¹/₂

