
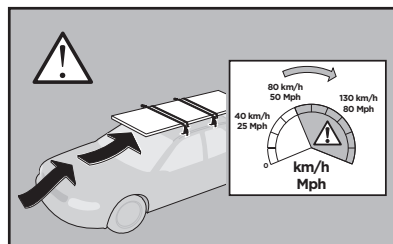
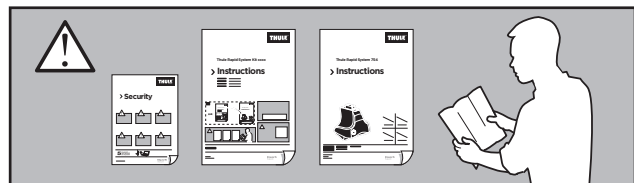
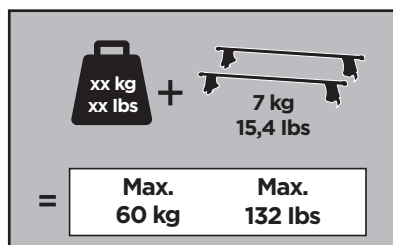


Thule Rapid System Kit 1385

> Instructions

TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-12


TOYOTA Vanguard, 5-dr SUV, 07-12

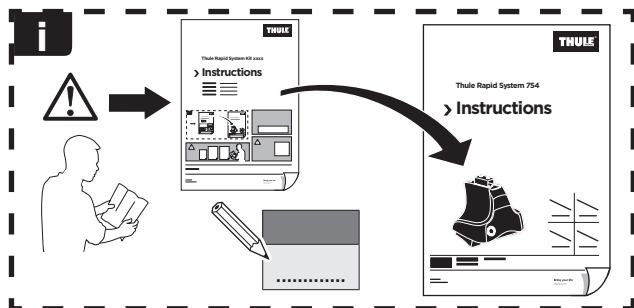


ISO 11154-E



07 x2



15 x2




679 x2



833 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-12	40,5	1056	41 1/2
TOYOTA Vanguard, 5-dr SUV, 07-12	40,5	1056	41 1/2

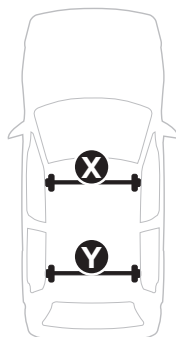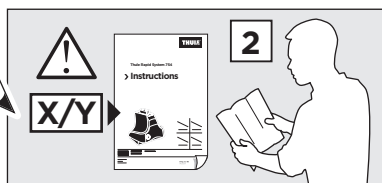
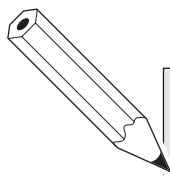


	Y (scale)	Y (mm)	Y (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-12	36	1011	39 3/4
TOYOTA Vanguard, 5-dr SUV, 07-12	36	1011	39 3/4


2

TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-12

TOYOTA Vanguard, 5-dr SUV, 07-12

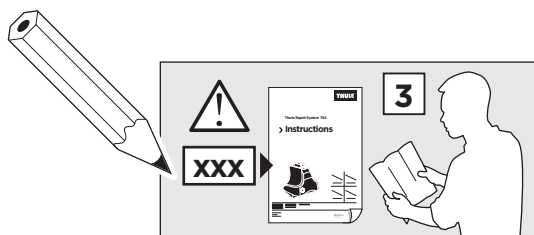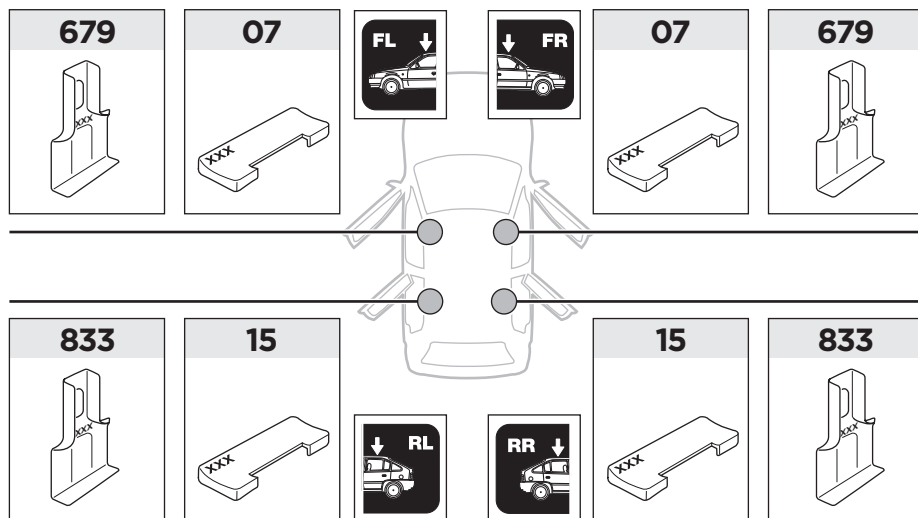

3

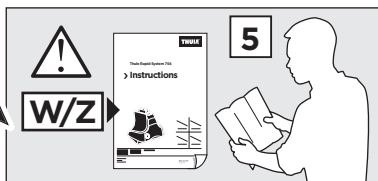

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Rav 4 (Mk.III.), 5-dr SUV, 05-12	470	710	18 1/2	28
TOYOTA Vanguard, 5-dr SUV, 07-12	470	710	18 1/2	28

