
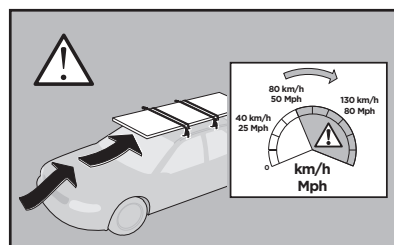
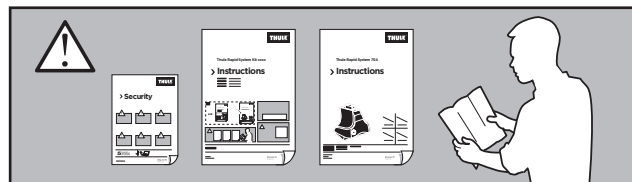
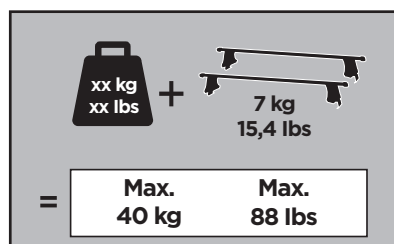


Thule Rapid System Kit 1399

> Instructions

NISSAN Note, 5-dr MPV, 05-11


NISSAN Livina, 5-dr MPV, 07-13

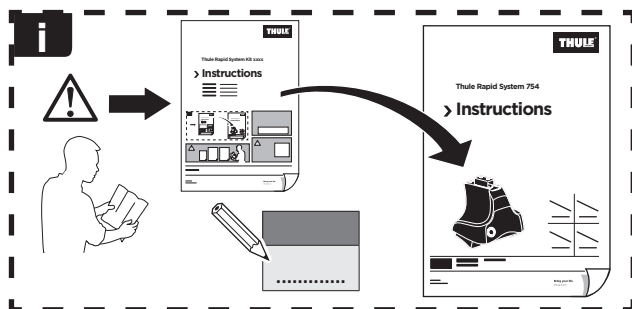


ISO 11154-E



209 x2



210 x2




732 x2



744 x2






x1



x1

1

	X (scale)	X (mm)	X (inch)
NISSAN Note , 5-dr MPV, 05-11	37,5	1026	40 ³ / ₈
NISSAN Livina , 5-dr MPV, 07-13	37,5	1026	40 ³ / ₈

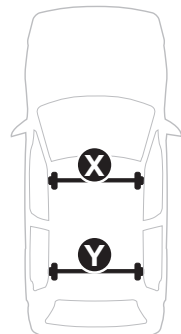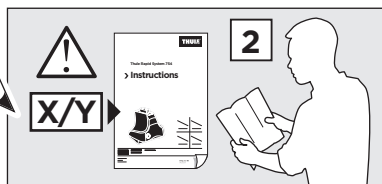
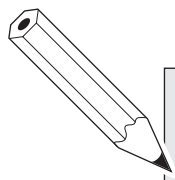


	Y (scale)	Y (mm)	Y (inch)
NISSAN Note , 5-dr MPV, 05-11	37,5	1026	40 ³ / ₈
NISSAN Livina , 5-dr MPV, 07-13	35	1001	39 ³ / ₈



2

NISSAN Note, 5-dr MPV, 05-11

NISSAN Livina, 5-dr MPV, 07-13

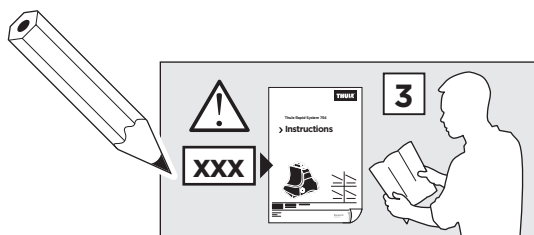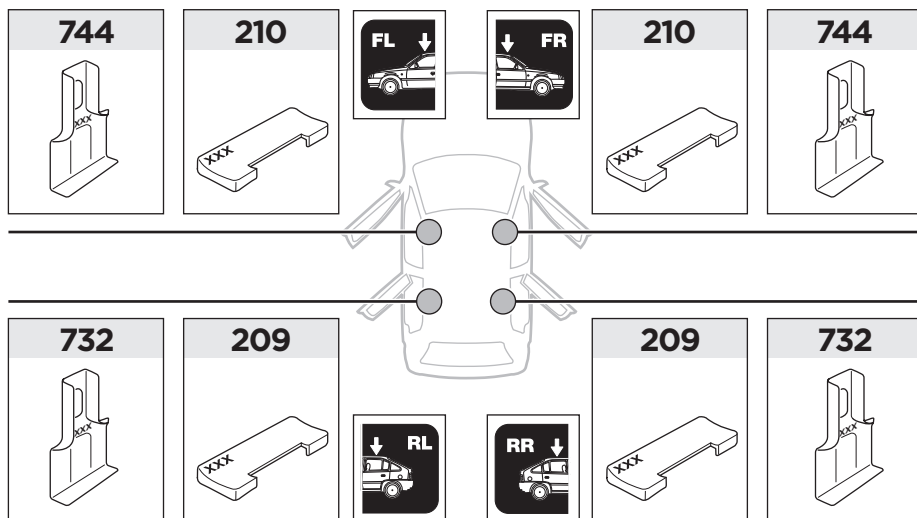

3

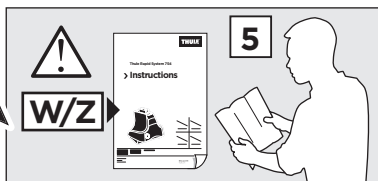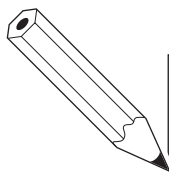

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Note , 5-dr MPV, 05-11	370	720	14 ⁵/₈	28 ³/₈
NISSAN Livina , 5-dr MPV, 07-13	370	720	14 ⁵/₈	28 ³/₈

