
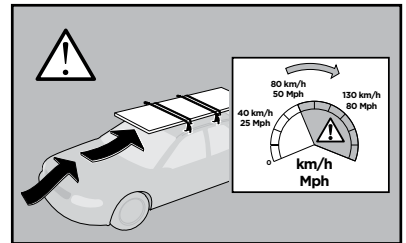
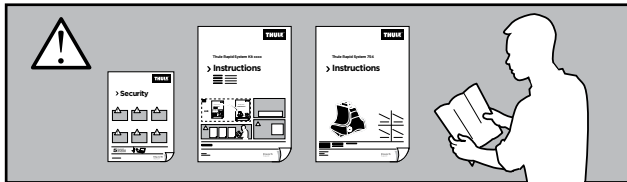
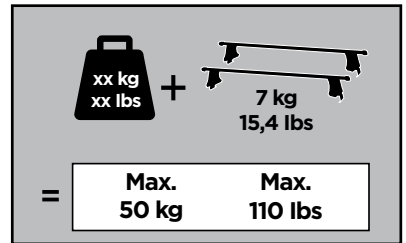


Thule Rapid System Kit 1415

> Instructions

CHEVROLET Matiz, 5-dr Hatchback, 05-09

CHEVROLET Spark, 5-dr Hatchback, 05-09

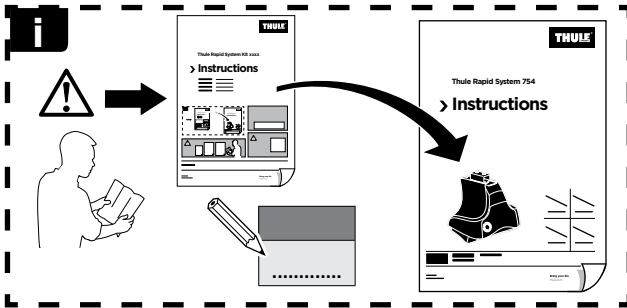

ISO 11154-E


141415

C.20121119
519-1415-02

Herbály Autó www.herbalyauto.hu



Bring your life

thule.com

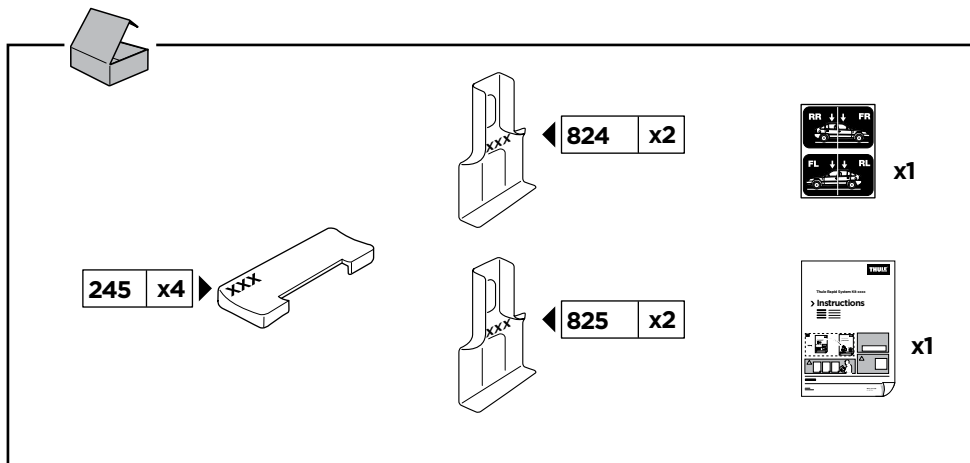

1

	X (scale)	X (mm)	X (inch)
CHEVROLET Matiz , 5-dr Hatchback, 05-09	21	861	33 ⁷/₈
CHEVROLET Spark , 5-dr Hatchback, 05-09	21	861	33 ⁷/₈

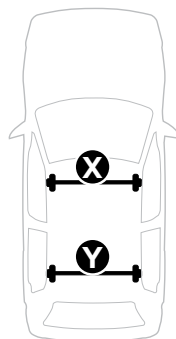
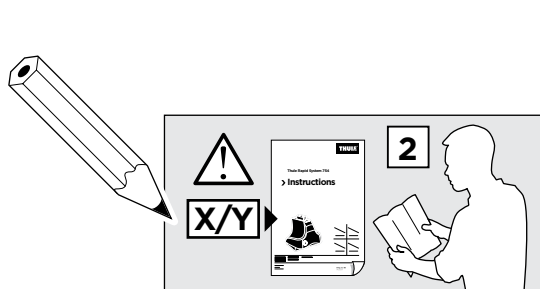



	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Matiz , 5-dr Hatchback, 05-09	18	831	32 ³/₄
CHEVROLET Spark , 5-dr Hatchback, 05-09	18	831	32 ³/₄

2

CHEVROLET Matiz, 5-dr Hatchback, 05-09

CHEVROLET Spark, 5-dr Hatchback, 05-09

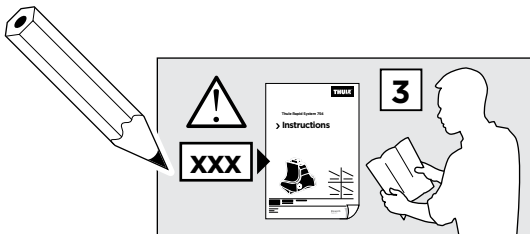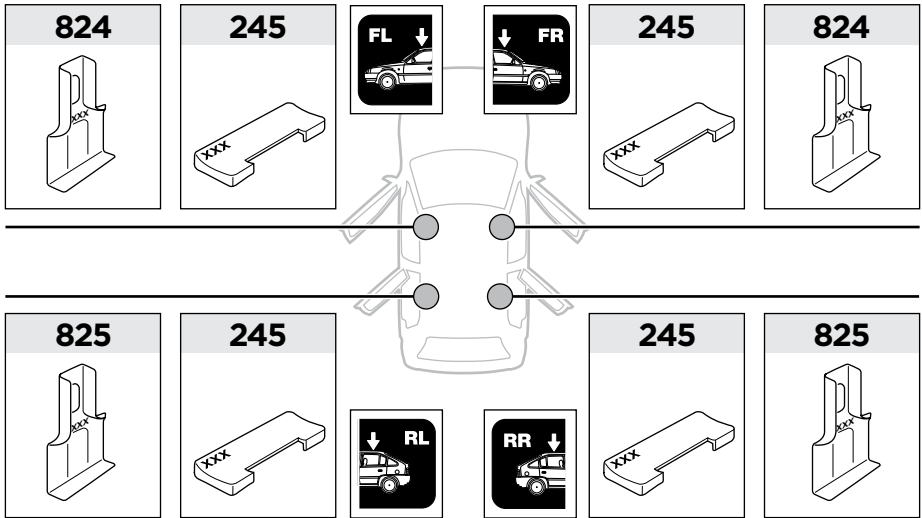

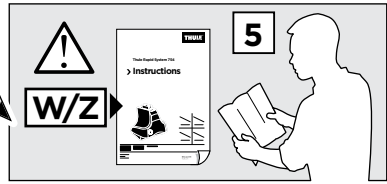3

	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET Matiz , 5-dr Hatchback, 05-09	250	700	9 7/8	27 1/2
CHEVROLET Spark , 5-dr Hatchback, 05-09	250	700	9 7/8	27 1/2

