
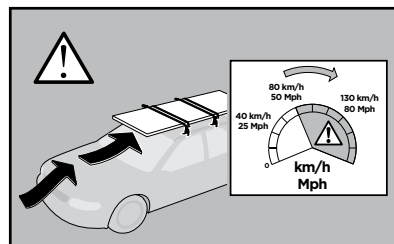
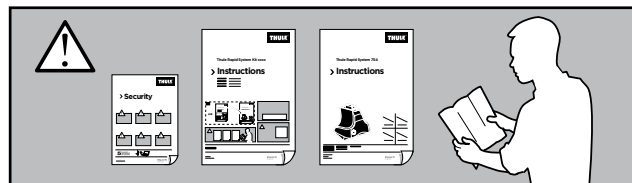
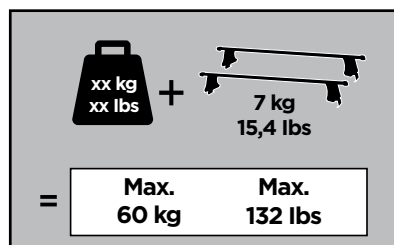


Thule Rapid System Kit 1441

> Instructions

VOLVO C30, 3-dr Coupé, 07-13 / *08-13

*North America

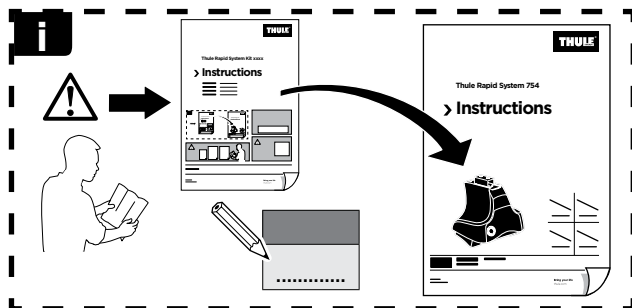

ISO 11154-E

141441

C.20151215
519-1441-03

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com




204 x1 ▶

206 x1 ▶

273 x1 ▶

274 x1 ▶




◀ 841 x2

◀ 842 x1

◀ 889 x1






x1



x1

1



	X (scale)	X (mm)	X (inch)
VOLVO C30 , 3-dr Coupé, 07-13 / *08-13	40,5	1056	41 ⁵ / ₈

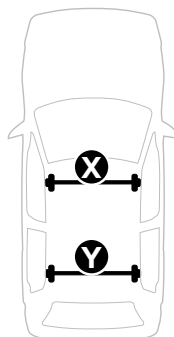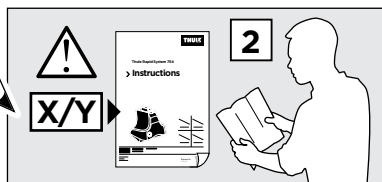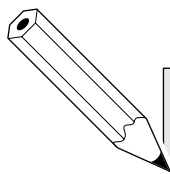



	Y (scale)	Y (mm)	Y (inch)
VOLVO C30 , 3-dr Coupé, 07-13 / *08-13	25	901	35 ¹ / ₂

2

VOLVO C30, 3-dr Coupé, 07-13 / *08-13

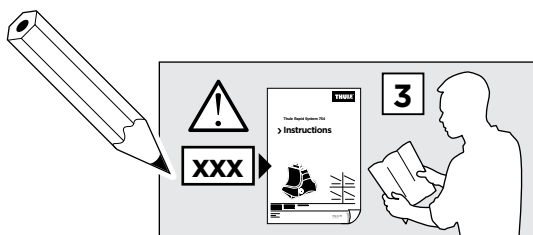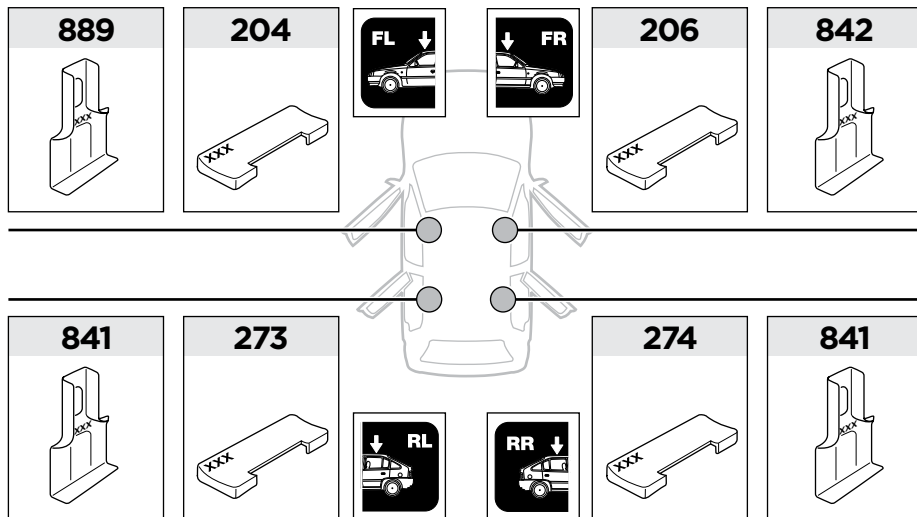

3

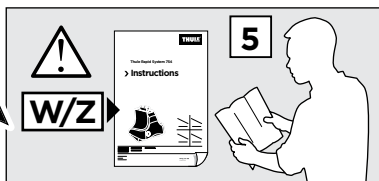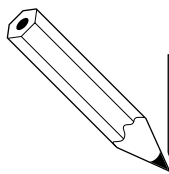

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLVO C30 , 3-dr Coupé, 07-13 / *08-13	220	770	8 ⁵/₈	30 ³/₈

