
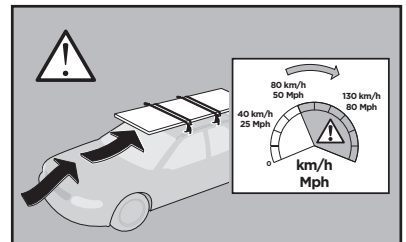
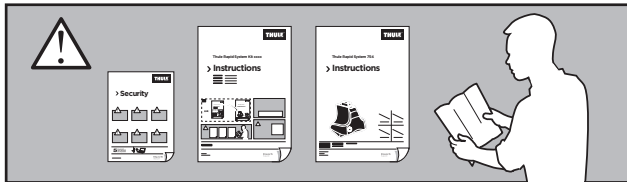
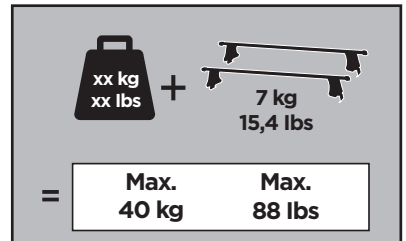


Thule Rapid System Kit 1472

> Instructions

FORD S-Max, 5-dr MPV, 06-15*

* Without fixpoint and with glassroof

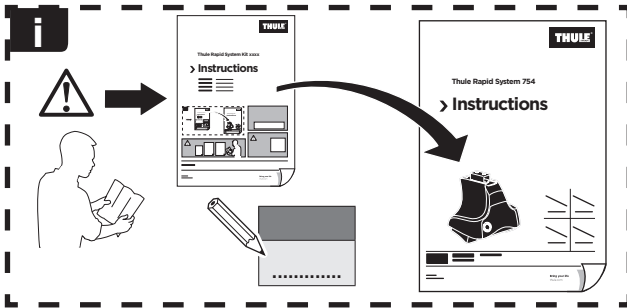

ISO 11154-E

141472
C.20150903
519-1472-03

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




65 x2



249 x1



250 x1




807 x2



956 x2





x1



x1

1


	X (scale)	X (mm)	X (inch)
FORD S-Max, 5-dr MPV, 06-15*	55	1201	47 1/4

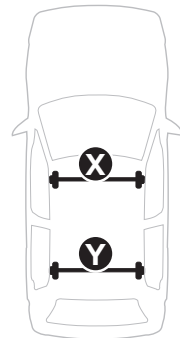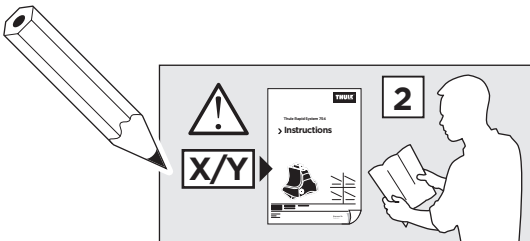


	Y (scale)	Y (mm)	Y (inch)
FORD S-Max, 5-dr MPV, 06-15*	55,5	1206	47 1/2

2

FORD S-Max, 5-dr MPV, 06-15*

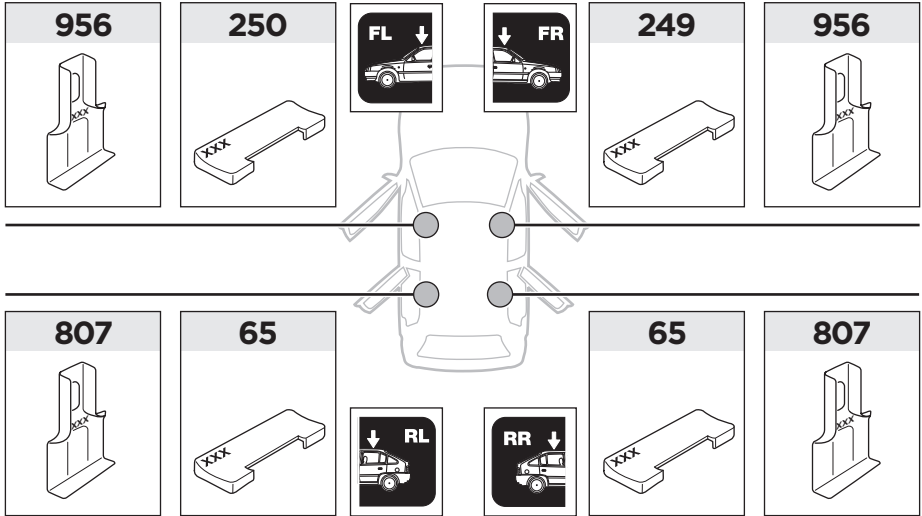

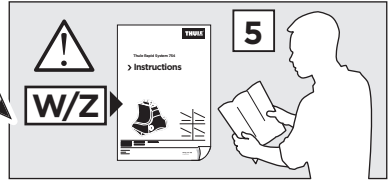3

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD S-Max, 5-dr MPV, 06-15*	420	735	16 1/2	28 7/8

