
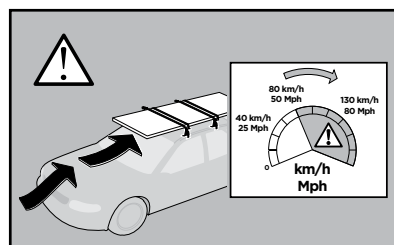
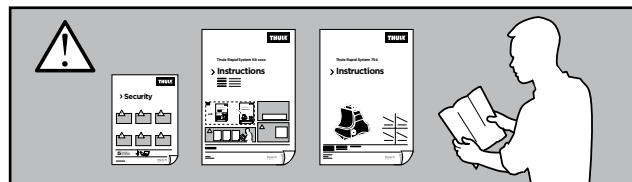
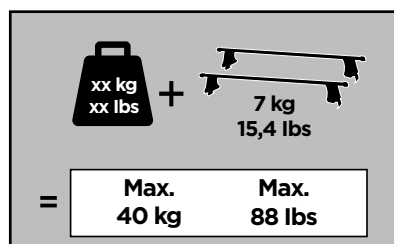


Thule Rapid System Kit 1502

> Instructions

TOYOTA Avensis, 4-dr Sedan, 09–

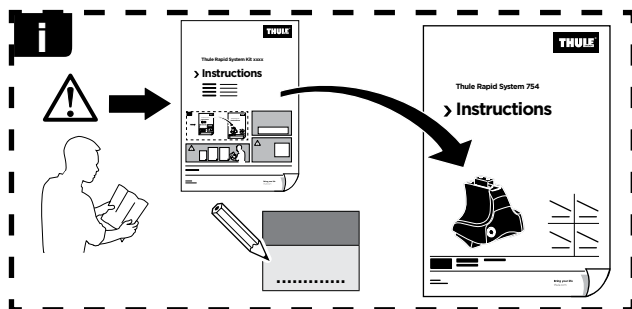

ISO 11154-E

141502


C.20121010
519-1502-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




07 x2



176 x1



177 x1




21 x2



82 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Avensis, 4-dr Sedan, 09-	38,5	1036	40 ³ / ₄

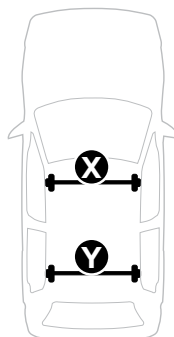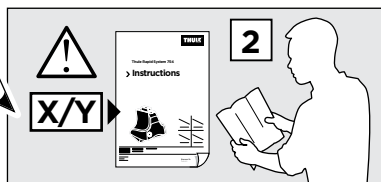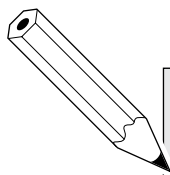



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Avensis, 4-dr Sedan, 09-	36,5	1016	40

2

TOYOTA Avensis, 4-dr Sedan, 09-

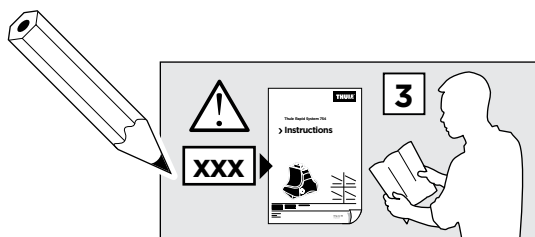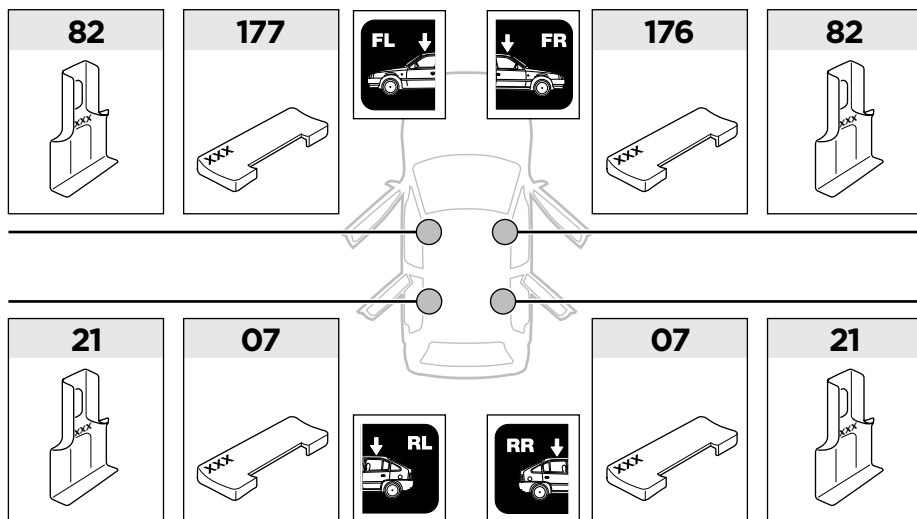

3

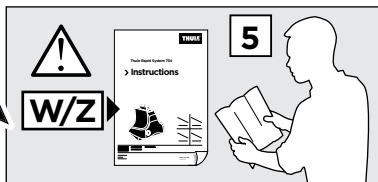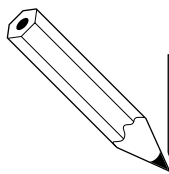

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Avensis, 4-dr Sedan, 09-	260	600	10 1/4	23 5/8

