





Thule Rapid System Kit 1508

> Instructions

FORD F-250/350, 4-dr Super Cab, *99–

FORD F-250/350, 4-dr Extra Cab, *99–

*North America

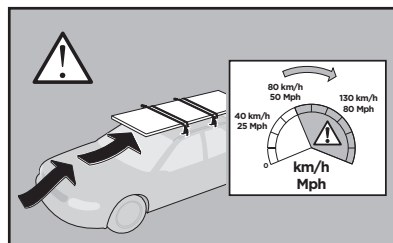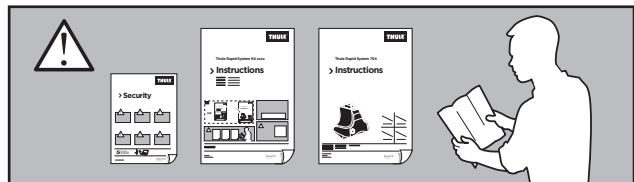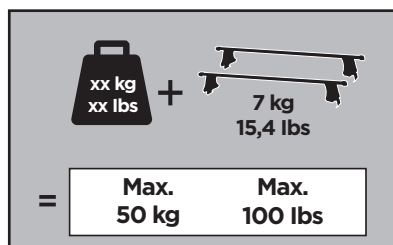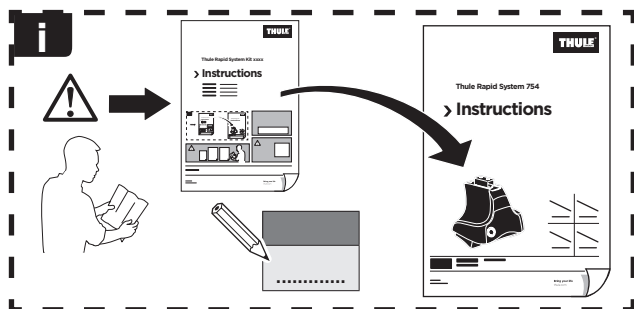



ISO 11154-E





2

FORD F-250/350, 4-dr Super Cab, *99-

FORD F-250/350, 4-dr Extra Cab, *99-

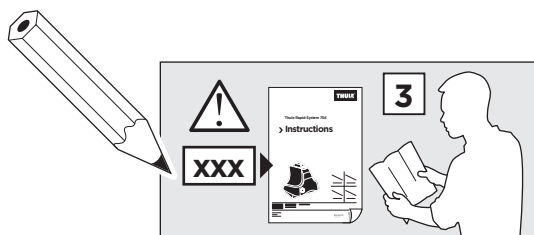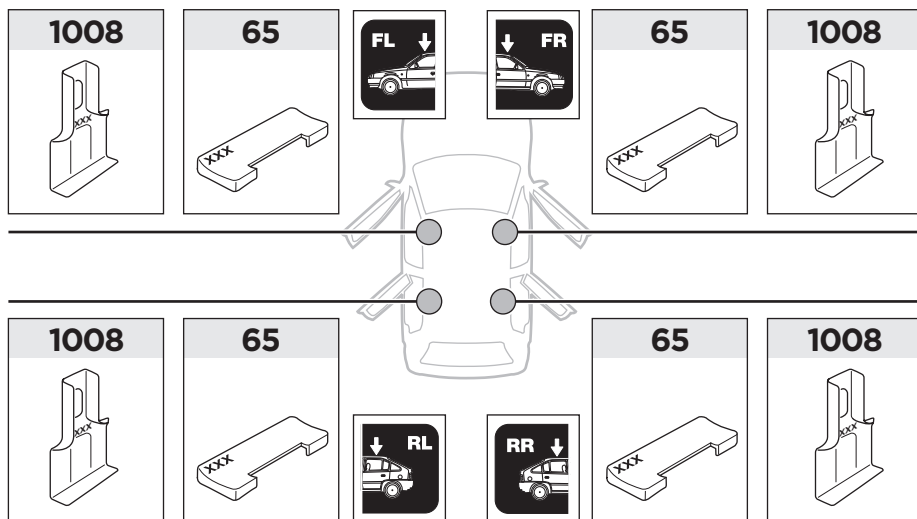

3

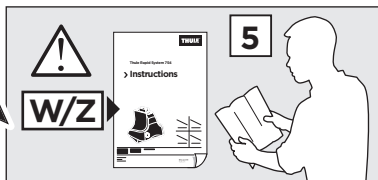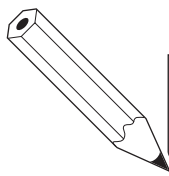

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD F-250/350, 4-dr Super Cab, *99-	216	800	8 1/2	31 1/2
FORD F-250/350, 4-dr Extra Cab, *99-	216	800	8 1/2	31 1/2

