
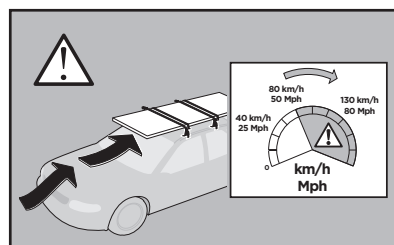
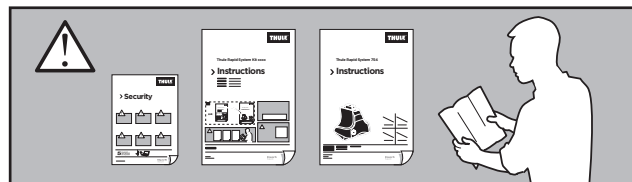
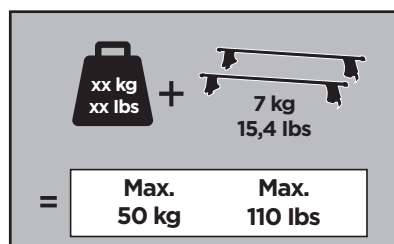


Thule Rapid System Kit 1526



> Instructions

BMW X6, 5-dr SUV, 08-14 / *09-15


*North America

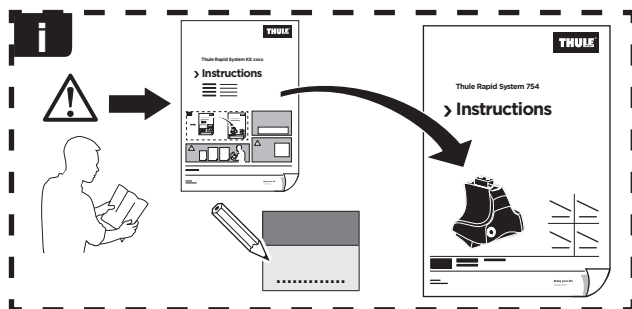

ISO 11154-E

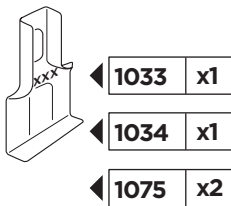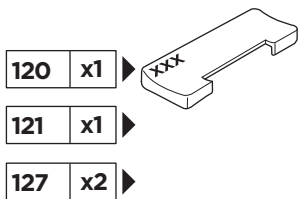



x1





x1

1


	X (scale)	X (mm)	X (inch)
BMW X6 , 5-dr SUV, 08-14 / *09-15	44	1091	43

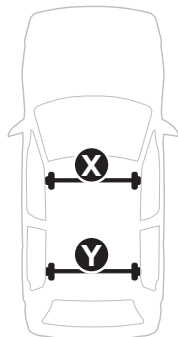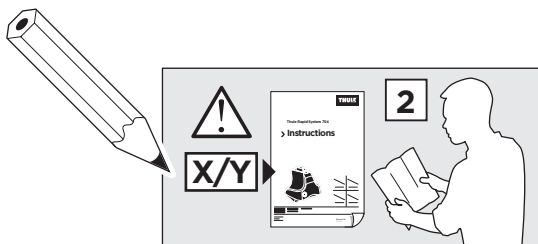

	Y (scale)	Y (mm)	Y (inch)
BMW X6 , 5-dr SUV, 08-14 / *09-15	45,5	1106	43 1/2

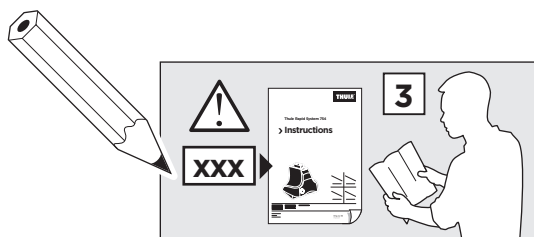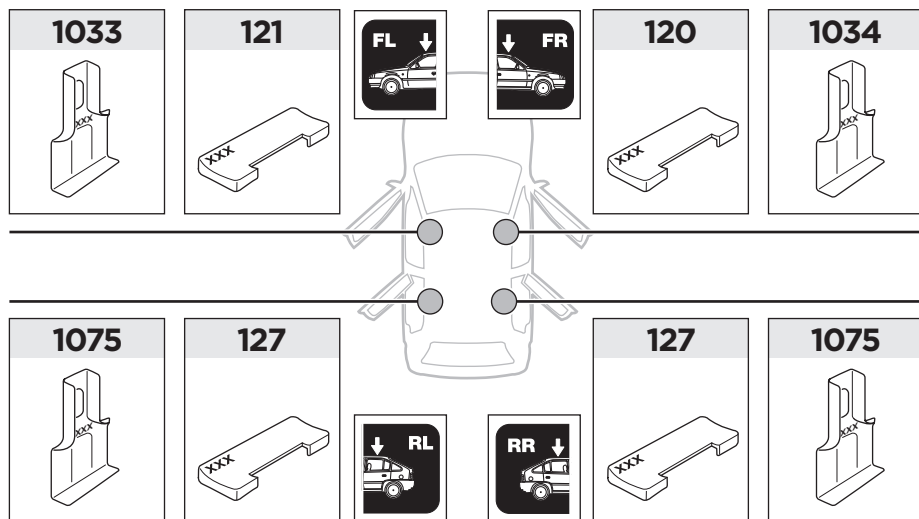2**BMW X6, 5-dr SUV, 08-14 / *09-15**

3

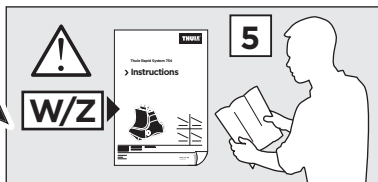

	W (mm)	Z (mm)	W (inch)	Z (inch)
BMW X6, 5-dr SUV, 08-14 / *09-15	230	650	9	25 ⁵/₈

