
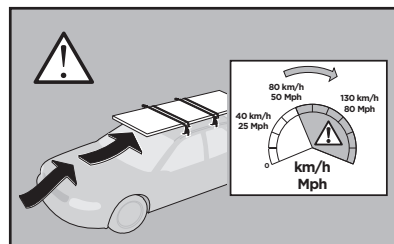
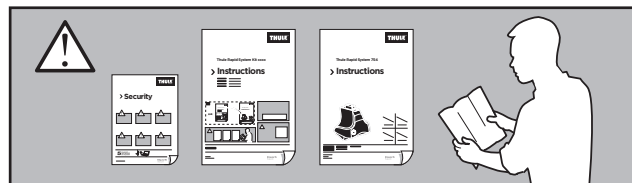
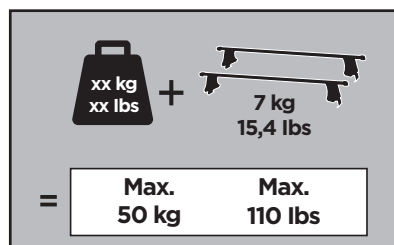


Thule Rapid System Kit 1568

> Instructions

TOYOTA Wish, 5-dr MPV, 09–

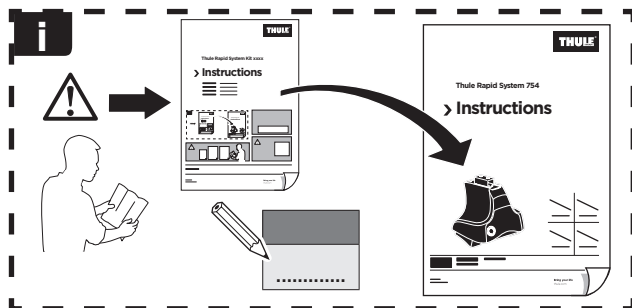

ISO 11154-E

141568


C.20121122
519-1568-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




338 x1



339 x1



170 x2




1069 x2



1070 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Wish, 5-dr MPV, 09-	31,5	968	38 ¹ / ₈

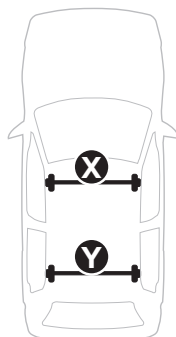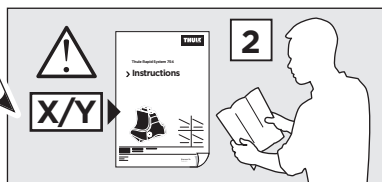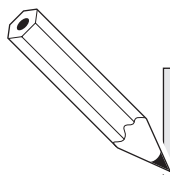



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Wish, 5-dr MPV, 09-	26	911	35 ⁷ / ₈

2

TOYOTA Wish, 5-dr MPV, 09--

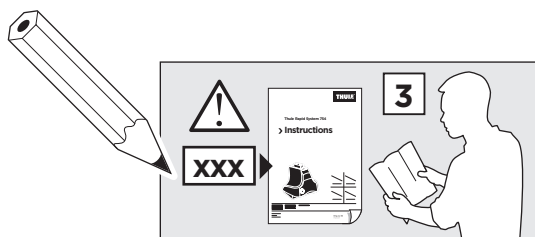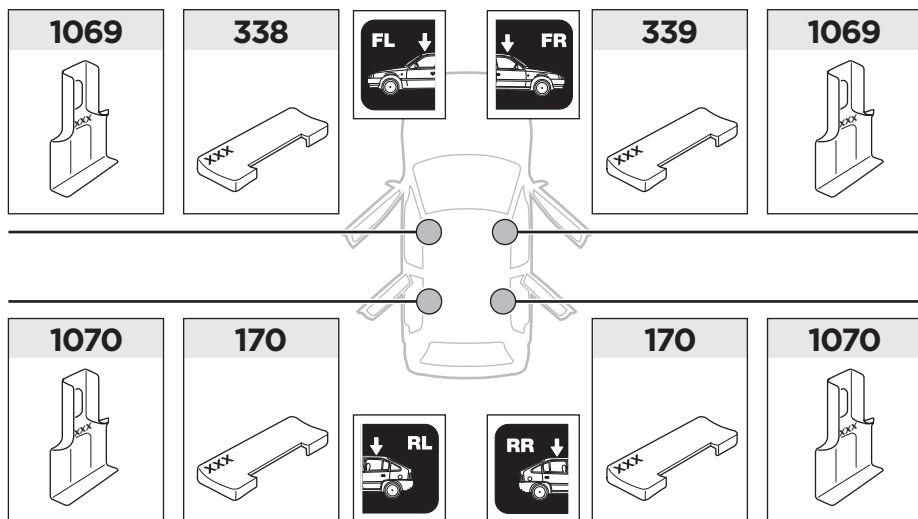

3

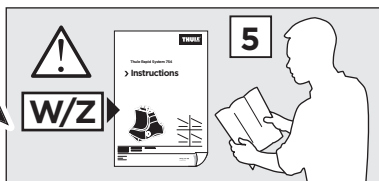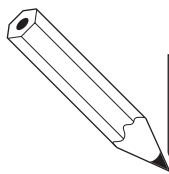

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Wish, 5-dr MPV, 09-	495	700	19 1/2	27 1/2

