
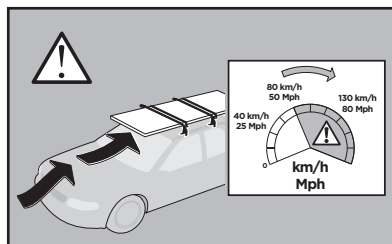
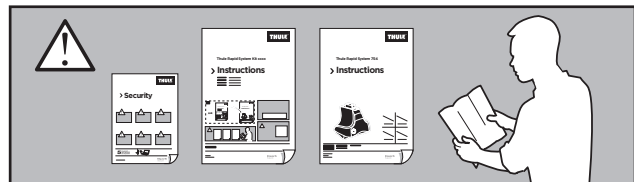
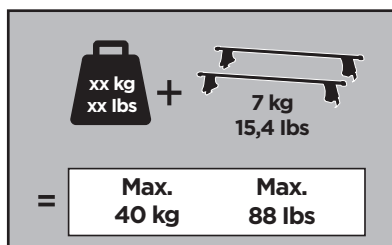


Thule Rapid System Kit 1570

> Instructions

NISSAN Cube, 5-dr MPV, 08–

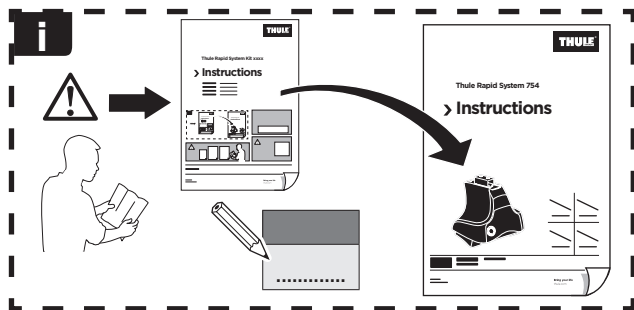

ISO 11154-E

141570


C.20121122
519-1570-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



172 x4




1079 x2



1080 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
NISSAN Cube, 5-dr MPV, 08-	58	1231	48 1/2

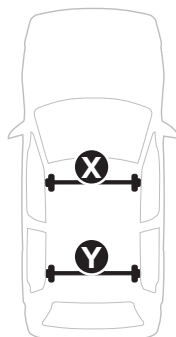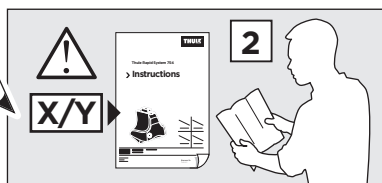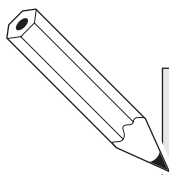


	Y (scale)	Y (mm)	Y (inch)
NISSAN Cube, 5-dr MPV, 08-	53	1181	46 1/2

2

NISSAN Cube, 5-dr MPV, 08-

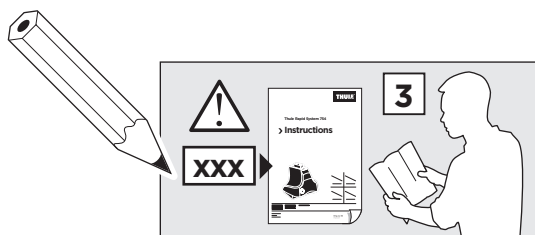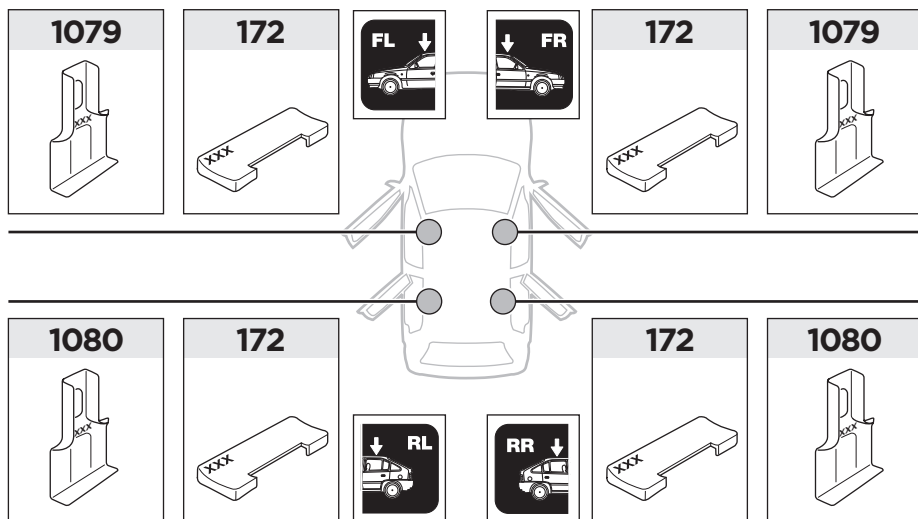

3

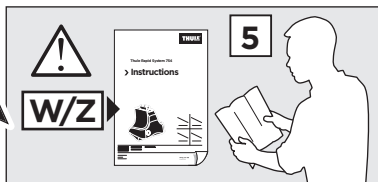

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Cube, 5-dr MPV, 08-	720	750	28 ³/₈	29 ¹/₂

