
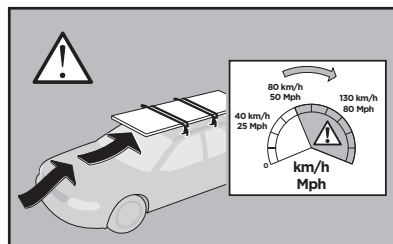
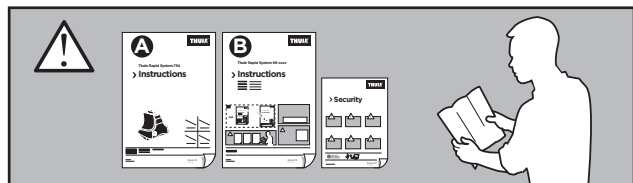
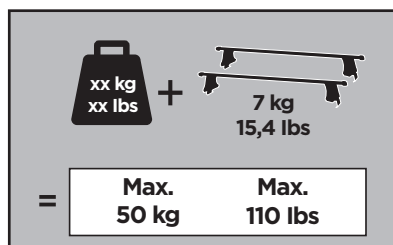


**THULE**
SWEDEN

Thule Rapid System Kit 1583

> Instructions

HONDA Stepwgn, 5-dr MPV, 09–

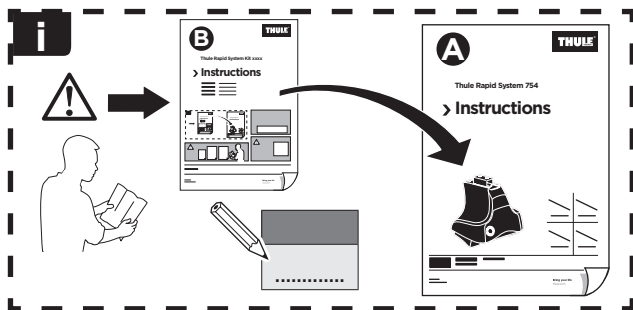

ISO 11154-E

141583


C.20130617
519-1583-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



345 x4



1116 x2



1117 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
HONDA Stepwgn, 5-dr MPV, 09-	51	1161	45 ³ / ₄

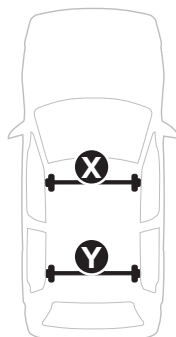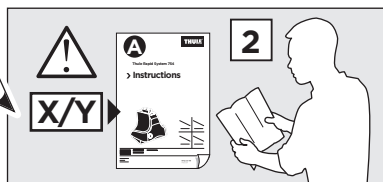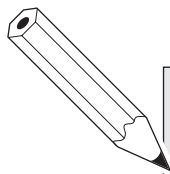


	Y (scale)	Y (mm)	Y (inch)
HONDA Stepwgn, 5-dr MPV, 09-	47,5	1126	44 ³ / ₈

2

HONDA Stepwgn, 5-dr MPV, 09-

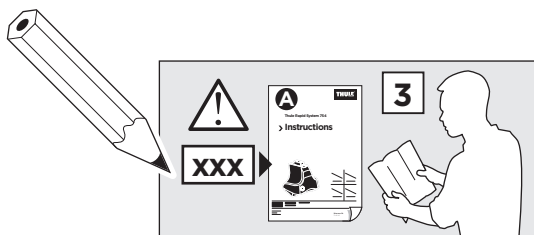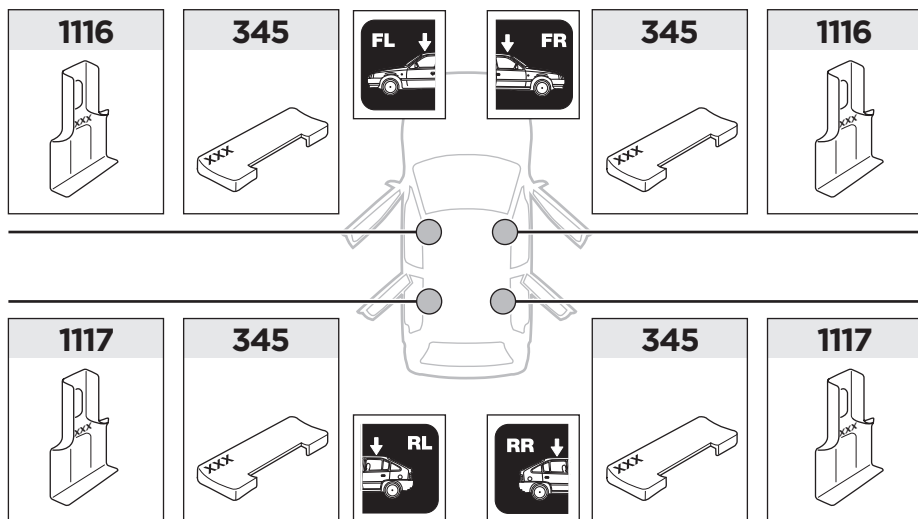

3

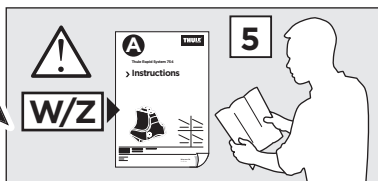

	W (mm)	Z (mm)	W (inch)	Z (inch)
HONDA Stepwgn, 5-dr MPV, 09-	750	700	29 1/2	27 1/2

