
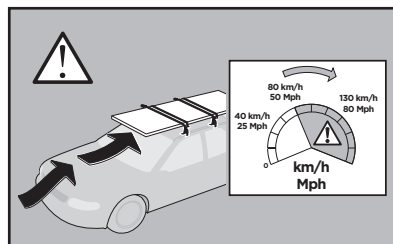
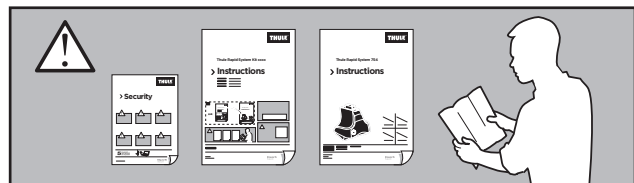
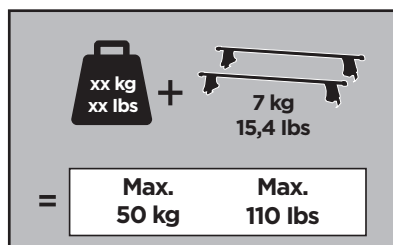


Thule Rapid System Kit 1603

> Instructions


HYUNDAI Santa Fe, 5-dr SUV, 10-12

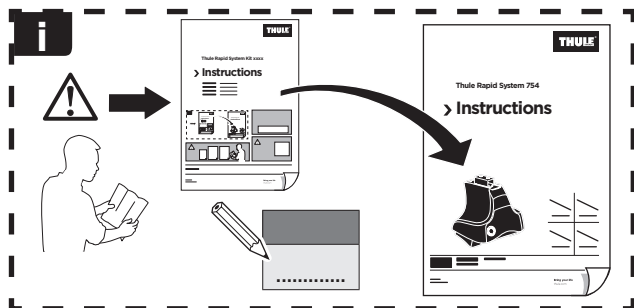

ISO 11154-E




124 x4



990 x4






x1



x1

1



	X (scale)	X (mm)	X (inch)
HYUNDAI Santa Fe , 5-dr SUV, 10-12	45,5	1106	43 1/2

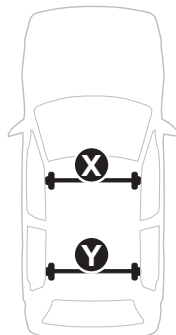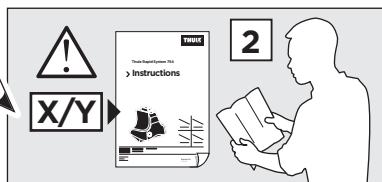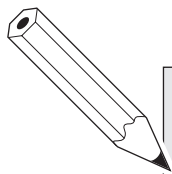



	Y (scale)	Y (mm)	Y (inch)
HYUNDAI Santa Fe , 5-dr SUV, 10-12	46	1111	43 3/4

2

HYUNDAI Santa Fe, 5-dr SUV, 10-12

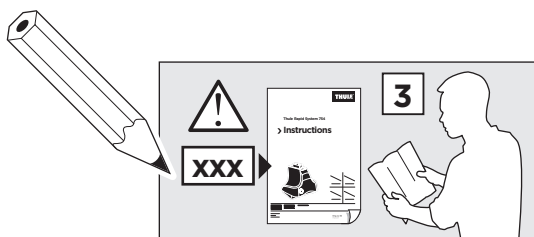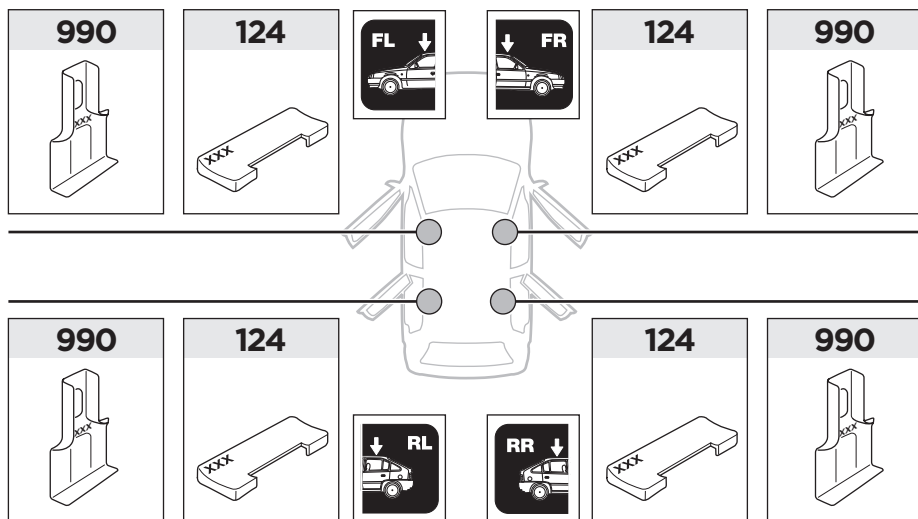

3

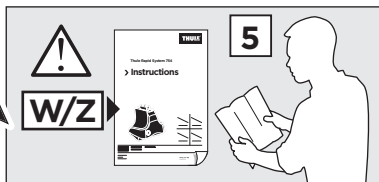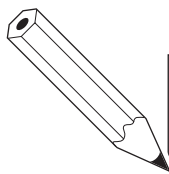

	W (mm)	Z (mm)	W (inch)	Z (inch)
HYUNDAI Santa Fe, 5-dr SUV, 10-12	340	700	13 ³/₈	27 ¹/₂

