





Thule Rapid System Kit 1627

> Instructions

FORD Focus, 4-dr Sedan, 12-

FORD Focus, 5-dr Hatchback, 12-

For cars without mounting holes in the door frame

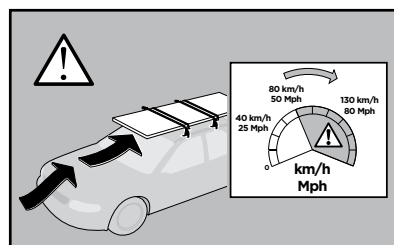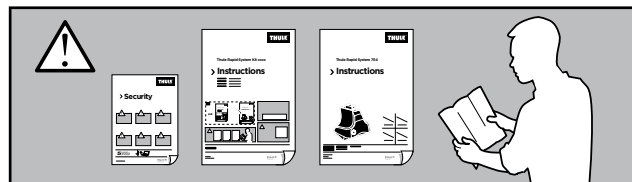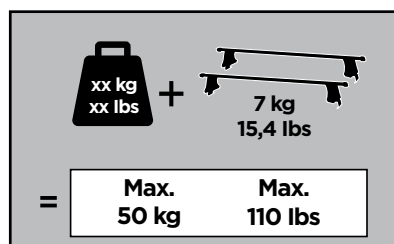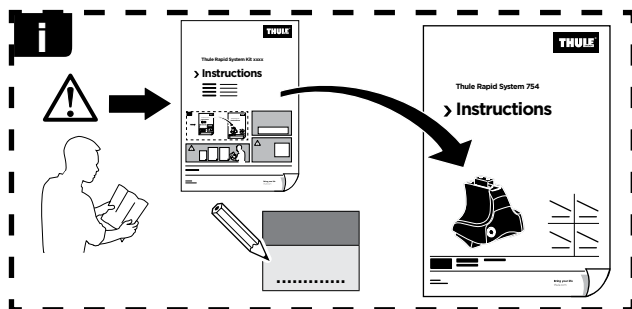

ISO 11154-E

141627


C.20121010
519-1627-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



298 x1



299 x1

313 x1

314 x1



1152 x1


1153 x1

1154 x1

1155 x1






x1



x1

1



	X (scale)	X (mm)	X (inch)
FORD Focus, 4-dr Sedan, 12-	40	1051	41 ³/₈
FORD Focus, 5-dr Hatchback, 12-	40	1051	41 ³/₈

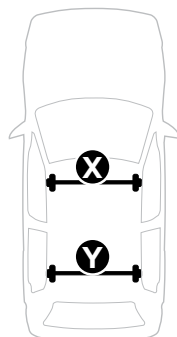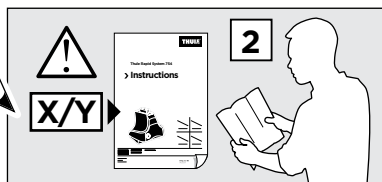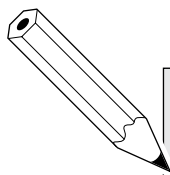



	Y (scale)	Y (mm)	Y (inch)
FORD Focus, 4-dr Sedan, 12-	36	1011	39 ³/₄
FORD Focus, 5-dr Hatchback, 12-	36	1011	39 ³/₄

2

FORD Focus, 4-dr Sedan, 12-
FORD Focus, 5-dr Hatchback, 12-

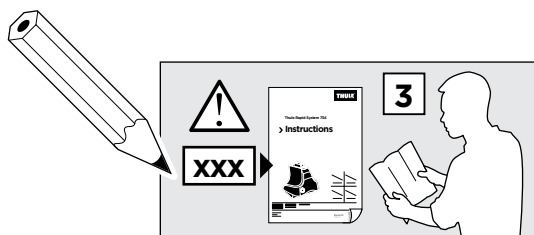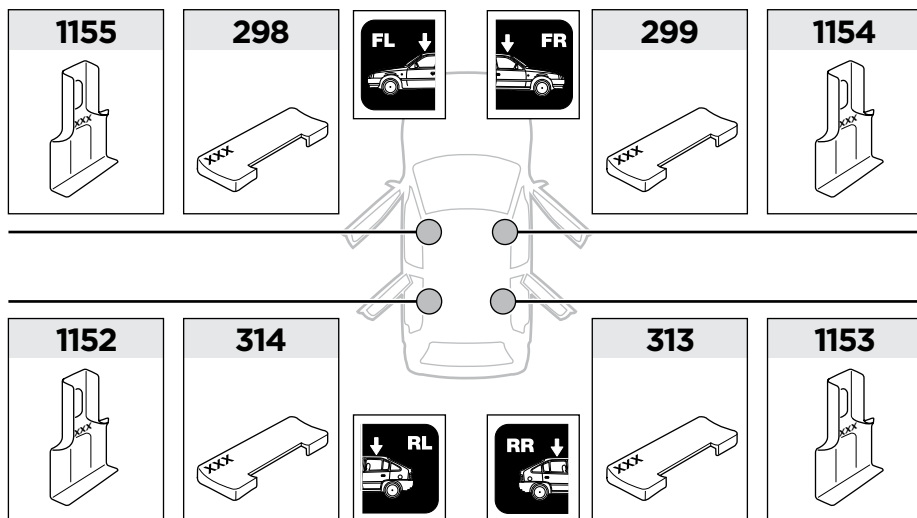

3

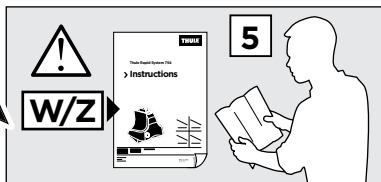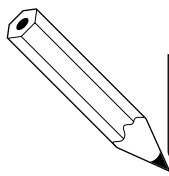

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Focus, 4-dr Sedan, 12-	241	622	9 1/2	24 1/2
FORD Focus, 5-dr Hatchback, 12-	254	686	10	27

