
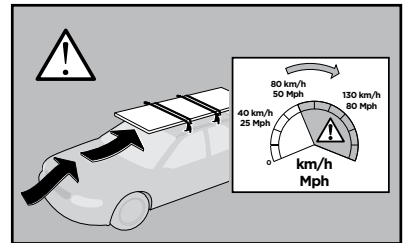
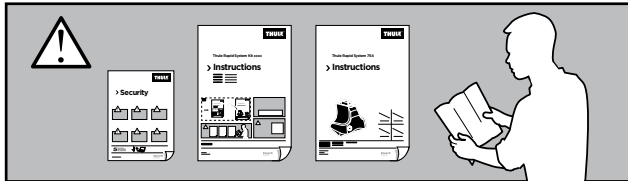
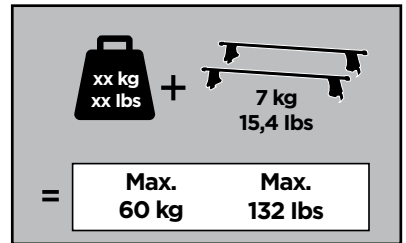


## Thule Rapid System Kit 1640

# > Instructions

KIA Sportage, 5-dr SUV, 10-16 (Without railing)


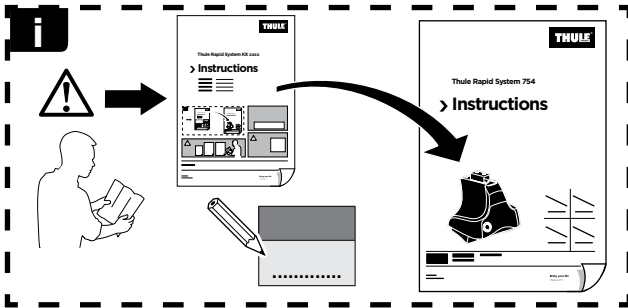


ISO 11154-E


**141640**  
C.20151217  
519-1640-02

Herbály Autó [www.herbalyauto.hu](http://www.herbalyauto.hu)

**Bring your life**  
[thule.com](http://thule.com)

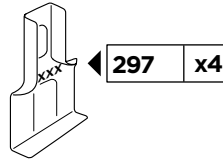



x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>KIA Sportage</b> , 5-dr SUV, 10-16 (Without railing)	<b>43,5</b>	<b>1086</b>	<b>42 3/4</b>

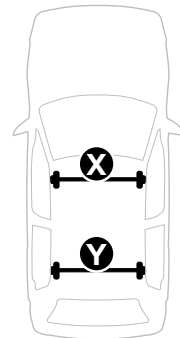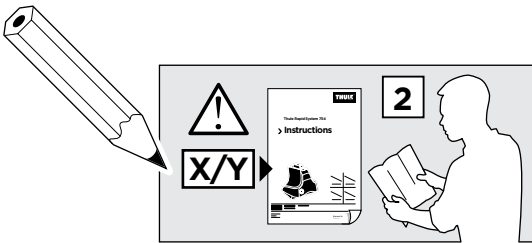


	Y (scale)	Y (mm)	Y (inch)
<b>KIA Sportage</b> , 5-dr SUV, 10-16 (Without railing)	<b>39,5</b>	<b>1046</b>	<b>41 1/8</b>

2

KIA Sportage, 5-dr SUV, 10-16 (Without railing)

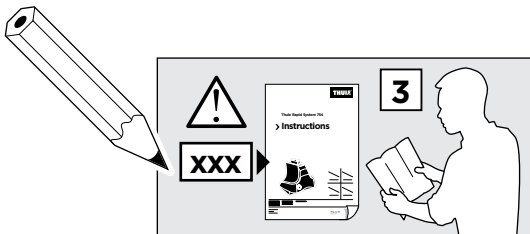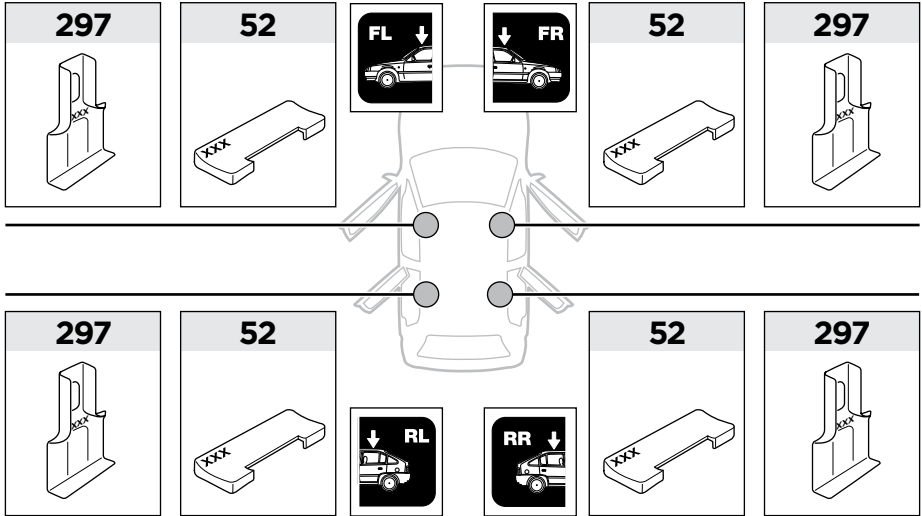

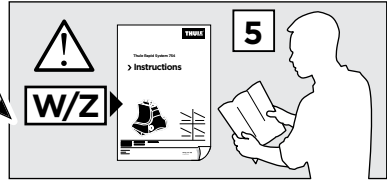**3**

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>KIA Sportage, 5-dr SUV, 10-16 (Without railing)</b>	<b>360</b>	<b>700</b>	<b>14 1/8</b>	<b>27 1/2</b>

