

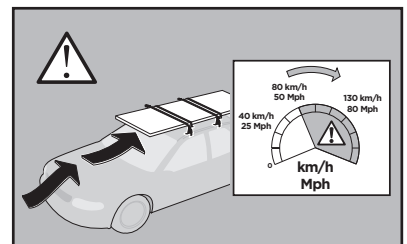
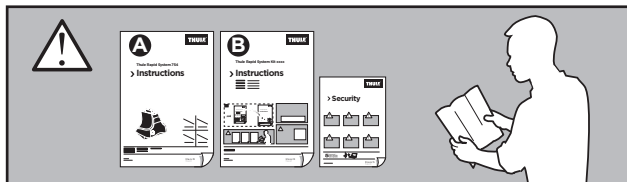


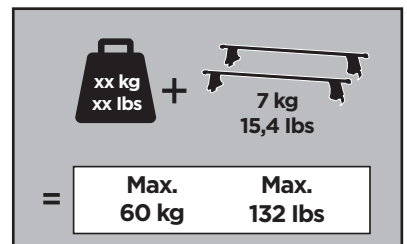

Thule Rapid System Kit 1671

> Instructions

FORD Kuga, 5-dr SUV, 08-12 (Without railing)

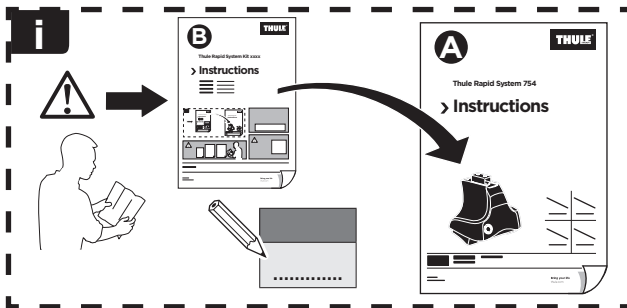

ISO 11154-E

141671


C.20130815
519-1671-03

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




179 x1



181 x1



256 x2



287 x2



1030 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
FORD Kuga, 5-dr SUV, 08-12 (Without railing)	42	1071	42 1/8

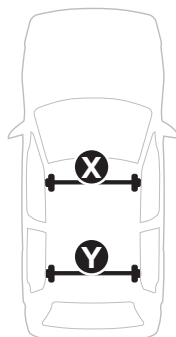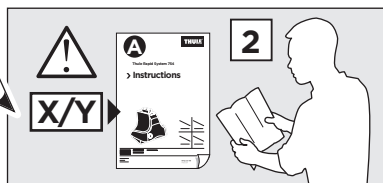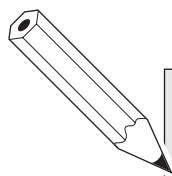



	Y (scale)	Y (mm)	Y (inch)
FORD Kuga, 5-dr SUV, 08-12 (Without railing)	36	1011	39 3/4

2

FORD Kuga, 5-dr SUV, 08-12 (Without railing)

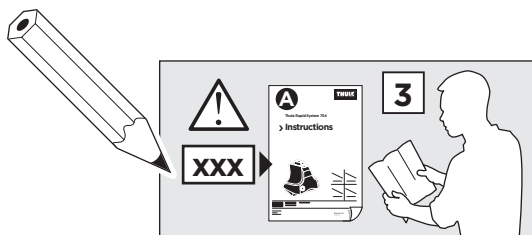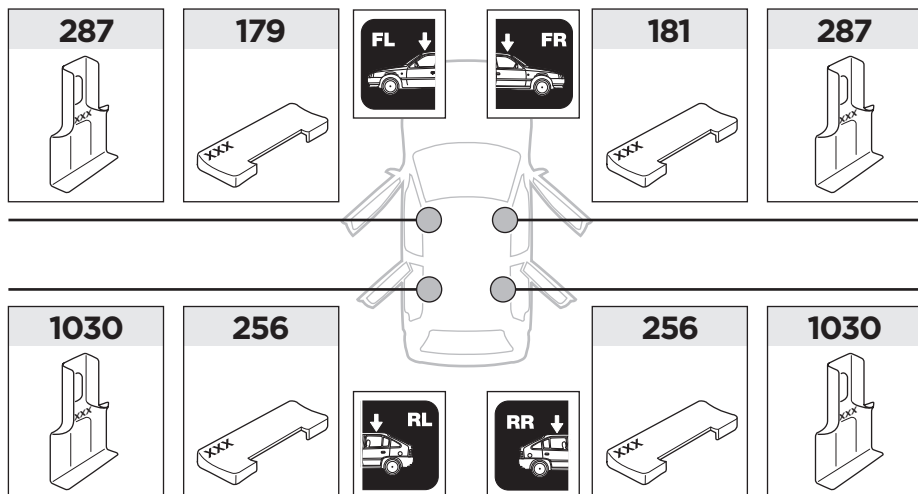

3

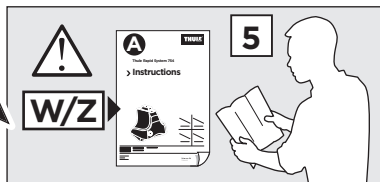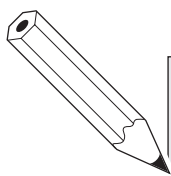

	W (mm)	Z (mm)	W (inch)	Z (inch)
FORD Kuga, 5-dr SUV, 08-12 (Without railing)	320	720	12 ⁵/₈	28 ³/₈

