







Thule Rapid System Kit 1708

> Instructions

AUDI A3, 3-dr Hatchback, 12-

AUDI A3, 5-dr Hatchback, 12-

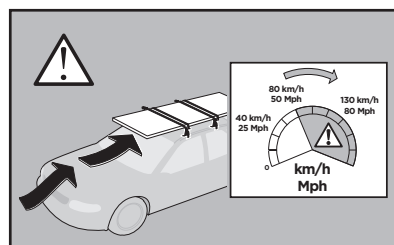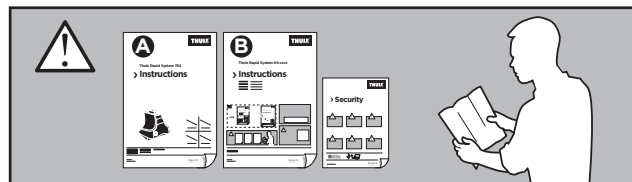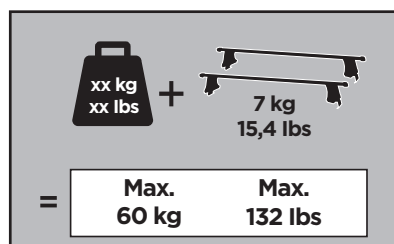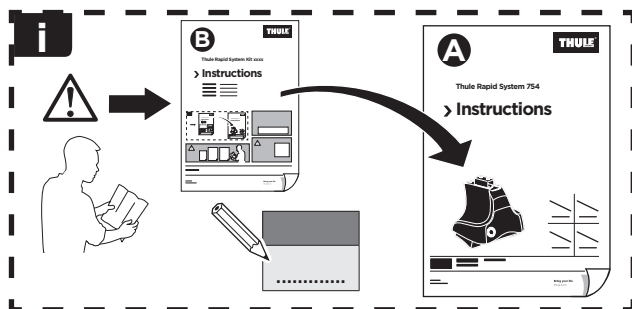

ISO 11154-E

141708

C.20150225
519-1708-03

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com




165 x1

166 x1

249 x1

250 x1



1127 x2



1172 x2



x1






x1



x1

1

	X (scale)	X (mm)	X (inch)
AUDI A3, 3-dr Hatchback, 12-	36,5	1016	40
AUDI A3, 5-dr Hatchback, 12-	36,5	1016	40

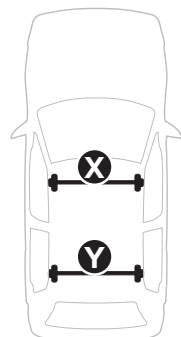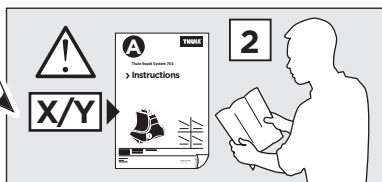
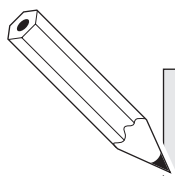


	Y (scale)	Y (mm)	Y (inch)
AUDI A3, 3-dr Hatchback, 12-	31	961	37 ⁷ / ₈
AUDI A3, 5-dr Hatchback, 12-	31	961	37 ⁷ / ₈


2

AUDI A3, 3-dr Hatchback, 12-



AUDI A3, 5-dr Hatchback, 12-

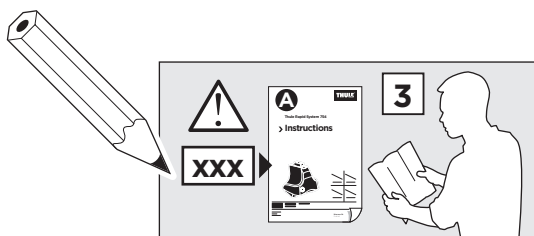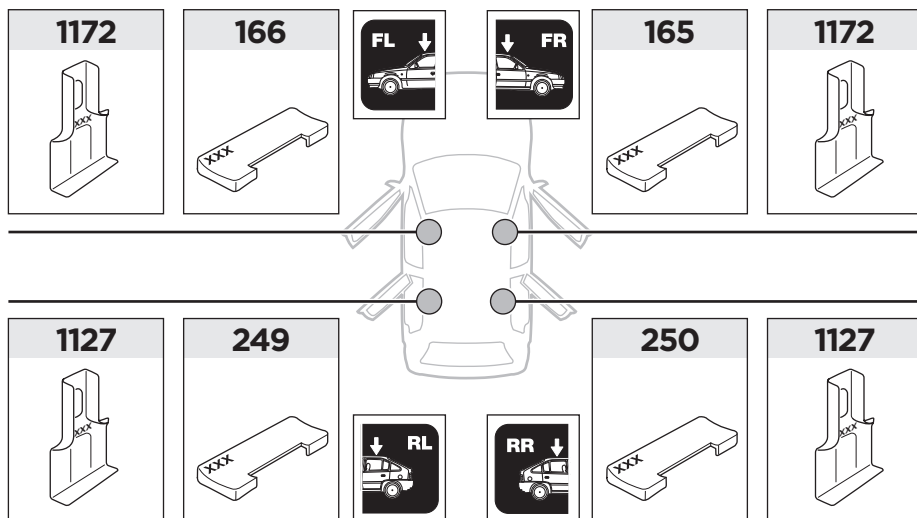



3

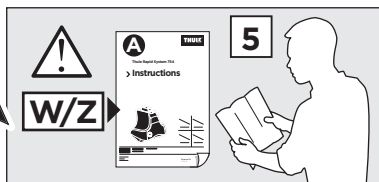

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A3, 3-dr Hatchback, 12-	250	710	9 7/8	28
AUDI A3, 5-dr Hatchback, 12-	250	710	9 7/8	28

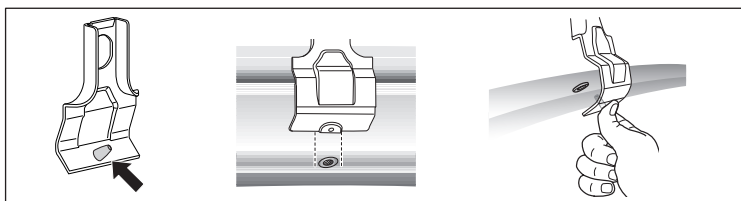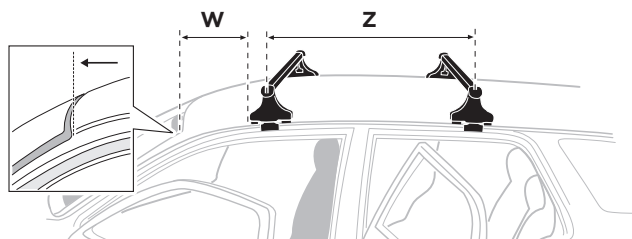

AUDI A3, 3-dr Hatchback, 12-

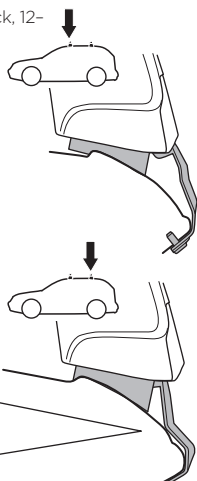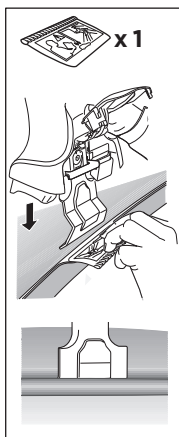

AUDI A3, 5-dr Hatchback, 12-

