



Thule Rapid System Kit 1714





> Instructions

CHEVROLET Colorado, 4-dr Extended Cab, 15-

GMC Canyon, 4-dr Extended Cab, 15-

ISUZU D-Max, 4-dr Space Cab, 12-

ISUZU D-Max, 4-dr Extended Cab, 12-

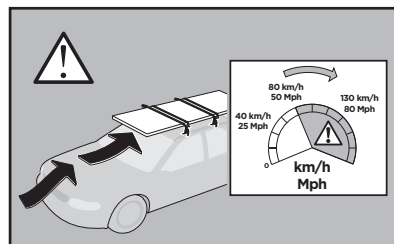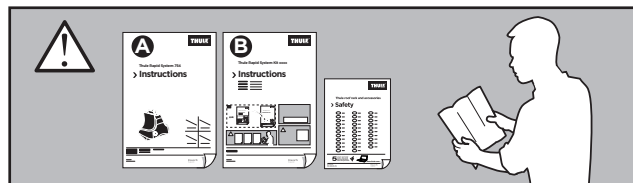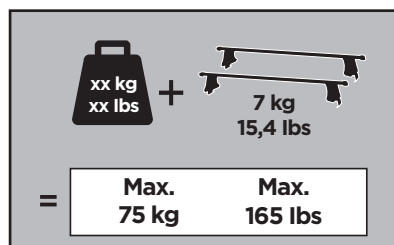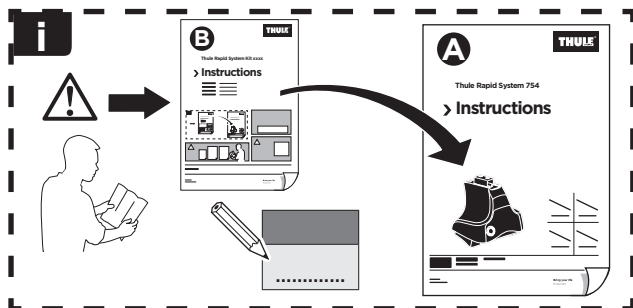

ISO 11154-E


141714
C.20150512
519-1714-03

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com





390 x2



391 x1



392 x1



1234 x2



1245 x2


52597



x4






x1



x1

1

	X (scale)	X (mm)	X (inch)
CHEVROLET Colorado , 4-dr Extended Cab, 15-	38	1031	40 ⁵ / ₈
GMC Canyon , 4-dr Extended Cab, 15-	38	1031	40 ⁵ / ₈
ISUZU D-Max , 4-dr Space Cab, 12-	38	1031	40 ⁵ / ₈
ISUZU D-Max , 4-dr Extended Cab, 12-	38	1031	40 ⁵ / ₈

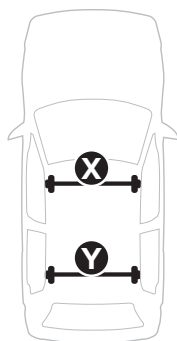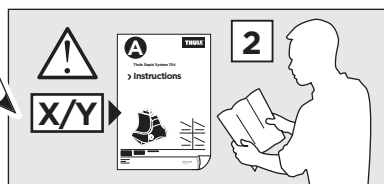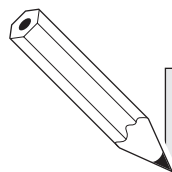

	Y (scale)	Y (mm)	Y (inch)
CHEVROLET Colorado , 4-dr Extended Cab, 15-	36	1011	39 ³ / ₄
GMC Canyon , 4-dr Extended Cab, 15-	36	1011	39 ³ / ₄
ISUZU D-Max , 4-dr Space Cab, 12-	36	1011	39 ³ / ₄
ISUZU D-Max , 4-dr Extended Cab, 12-	36	1011	39 ³ / ₄



2

CHEVROLET Colorado, 4-dr Extended Cab, 15-



GMC Canyon, 4-dr Extended Cab, 15-

ISUZU D-Max, 4-dr Space Cab, 12-






ISUZU D-Max, 4-dr Extended Cab, 12-

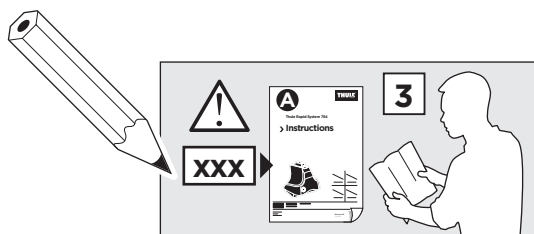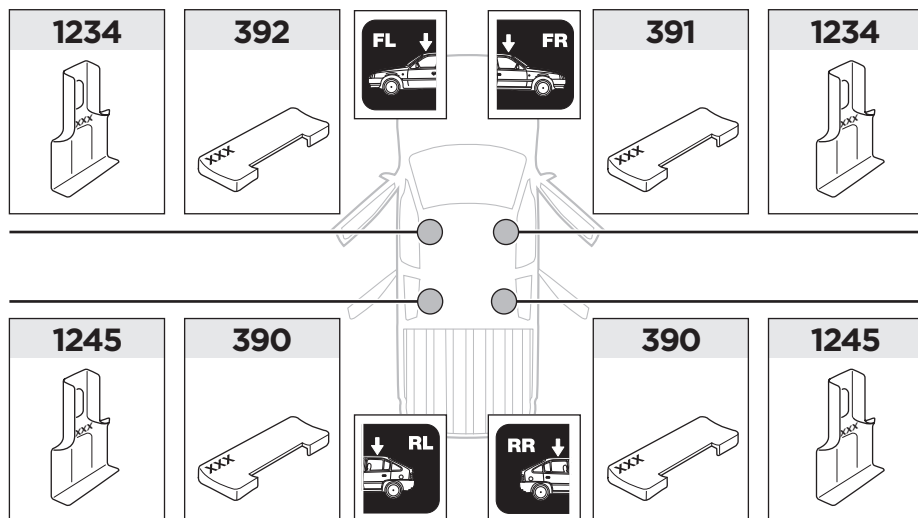

3

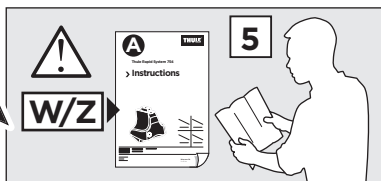
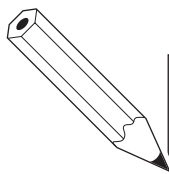


	W (mm)	Z (mm)	W (inch)	Z (inch)
CHEVROLET Colorado , 4-dr Extended Cab, 15-	210	615	8 1/4	24 1/4
GMC Canyon , 4-dr Extended Cab, 15-	210	615	8 1/4	24 1/4
ISUZU D-Max , 4-dr Space Cab, 12-	250	670	9 7/8	26 3/8
ISUZU D-Max , 4-dr Extended Cab, 12-	250	670	9 7/8	26 3/8

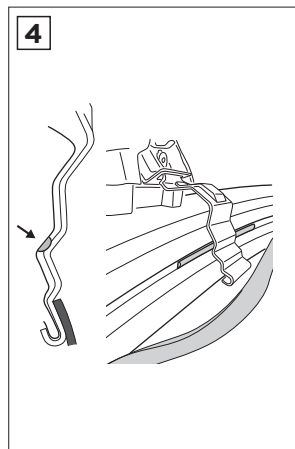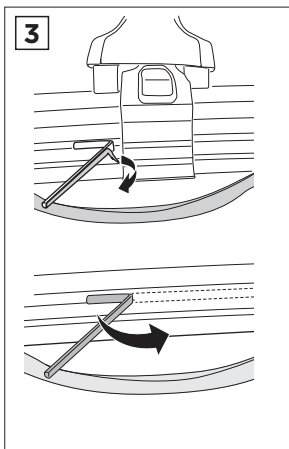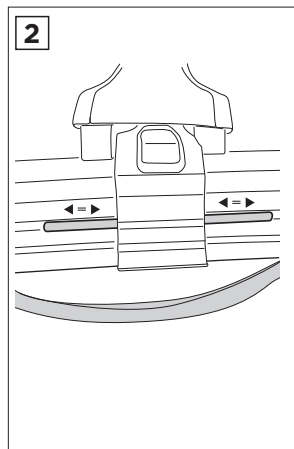
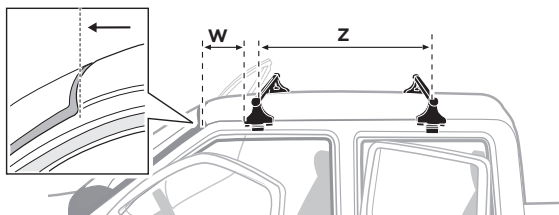
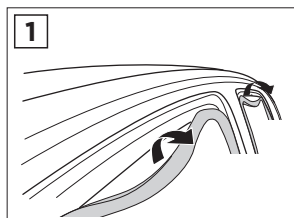


4

1

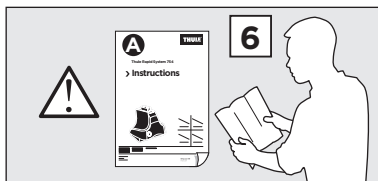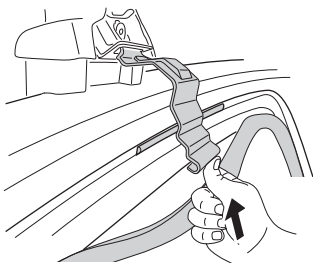

2

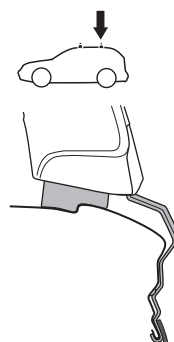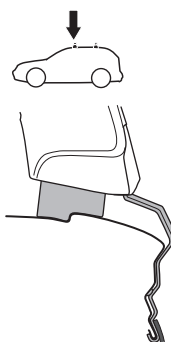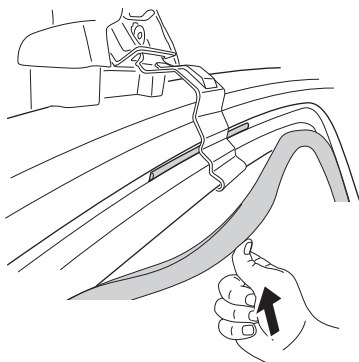

Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com



Phone: 800-238-2388









www.thule.com


» PART OF THULE GROUP

© Thule Group 2015. All rights reserved.

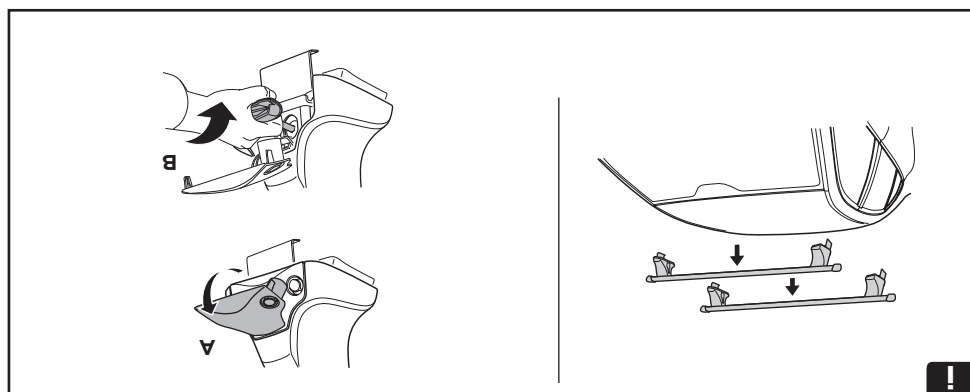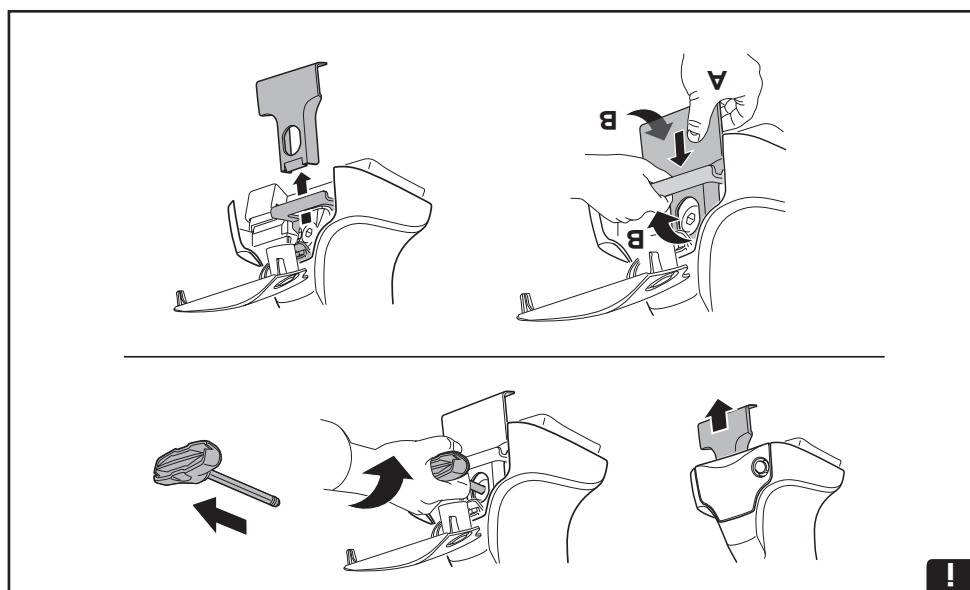

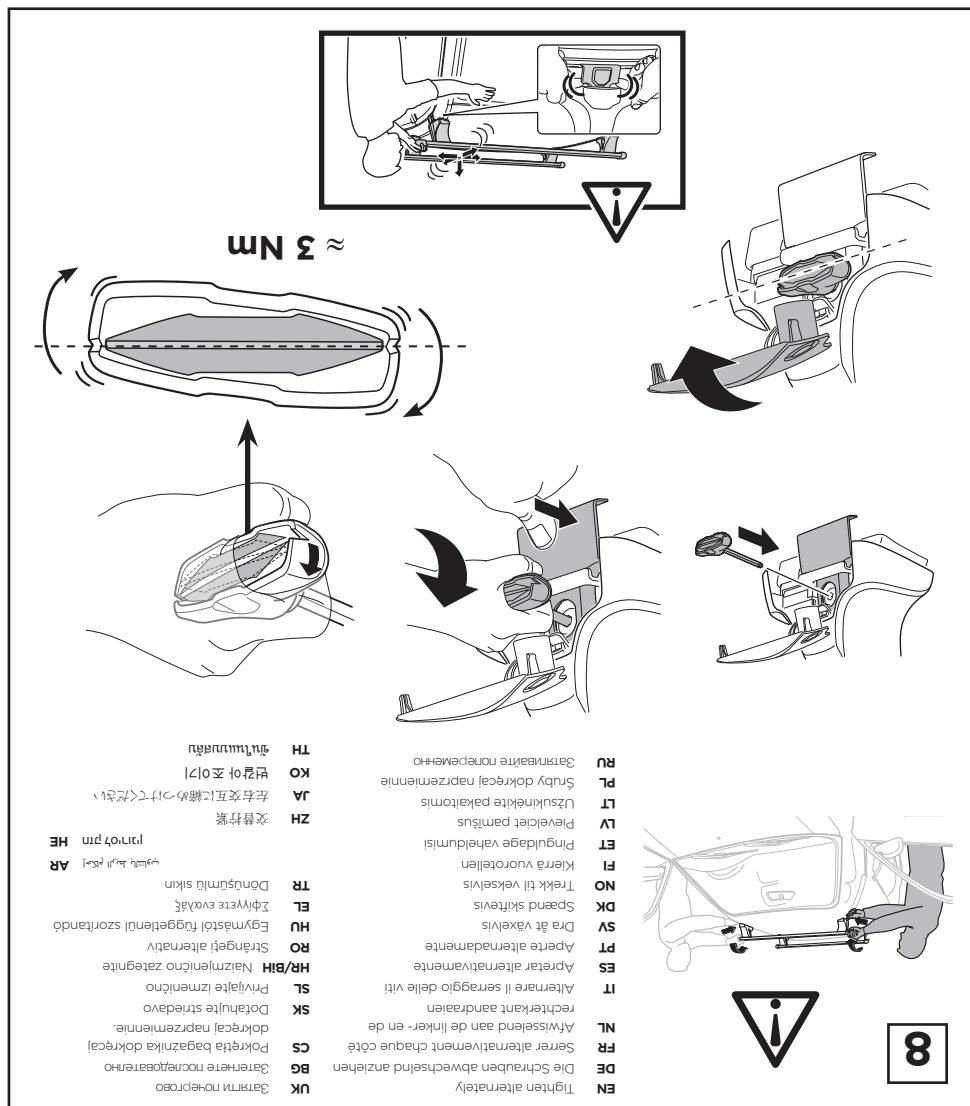
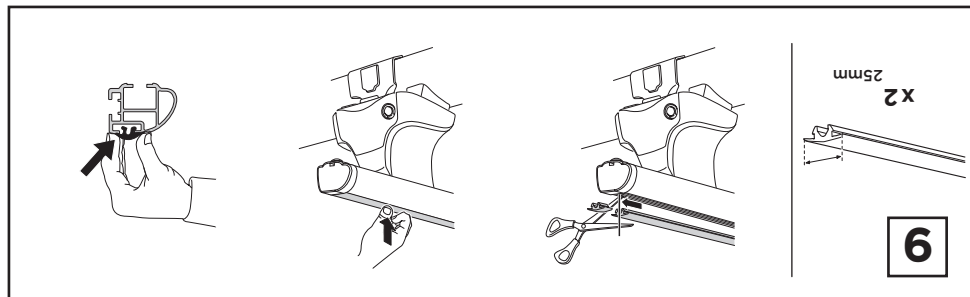


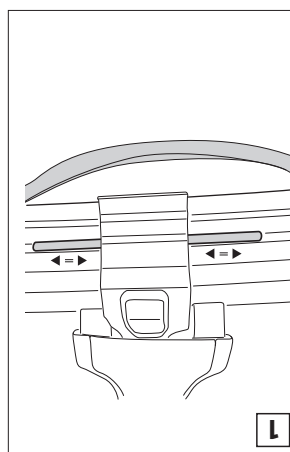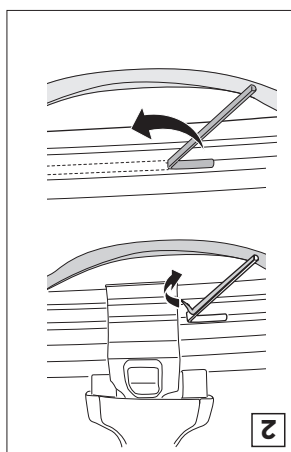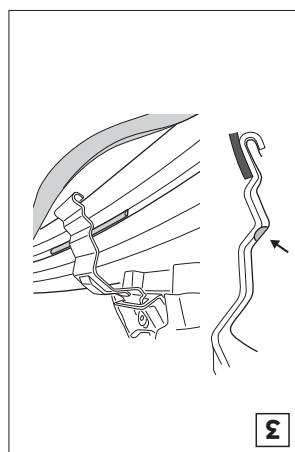
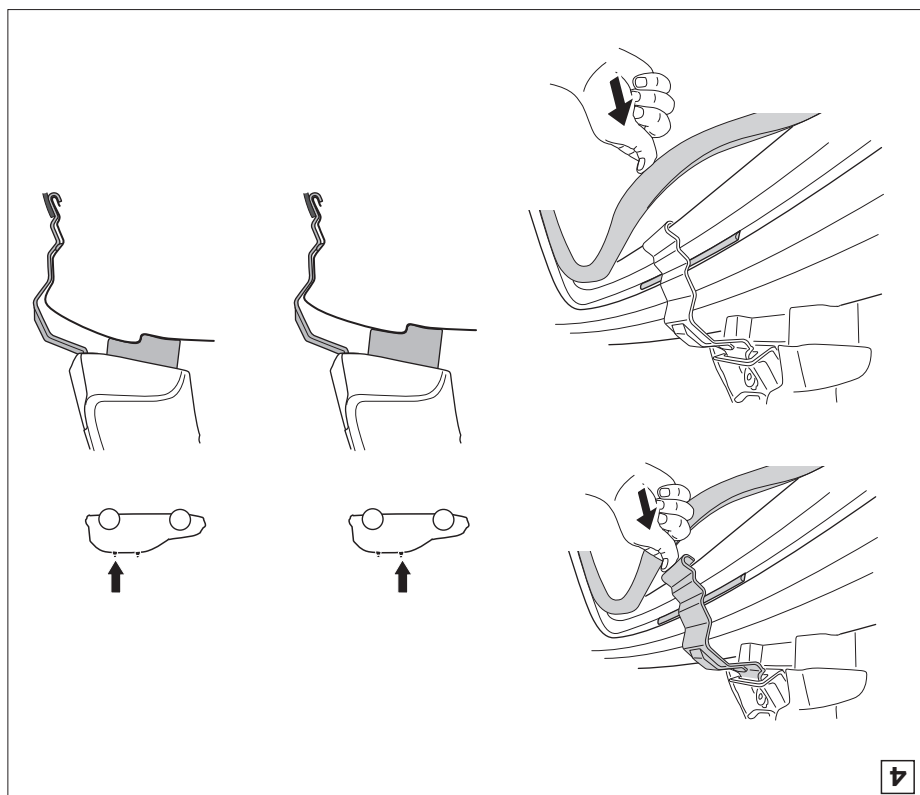


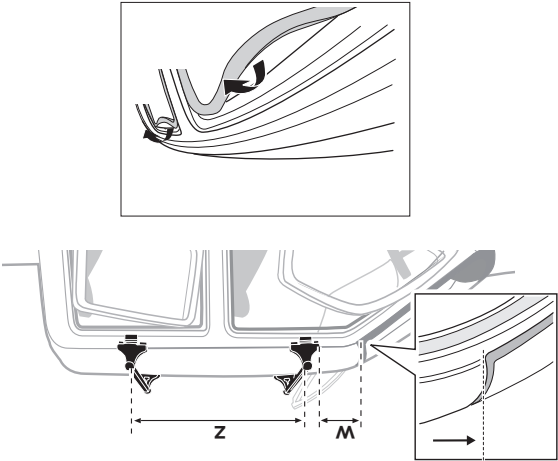

ISUZU D-Max, 4-dr Extended Cab, 12-	250 mm	670 mm	9 7/8"	26 3/8"
ISUZU D-Max, 4-dr Space Cab, 12-	250 mm	670 mm	9 7/8"	26 3/8"
GMC Canyon, 4-dr Extended Cab, 15-	210 mm	615 mm	8 1/4"	24 1/4"
CHEVROLET Colorado, 4-dr Extended Cab, 15-	210 mm	615 mm	8 1/4"	24 1/4"

X mm Y mm X inch Y inch

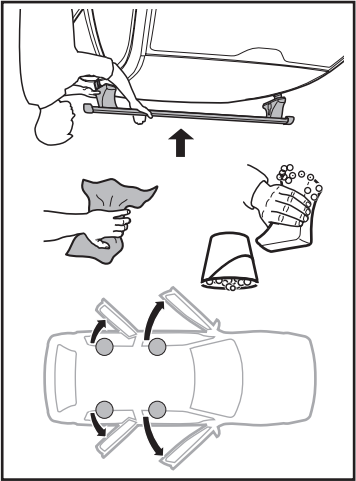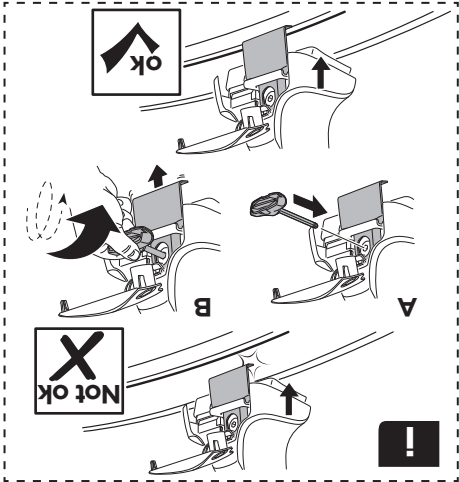

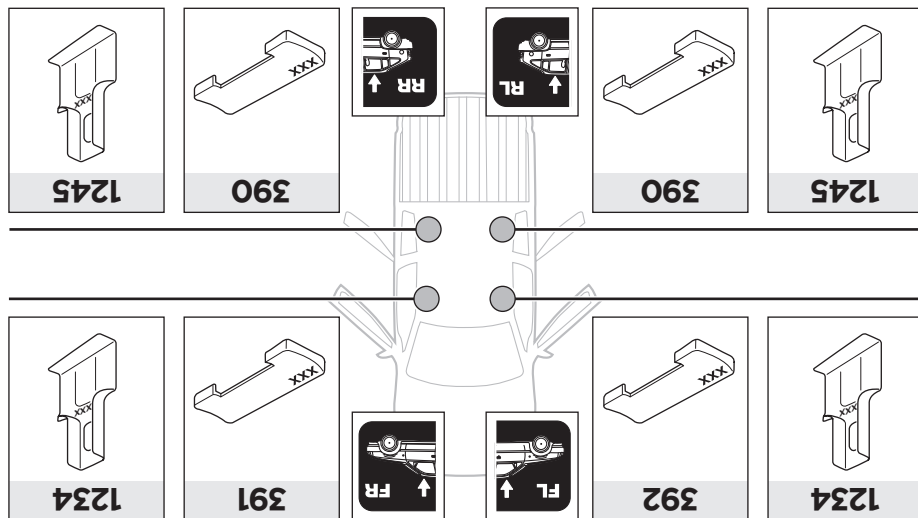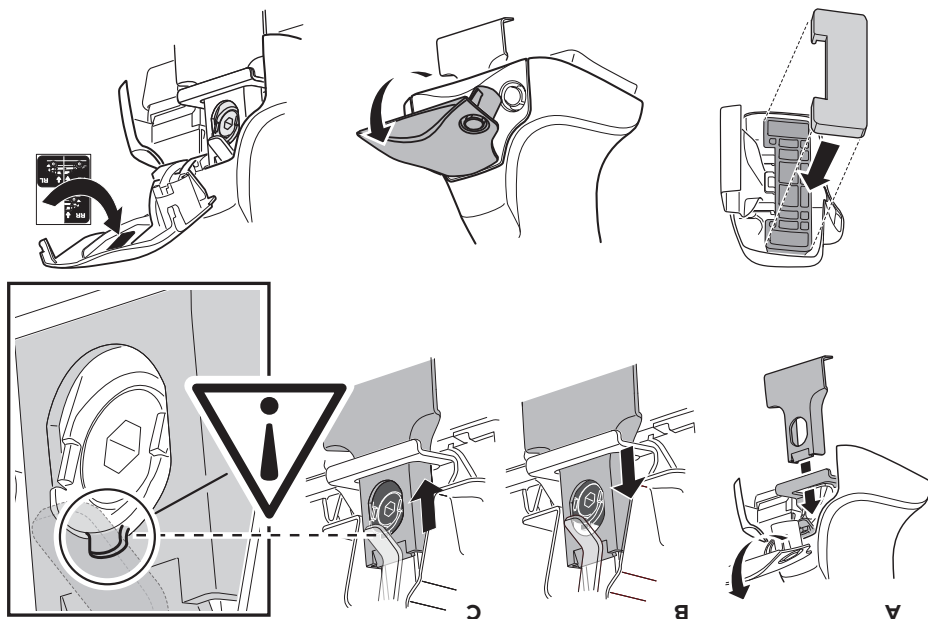

SUZUKI D-Max, 4-dr Extended Cab, 12-
 SUZUKI D-Max, 4-dr Space Cab, 12-
 GMC Canyon, 4-dr Extended Cab, 15-
 CHEVROLET Colorado, 4-dr Extended Cab, 15-

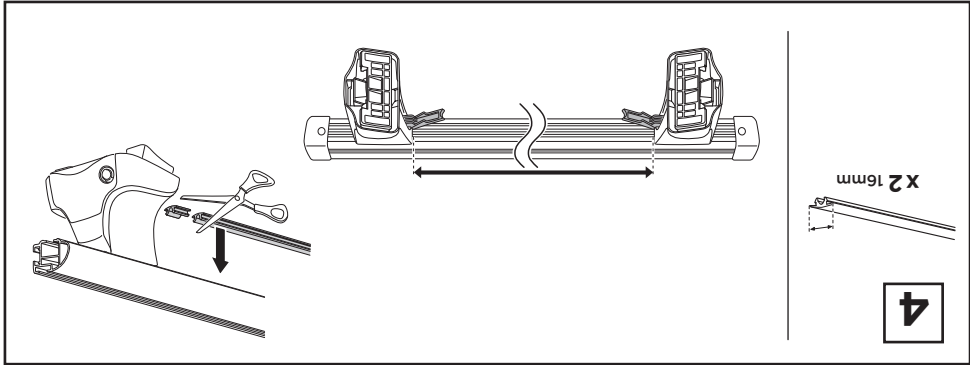


Diagram 1 shows the rear seat rail installation points. The rail is shown with two seat backs. The dimension Y inch/mm is indicated. A box with the number 1 is in the bottom right corner.

Y inch	Y mm	Vehicle Model
36	1011	CHEVROLET Colorado, 4-dr Extended Cab, 15-
36	1011	GMC Canyon, 4-dr Extended Cab, 15-
36	1011	ISUZU D-Max, 4-dr Space Cab, 12-
36	1011	ISUZU D-Max, 4-dr Extended Cab, 12-




Diagram 2 shows a detail of the rear seat rail installation. The rail is shown with two seat backs. The dimension Y inch/mm is indicated. A box with the number 2 is in the bottom right corner.

Diagram 1 shows the rear seat rail installation points. The rail is shown with two seat backs. The dimension X inch/mm is indicated. A box with the number 1 is in the bottom right corner.


X inch	X mm	Vehicle Model
38	1031	CHEVROLET Colorado, 4-dr Extended Cab, 15-
38	1031	GMC Canyon, 4-dr Extended Cab, 15-
38	1031	ISUZU D-Max, 4-dr Space Cab, 12-
38	1031	ISUZU D-Max, 4-dr Extended Cab, 12-

Diagram 2 shows a detail of the rear seat rail installation. The rail is shown with two seat backs. The dimension X inch/mm is indicated. A box with the number 2 is in the bottom right corner.







Diagram 3 illustrates the installation of the rear seat back. The main view shows the seat back being inserted into the vehicle's frame. A top view shows the seat back with two seat rails. A box with the number 3 is in the bottom right corner.

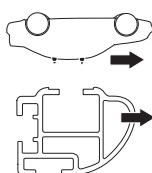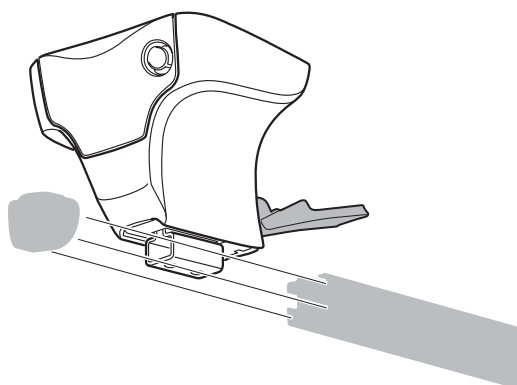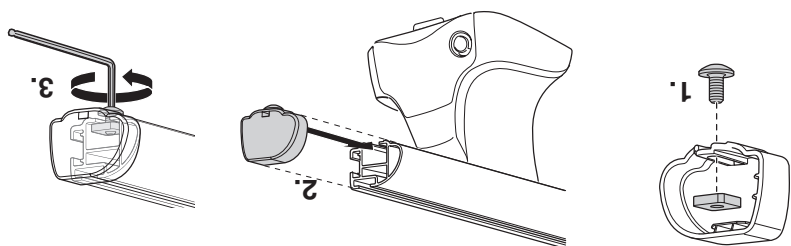

2

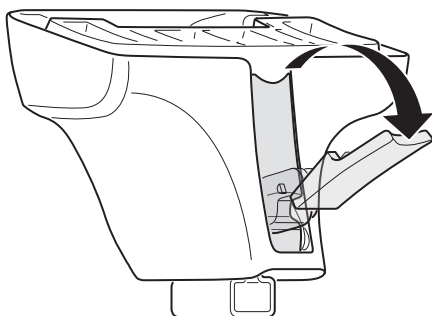


1

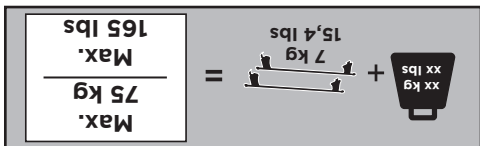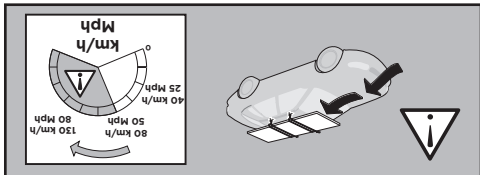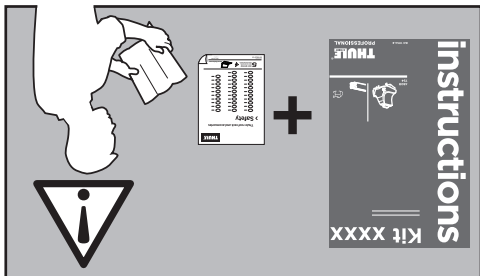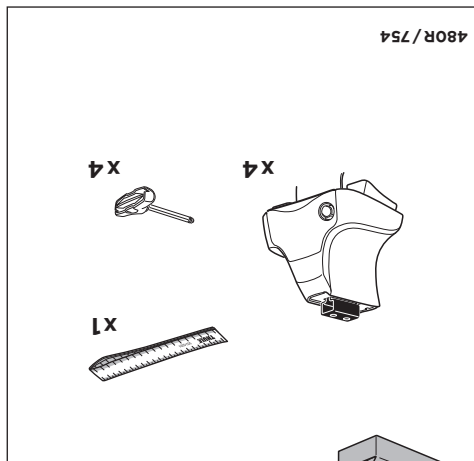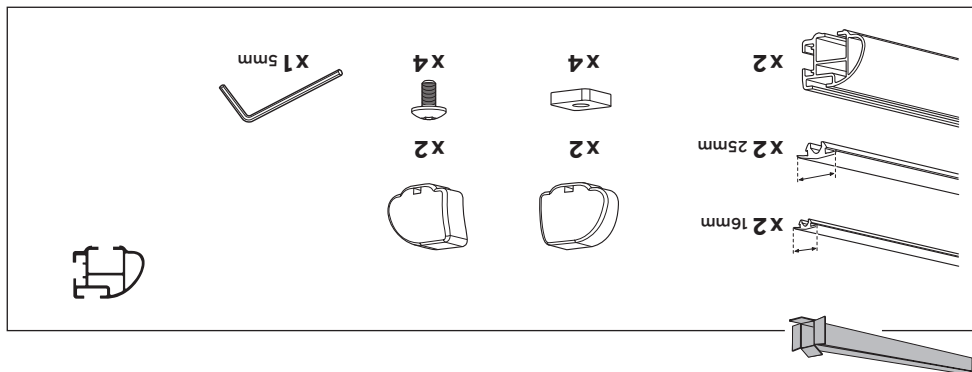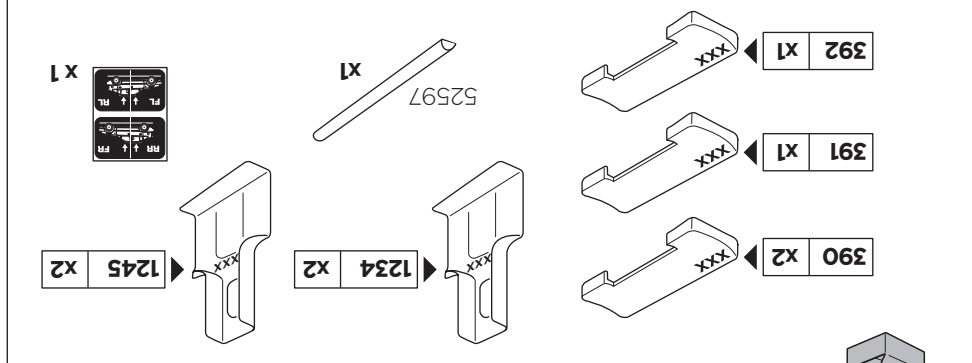

instructions

Kit 1714

CHEVROLET Colorado, 4-dr Extended Cab, 15-
GMC Canyon, 4-dr Extended Cab, 15-
ISUZU D-Max, 4-dr Space Cab, 12-
ISUZU D-Max, 4-dr Extended Cab, 12-

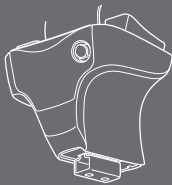

480R
754



ISO 11154-E

PROFESSIONAL

THULE
SWEDEN