

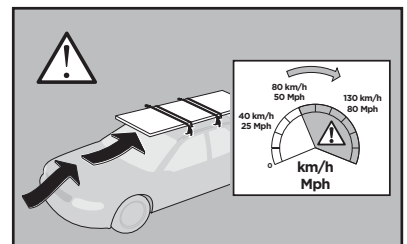
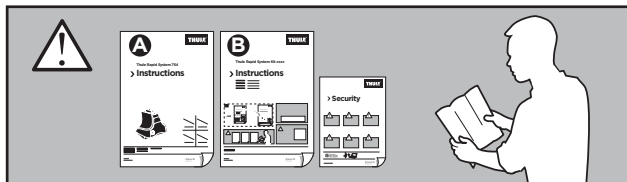


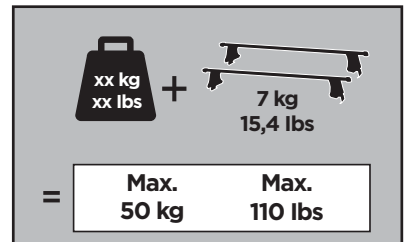

Thule Rapid System Kit 1747

> Instructions

TOYOTA Avanza, 5-dr MPV, 13-

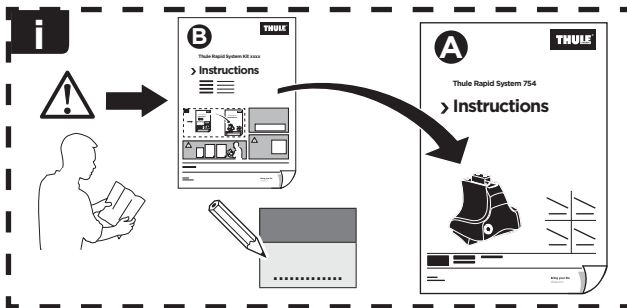

ISO 11154-E


141747
C.20141219
519-1747-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com




440 x1




441 x1




442 x2



1315 x2



1316 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
TOYOTA Avanza, 5-dr MPV, 13-	34	991	39

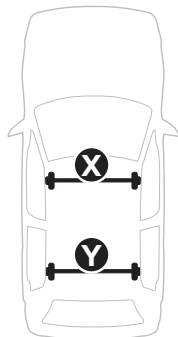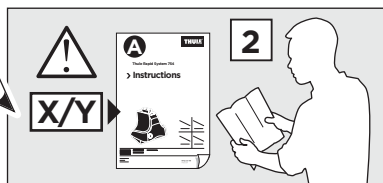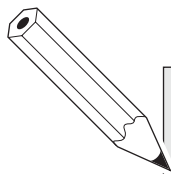



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Avanza, 5-dr MPV, 13-	30	951	37 1/2

2

TOYOTA Avanza, 5-dr MPV, 13-

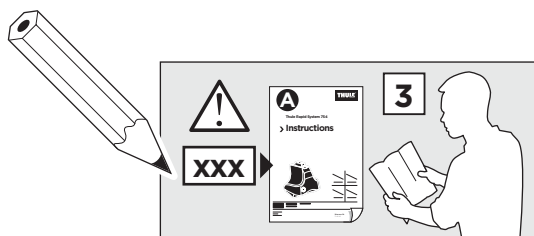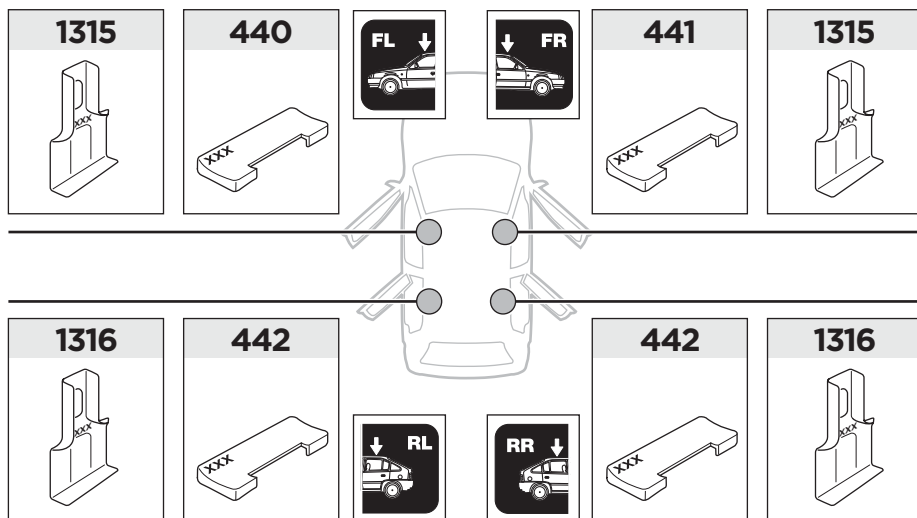

3

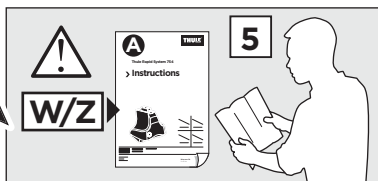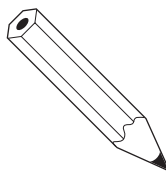

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Avanza, 5-dr MPV, 13-	430	700	16 7/8	27 1/2

