

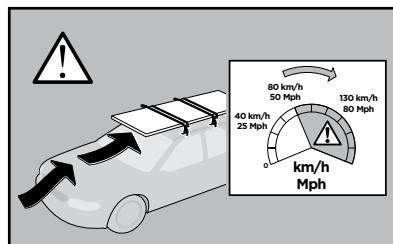
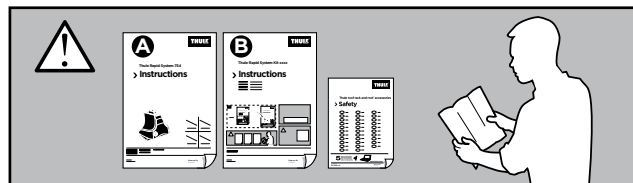


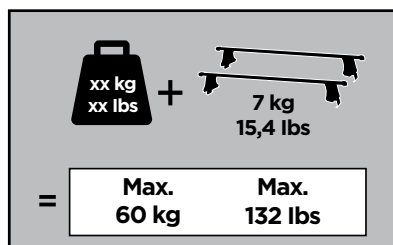

Thule Rapid System Kit 1769

> Instructions

RENAULT Espace, 5-dr MPV, 15–

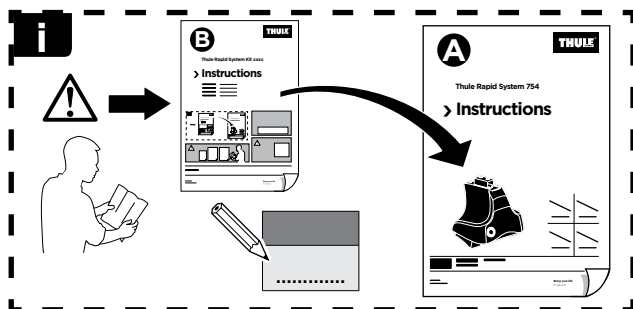

ISO 11154-E


141769
C.20151015
519-1769-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com





03 x2




165 x1




166 x1



1345 x2



1346 x2






x1





x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Espace, 5-dr MPV, 15-	52	1171	46 ¹ / ₈

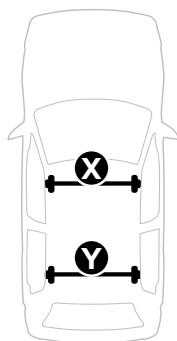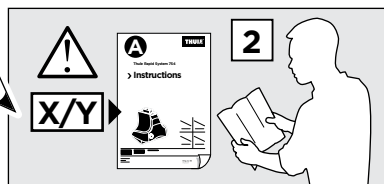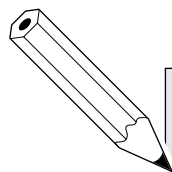

	Y (scale)	Y (mm)	Y (inch)
RENAULT Espace, 5-dr MPV, 15-	49	1141	44 ⁷ / ₈

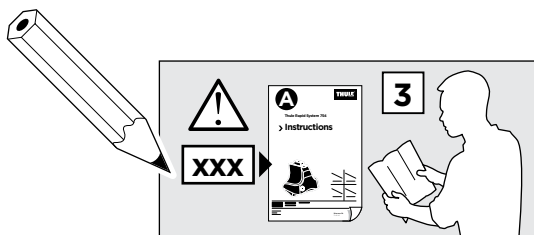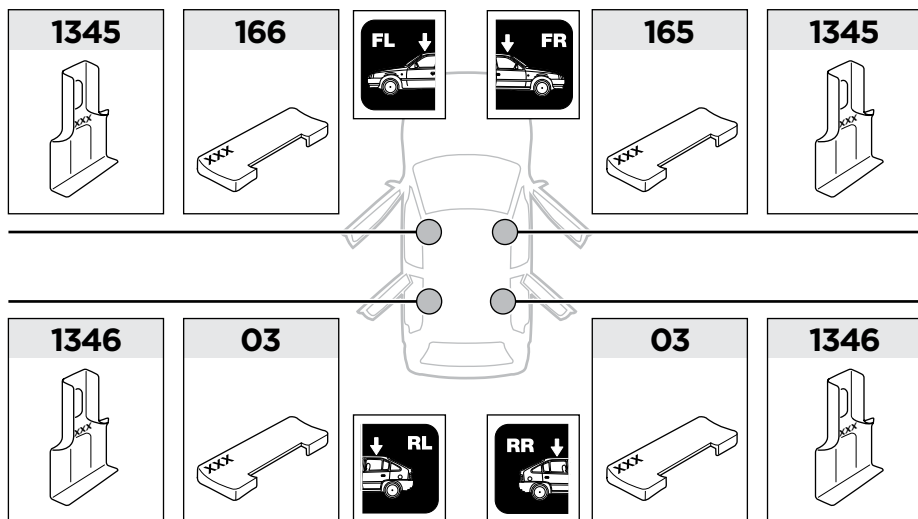2**RENAULT Espace**, 5-dr MPV, 15-

3

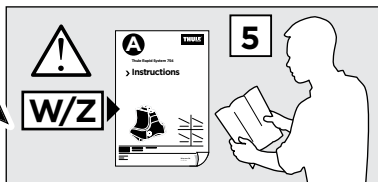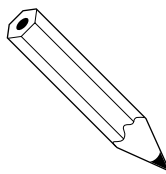

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Espace, 5-dr MPV, 15-	440	690	17 ³/₈	27 ¹/₈

