

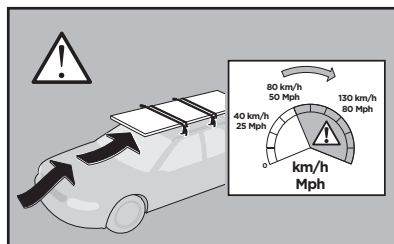
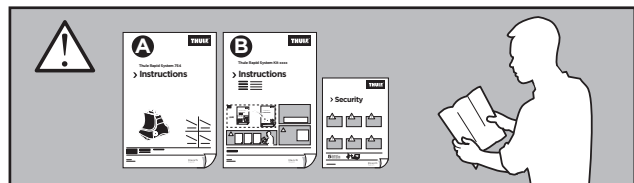


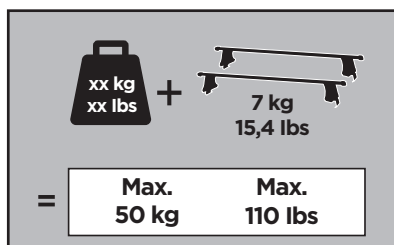

Thule Rapid System Kit 1786

> Instructions

CADILLAC ATS, 4-dr Sedan, 13-

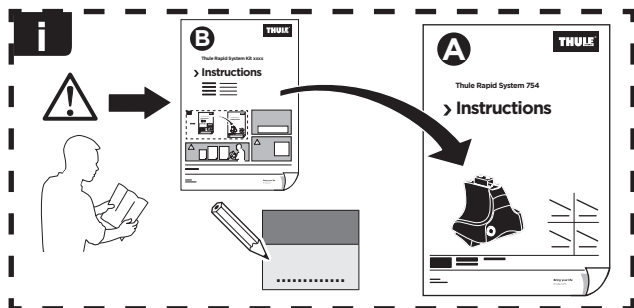

ISO 11154-E


141786
C.20150316
519-1786-01

Herbály Autó www.herbalyauto.hu

Bring your life
thule.com



266 x1





267 x1




331 x1



332 x1



578 x2



921 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
CADILLAC ATS, 4-dr Sedan, 13-	35,5	1006	39 ⁵ / ₈

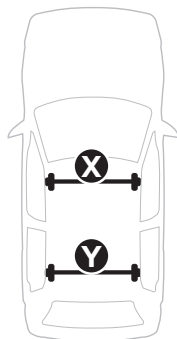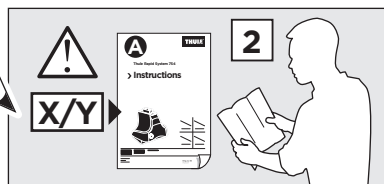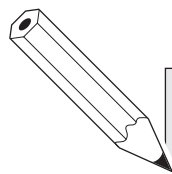


	Y (scale)	Y (mm)	Y (inch)
CADILLAC ATS, 4-dr Sedan, 13-	35,5	1006	39 ⁵ / ₈

2

CADILLAC ATS, 4-dr Sedan, 13-

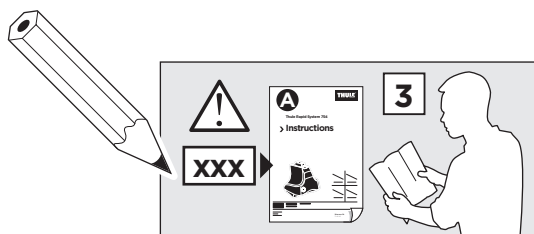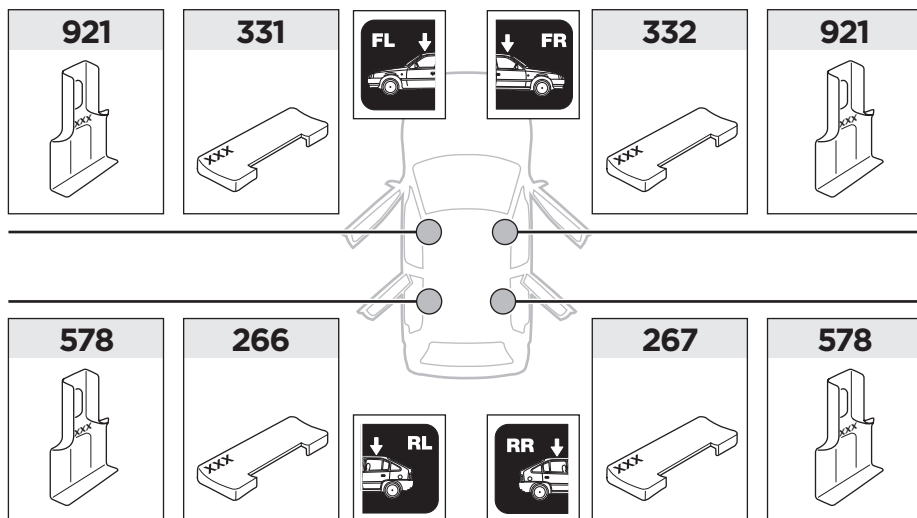

3

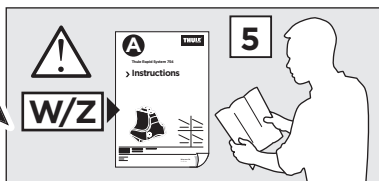

	W (mm)	Z (mm)	W (inch)	Z (inch)
CADILLAC ATS, 4-dr Sedan, 13-	165	700	6 ½	27 ½

