

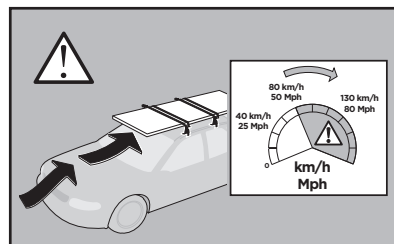
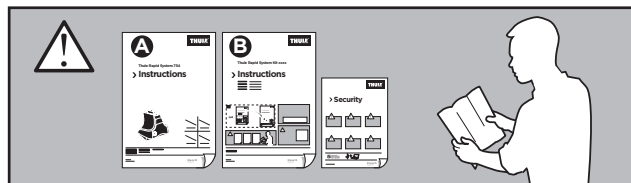


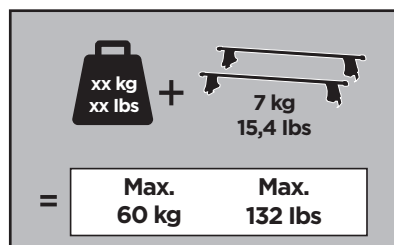

Thule Rapid System Kit 1848

> Instructions

RENAULT Scénic (Mk.IV), 5-dr MPV, 17-

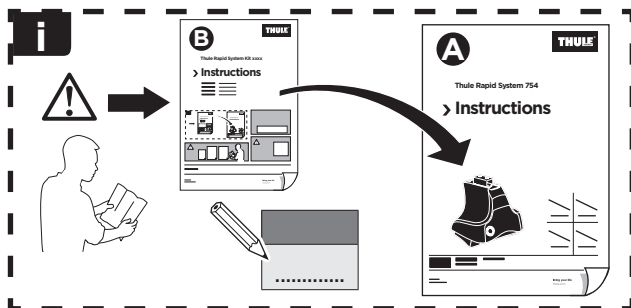

ISO 11154-E

141848

C.20170428
519-1848-02

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



149 x2

191 x1

192 x1



1409 x2

1410 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
RENAULT Scénic (Mk.IV), 5-dr MPV, 17-	51	1161	45 ³ / ₄

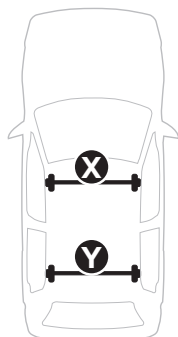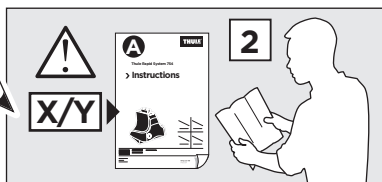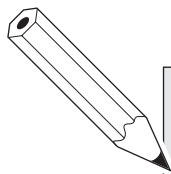



	Y (scale)	Y (mm)	Y (inch)
RENAULT Scénic (Mk.IV), 5-dr MPV, 17-	40	1051	41 ³ / ₈

2

RENAULT Scénic (Mk.IV), 5-dr MPV, 17-

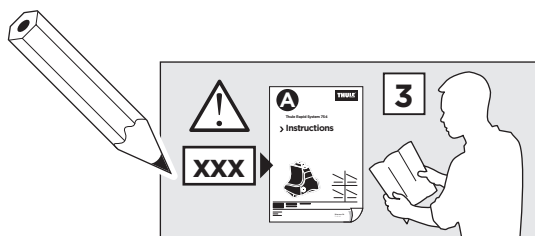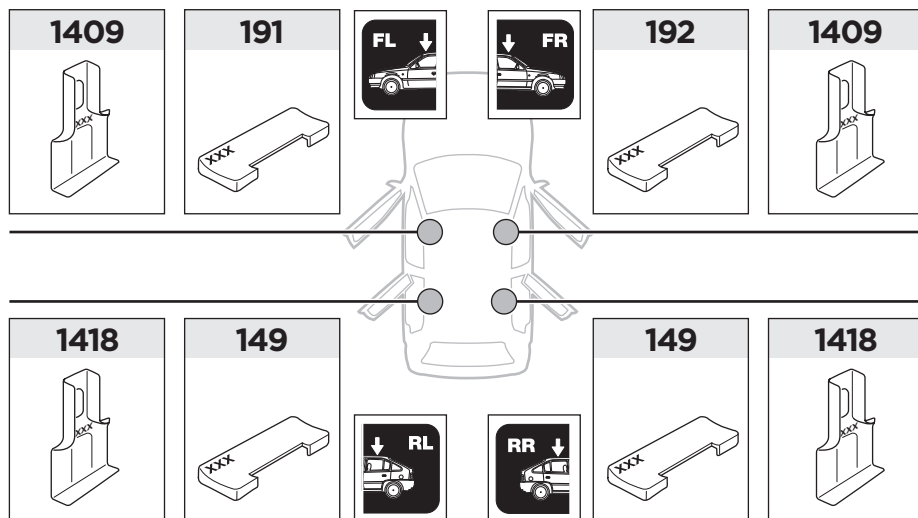

3

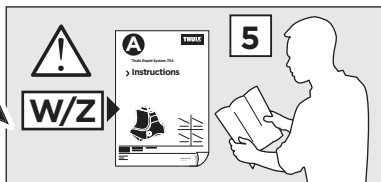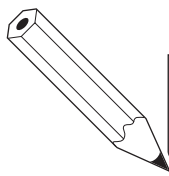

	W (mm)	Z (mm)	W (inch)	Z (inch)
RENAULT Scénic (Mk.IV), 5-dr MPV, 17-	230	730	9	28 ³/₄

