

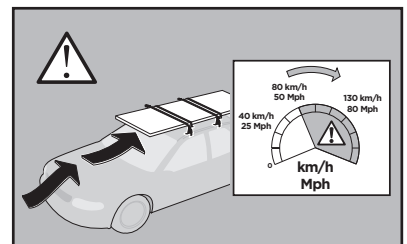
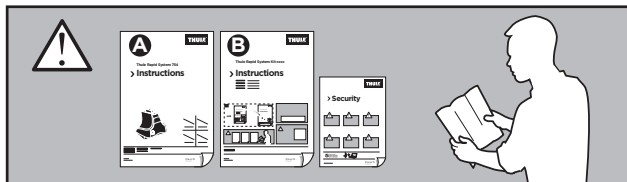


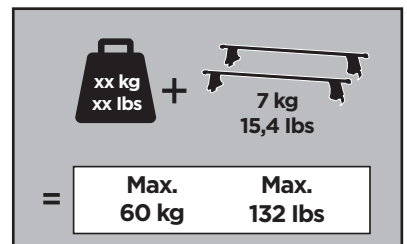

Thule Rapid System Kit 1851

> Instructions

PORSCHE Panamera, 5-dr Hatchback, 17-

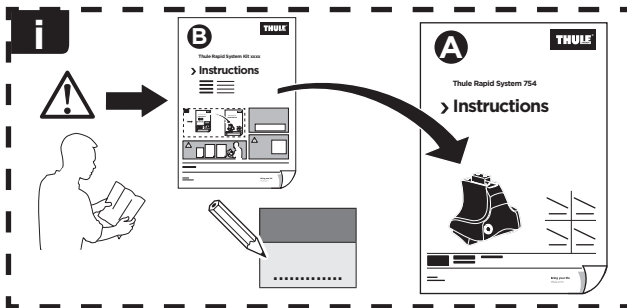

ISO 11154-E

141851
C.20170201
519-1851-01

Herbály Autó www.herbalyauto.hu


Bring your life
thule.com



138 x2 ▶

191 x1 ▶

192 x1 ▶




x1



1407 x1

1408 x1

1411 x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
Porsche Panamera, 5-dr Hatchback, 17-	43,5	1086	42 ³ / ₄

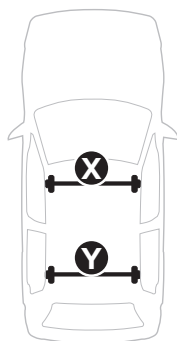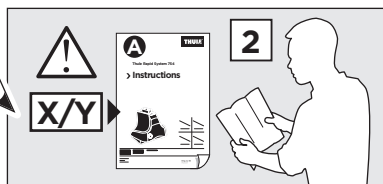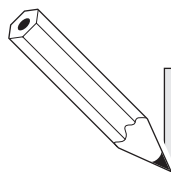


	Y (scale)	Y (mm)	Y (inch)
Porsche Panamera, 5-dr Hatchback, 17-	35	1001	39 ³ / ₈

2

Porsche Panamera, 5-dr Hatchback, 17-

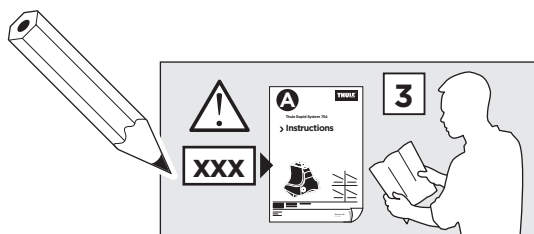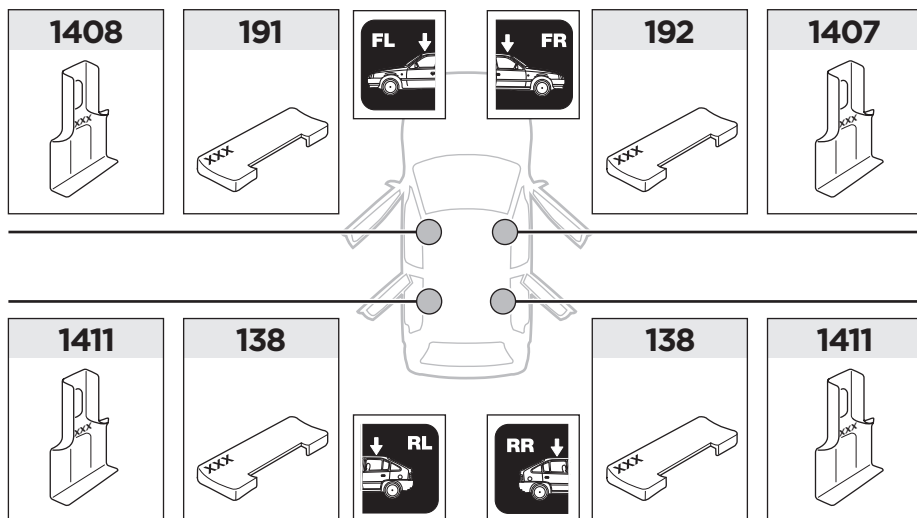

3

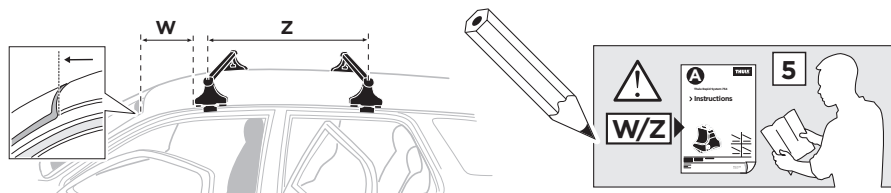

	W (mm)	Z (mm)	W (inch)	Z (inch)
Porsche Panamera, 5-dr Hatchback, 17-	185	755	7 1/4	29 3/4

